

Heritage 231 Owners Manual







WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman boats, we take great pride in producing the finest, most well designed, saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard.

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines

Tommy Hancock and Dale Martin





Heritage 231

Length	22'9"
Beam	<i>8'6"</i>
Aprox dry Weight	2750 lbs
People Capacity	12
Fuel Capacity	103 Gallons
Rear Aerated Livewell	2 x 8 Gallons
Console Cooler	12 Gallons
Draft	14"
Deadrise @ Entry	18 Degrees
Deadrise at Bow	55 Degrees





22'9"





PERFORMANCE BULLETIN

OYAMAHA

 
YPB#: P8_SPT_Heritage231_F200XB_2013-07-19_OCC



Boat Manufactured By: Sportaman Boats - PO Box 2100 - Summerville, SC 29184 843-376-2628 - www.sportamanboatamig.com

RPM	MPH	GPH	MPG
1000	4.7	0.7	6.71
1500	6.5	1.3	5.00
2000	8.0	2.2	3.64
2500	11.2	3.3	3.39
3000	17.5	4.4	3.98
3500	23.5	5.2	4.52
4000	30.0	7.1	4,23
4500	33.5	9.3	3.60
5000	37.9	13.4	2.83
5500	43.7	16.8	2.60
6050	47.0	20.2	2.33

Time to Plane 0-30 MPH



i performed and verthed by Yamaha Applications Eng



	Test Date 7/19/13
Sportsman [®] Heritage 231	
Length	22.9*
Beam	8' 6"
Dry Weight (boat Mr. Pub)	2,750 lbs
Maximum HP	250
Fuel Capacity	103 gal
Weight as Tested	4,159 lbs
F200XB	
Horsepower	200 HP
Induction	EPI
Displacement	163 cu. in.
Weight	469 lbs
Gear Ratio	1.86

ENGINE MOUNTING HEIGHT

Mounting Hole Position	K 0
Ventilation Plate Height	1" Above Boat Bottom

PROPELLER/S

Reliance Series-SD8
14-1/4 × 17
68F-45972-10-00
Polished Stainless Steel

TEST CONDITIONS

3.30

7.39

Number of People	2
Air / Water Temperature (Fahranitani)	60 / 55° F
Elevation (in feet above sea level)	Sea Level
Wind Velocity	0-5 mph

Commenta: Tool weight includes 1/2 tank of fael, 2 tartision, optional T top, safety and lost gear.

Notice to Consumer: This information and table contrained in the Parliamentary Buildein is approximate and subject to many chiman factors and variables. The provised as a guideline only and showed not indext query is a consumption of actual preformance. Now table productions only and showed not bear to be a subject to many chiman factors and table preformation and preformance and the constraints and the subject of the subject of the subject of the subject of the backs exclusion weight, which and write isocietations, intrajection, hormality, simulation, bottenia parts, and optimism distribution of the subject relation. The document of constraint weigh tables have been backers the subject of the subject

For mere Information Yanah Marc Gorganano, U.B.A. OKIK Dhrison, Kallera Group 12/9 Chastain Raad HW Konnesan, GA 30144 - (300) 85 YAMAHA For other Partomance Buttetta, visit www.gamaha motor.com.

© 2013 Yamaha Motor Corporation, U.B.A. All rights reserved.






PERFORMANCE BULLETIN

YPI54: P8_SP1_Hentage231_F258XCA_2018-08-01_OOC



EPORTEMAN Rost Manufactured By: Spontemen Boate - PO Box 2100 - Summersille, SC 29484 843-378-2528 - www.sportamaritextamlg.com

RPM	MPH	GPH	MPG
1000	6.3	1.2	4.08
1500	75	22	3.41
2000	10.2	3.6	2.83
2500	17,4	5.0	3.48
0000	25.0	6.3	4.02
3500	32.1	87	3.69
4000	36.8	11.4	3.25
4500	42.5	14.6	2.91
5000	45.8	18.2	2.57
5500	5 <u>2,</u> 1	23.4	2.25
5900	55.0	24.1	2.28

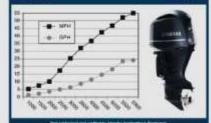

ERITAGE

ØYAMAHA

	Test Date 6/1/13
Sportsman* Heritage 231	
Length	22 97
Beam	85
Dry Wright (bus st. Po)	2,750 lbs
Maximum HP	300
Fuel Capacity	103 gal
Weight as Tested	4,087 ibs
F250XCA	
Horsepower	250 HP
Induction	EP1

caon	
lacement.	4.2 L
es.	562 bs
Ratio	1.75

ENGINE MOUNTING HEIGHT

enting Hole Position	4
dilation Plate Height	1* Above flast Bottom

PROPELLERVS

Hore Inde Dispi

Weigi

Gen

Me Ven

140 Die Ve Pr

THEN	Saliwater Series 2-808
ameter/Pilch	15-144 x 18
maha Part #	6CE-45970-00-00
opeller Material	Polished Stainless Steel

TEST CONDITIONS

Number of People	2
Air / Water Temperature (Favanati	90/90*F
Derverfühlten der inner andere sons laverta	Bea Level
Wind Velocity	5-10 mph

Comments: Test weight includes 1/2 tank of fuel, 1 batters, optional hant top, safety and lead gear

Notice to Granumer: The internation and bits contained in the Perturbation Eulerin is approximate and a Append to many otherest futures and materials and the postellar as a guitable only and housing the interface one respectively of adapting performance. You four is performance may be ablence to be ablence on a sequence of the sequence of the sequence of the sequence base's status weaks, and and weak conditions, surgestatus, housing, and weak and sequence of the sequence of the sequence of the sequence of the sequence and sequence of the sequence of the sequence of the sequence of the sequence and sequence ablence of the sequence of the sequence of the sequence ablence of the sequence of the sequence of the sequence of the sequence and the sequence ablence and the sequence ablence of the sequence of the sequence of the sequence ablence of the sequence ablence and the sequence ablence of the sequence ablence and the sequence ablence ablence ablence and the sequence ablence ablence

For more information **Networks Mater Corporation, U.E.A** OEM Duraton, Marina Group: 1275 Chartely Read Nor Extension GA bits on - month do transmiss For other Performance Bulletine, vielt www.pamales.ecoter.com.

@ 2018 Yamaka likely Corporation, U.S.A. All rights reserved.

PERFORMANCE BULLETIN © YAMAHA


YP6#: P8_SPT_Heritage231_F256XA_2013-07-19_OCC



SPORTSMAN Bost Manufactured By: Sportamen Boata - PO Box 2100 - Sammonitile, SC 25484

843-376-2626 - www.sportsmanbearantg.com

RPM	MPH	GPH	MPG
1000	52	3.2	4.33
1500	7.3	1.9	3.84
2000	8.6	8.1	2,77
2500	13.2	4.8	2.75
3000	20.0	6.8	3.03
\$500	29.2	8.0	3.65
4000	35.7	10.4	3.43
4500	40:3	12.3	3.20
5000	48.2	14.9	3 10
5500	50.9	17.4	2.93
5800	52.9	22.1	2.39
to Plane I MPH			39 66

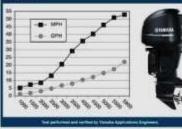

Sportsman [®] Heritage 231	
Length	22'9'
Beam	5.6
Dry Weight (bacht: Pub)	2,750 lbs
Maximum HP	250
Fuel Capacity	103 ga
Weight as Tested	4,346 lbs

Test Date 7/19/13

E250XA

250 HP	Horsepower
871	Induction
331	Displacement.
608 (bs	Weight
2.00	Gear Ratio
	NAMES PROPERTY.

ENGINE MOUNTING HEIGHT

Mounting Hole Position	43	
Ventilation Plate Height	1* Above Boat Bottom	

PROPELLER/S

Series	Baltwater Series I-8D8	
Diameter/Pitch	15 x 21	
Vamaha Part #	6CE-45872-00-00	
Propeller Material	Polished Stainless Steel	

TEST CONDITIONS

Number of People	2
Air / Water Temperature (Falveries)	56/60°F
Elevation on text above sea levels	Gen Level
Wind Velocity	5-10 mph

Summerity Test wordst excludes Minaria of hall, 2 bettering represed likes safety and her gene

Hence to Construction. This information area data contrasted in this for homory efficient a significant we will be a set of the set

For more information Yamaha Motor Gorporatien, U.E.A. DEM Dyssen, Marine Group 1210 Chartoin Peac toir Hotomator, the february subtry the memorana. For other Performance Bulleline, vielt www.yomaha-melor.com.

C 3012 Youruana Motor Deeperation, U.E.A. All rights resembled



NMMA Certified

Sportsman Boats are certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further and meets the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed and thoroughly tested to meet or exceed these standards. For more information on the 2014 model year standards, you may visit <u>http://www.nmma.org/certification/programs/boats/</u> for more details.



Hull Number / Registration

Sportsman has a permanent record of your boat, which was documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). The HIN is located on the starboard side of the transom, just under the Rub Rail. When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.



Please fill out the following information. We recommend keeping one copy in your personal records and one copy with your owner's manual. This information will be important to you should you need to contact your Dealer or Sportsman Boats for technical assistance and/or service.



BOAT INFORMATION / SPECIFICATIONS		
HULL SERIAL #:		
DELIVERED:		
REGISTRATION #:		
WEIGHT:		
ORMATION		
MODEL:		
# OF BLADES:		
MODEL:		
OPTION PACKAGES		
MODEL:		
GVRM:		
SPORTSMAN		
PHONE:		
REPRESENTATIVE:		
ADDRESS:		
	HULL SERIAL #: DELIVERED: REGISTRATION #: WEIGHT: ORMATION MODEL: # OF BLADES: MODEL: OPTION PACKAGES OPTION PACKAGES MODEL: SPORTSMAN PHONE: REPRESENTATIVE:	



BOATING SAFETY REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

JPD ANDSINA

FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.

SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

VISUAL DISTRESS SIGNALS

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.


LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.





Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintaining your boat are not followed. Therefore, your Sportsman manual has been written to include a number of safety instructions and notices in order to help you operate your boat safely and maintain it. These instructions are in the form of **WARNING**, and **DANGER** statements. They are defined as follows:

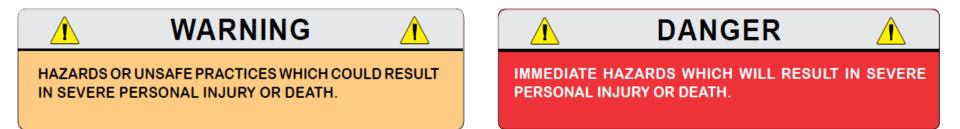

Please become familiar with the location and content of the Caution, Warning and Danger Labels found on your boat.

 




Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alerts symbols are used to show potential personal injury hazards.

Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

A WARNING



A WARNING

ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. DO NOT APPROACH OR USE LADDER WHEN ENGINE IS RUNNING.

A WARNING

ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. SHUT OFF ENGINE WHEN NEAR PERSONS IN THE WATER.

A DANGER

Carbon monoxide (CO) can cause brain damage or death.

Engine and generator exhaust contains odorless and coloriess carbon monoxide gas.

Carbon monoxide will be around the back of the boat when engines or generators are running.

Move to fresh air, if you feel nausea, headache, dizziness, or drowainess.

Every precaution has been taken to reduce the risks associated

With death, possible injury and damage from fire and explosion. Your own precaution and good maintenance procedures are necessary in order to enjoy safe operation of your boat.


MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPONENTS

Sportsman Boats Mfg. Summerville, SC

A WARNING


AVOID SERIOUS INJURY OR DEATH FROM FIRE OR EXPLOSION RESULTING FROM LEAKING FUEL. INSPECT SYSTEM FOR LEAKS AT 'SAST ONCE A YEAR.



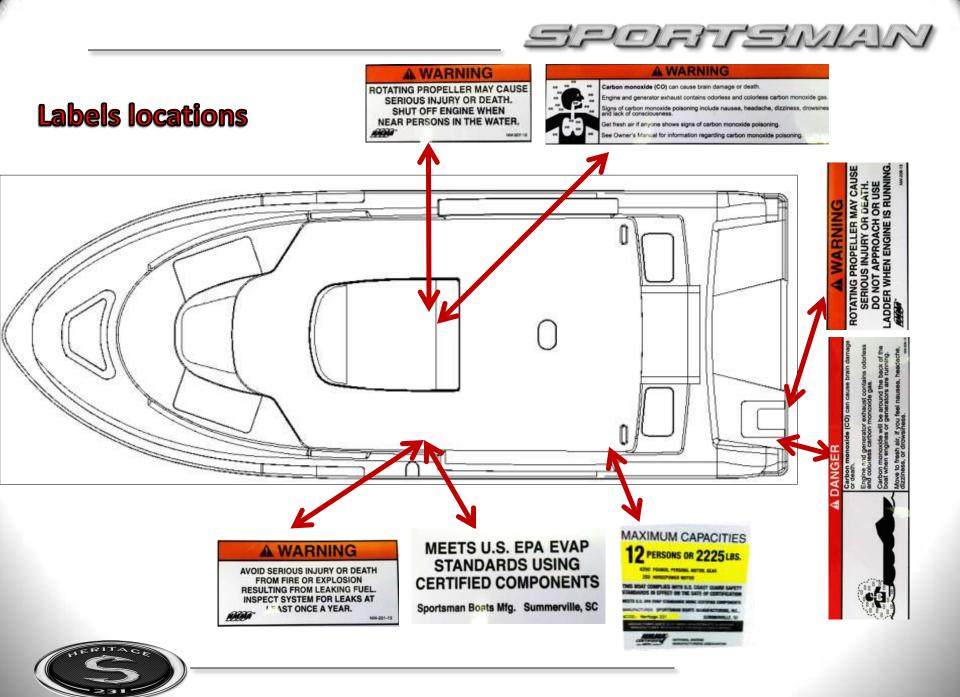



231 has a 12 Person Capacities, below shows the seating locations

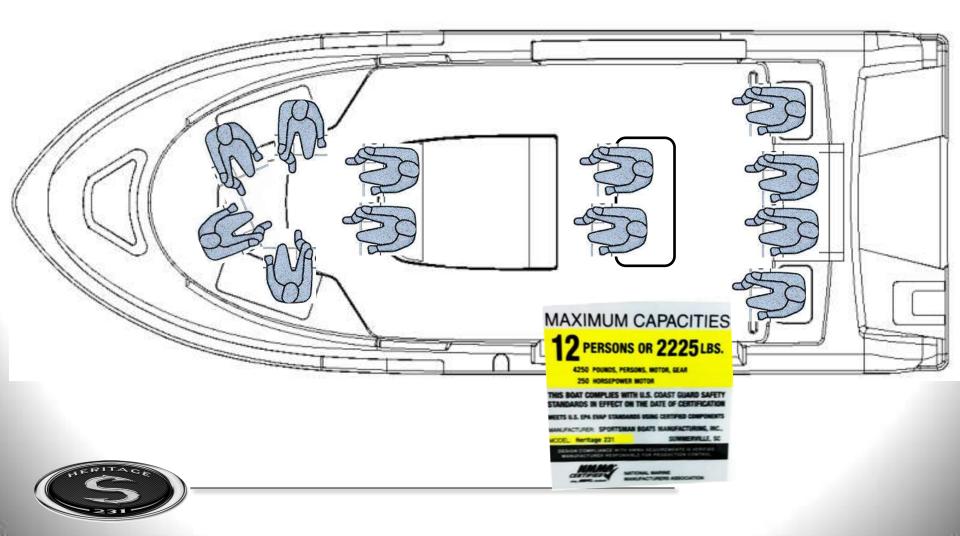




Your electrical system:







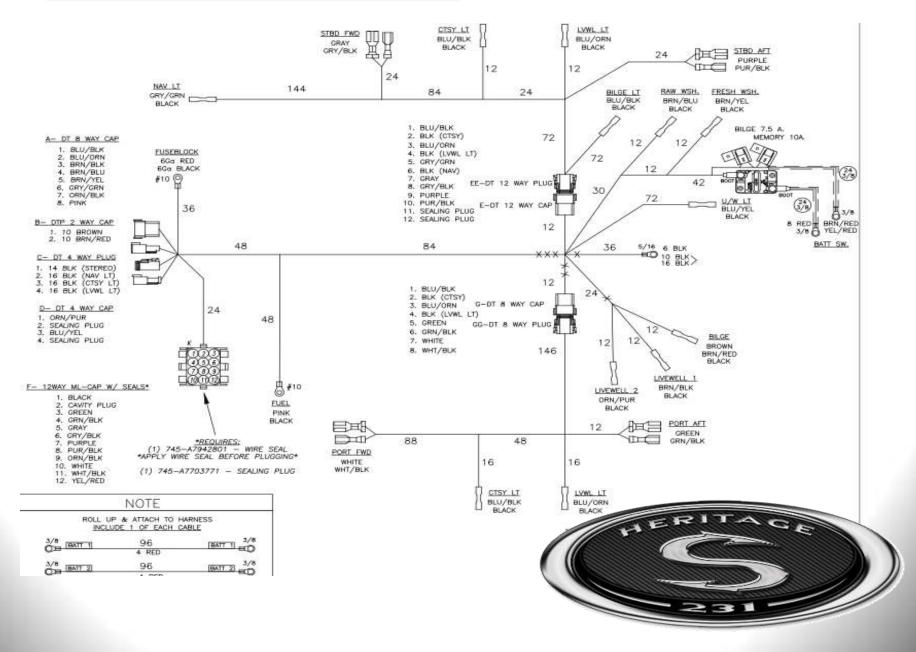


Bilge Pump

Located on the hull bottom at the stern of your boat. Water is pumped out at a through hull fitting located at the starboard aft of the hull. Pump may be accessed by lifting the total access hatch. You may turn your bilge pump on manually with your bilge switch located on the switch panel at the helm of your boat. Once water in the bilge area reaches a certain level the float is engaged and the bilge pump is activated automatically.

SPOLATISMA

Bilge pumps are designed to remove excess water only. They are not intended to prevent rapid accumulation of on-board water due to rough weather, hull damage, or other unsafe navigational conditions.

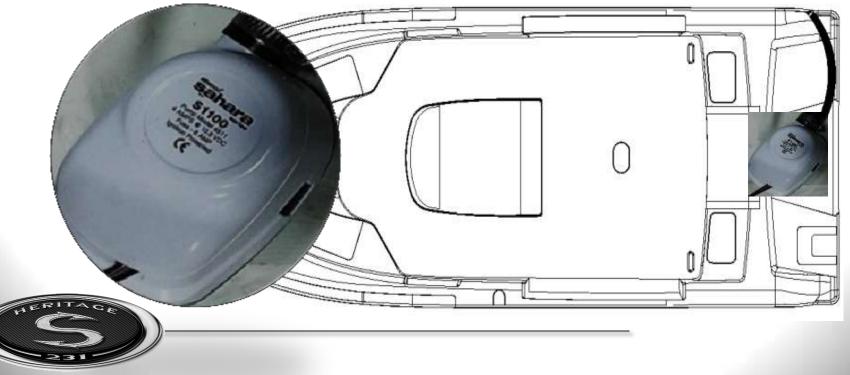

___ SPORTSMAR

All-round/Anchor light: Is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 225 degrees and fixed to show from anywhere ahead, to just behind the beams of the vessel.

Sidelights: a green light on the starboard (right) side, and a red light on the port (left) side of a vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees, and is fixed to show from ahead to just behind the beams of the vessel on its respective side.


The Nav/Anc switch is a 3 position switch that controls

the running lights.

*NAV position will turn on the red and green navigation lights, and the white all-round light are turn on for night driving.

*ANC turns on the all-round light only for night anchoring, do not operate the boat in the anchor position

*Off is in the center position

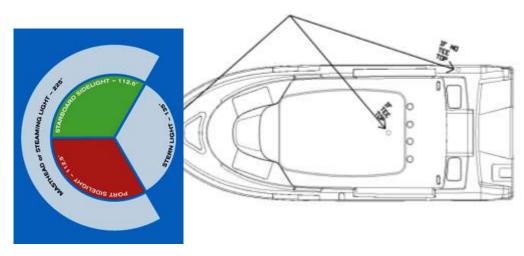


Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on





Raw water washdown is standard on your new 231. Rinsing your boat immediately with a powerful water jet washdown makes a fine addition to almost any boat.


The raw water system supplies water by a hose connected to a pump with a shut off valve on your high speed pick up in your bilge compartment. The bottom hose on the pickup is for the raw water system. The pump can easily be accessed when you open your total access hatch. You can operate your washdown by opening the valve handle on the high speed pick up in the bilge area of your boat. Then turn on your switch labeled washdown on the *helm of your boat. The washdown outlet* can be found under the starboard gunwale.

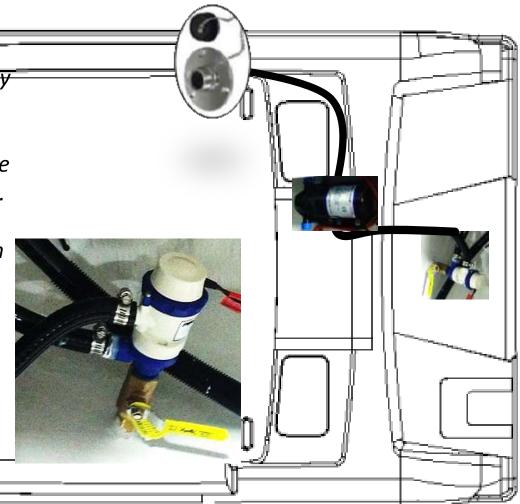



SPOLATSMAN

Your 231 comes with (2) 8 gallon *livewells. The pump is located next* to the bilge in the hull of your boat. *Open the total access hatch for easy* access. You may operate your livewells by opening the high speed pickup valve in the bilge area of your boat. Then turn on your switch labeled Livewell 1 at the helm of your boat. This will fill both livewells. Each livewell can be controlled separately by turning the fill valve in the livewell to the on or off position. With the stand pipe installed in your livewell. Water will not exceed a full level. Also, lights are installed in each livewell for Illumination by turning on the switch at the dash.

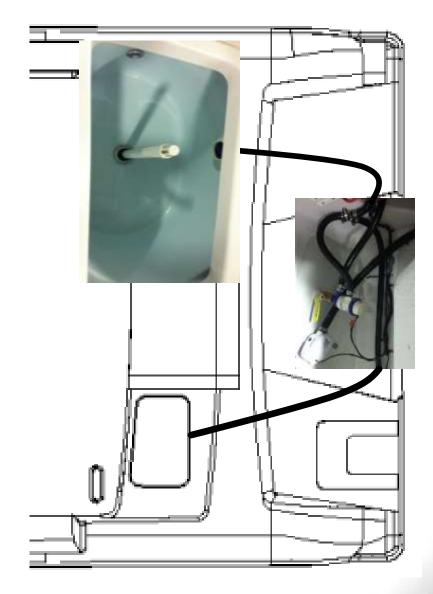





Trim Tabs are Standard with your 231. They are attached to the bottom edge of the transom. When the helm control is pressed, the trim tabs move into position. Water-force on the trim tab surface creates upward pressure, raising the stern and lowering the bow. Trim Tabs improve the performance of your boat in a much wider range of weight, weather and water conditions.

The top portion of the Left switch is marked Port/Bow Down. Pushing this switch deploys the right tab and its movement is indicated by the Left set of the red LED's. All LED's lit is down. The other 3 switches, operate in the same manner, for port and starboard, bow up and bow down. These switches can be pushed individually. Simultaneously or cross controlled, as appropriate.





SPORTSMAN

Your 231 comes equipped with a Infinity PRV250 marine receiver. This compact receiver is capable of Bluetooth audio streaming and features AM/FM radio. Built to last in the harsh marine environment, the Infinity PRV250 incorporates a waterproof faceplate and a 50W by 4 amplifier. The PRV250 features USB input for USB drive playback, auxiliary input and one pair of RCA output. While in Bluetooth mode, boaters can control volume and track up to 30-feet away.

The 231 comes with 4 marine grade Infinity speakers. 2 of your speakers are in the bow of your boat. If you boat has a fiberglass T-Top your aft speakers are installed in the tee top.











The gasoline fuel system consists of a fuel tank, fuel tank vent, anti-siphon valve, engine fuel supply line, fuel fill, with a carbon canister. Your boat contains a new EPA certified fuel system. The system prevents spit back when filling the tanks and lowers the out gassing emissions through the tank and vent

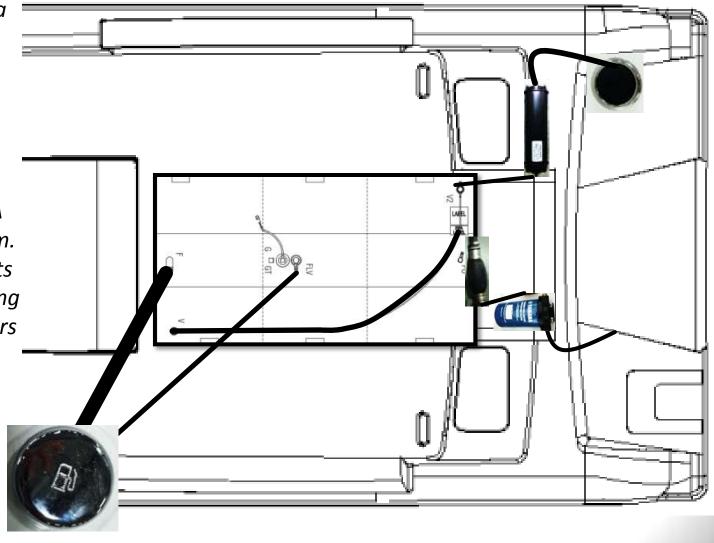



Refueling vapors bypass canister and vent through a vented fill to the fuel pump. This line is then closed with a sealed cap after refueling and diurnal vapors are forced through the canister. This approach provides the least restriction during refueling.

Working together, the NMMA and the ABYC have proposed an industry specification for installing carbon canisters and pressure relief systems, which the EPA and CARB have accepted. The actual, detailed ABYC specification is in development. Builders will be asked to demonstrate that their products are built in accordance with these specifications in order to obtain NMMA certification. This will demonstrate to the EPA & CARB that a boat is in compliance. Representatives from boat & engine builders, tank, fill, valve and canister manufacturers, test labs and the U.S. Coast Guard are among the authors of the new specifications.

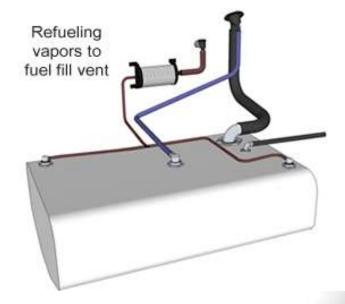


ゴークロネカイーゴルルネ





Fresh water is an option on the 231, but comes standard with both the Platinum and Sport packages

- The freshwater fill deck fitting is marked with a blue wavy line, located on the port stern of your boat.
- Pressurize the freshwater system by turning On the freshwater pump switch on the helm.
- •The freshwater pump switch is marked ACCESSORY 2 on the helm switch panel.
- Turn Off the freshwater pump switch when your boat is not in use or when the freshwater tank is empty.
- Your 13 gallon tank is lactated on the port side of the motorwell. The pump is mounted on the deck. Both the pump and tank can easily accessed when opening the total access hatch
 Inspect and clean the freshwater filter often (the filter is located on the freshwater pump).
 If your boat is to be left unattended for a long period of time, pump the freshwater tank dry to prevent stored water from becoming stagnant and distasteful.

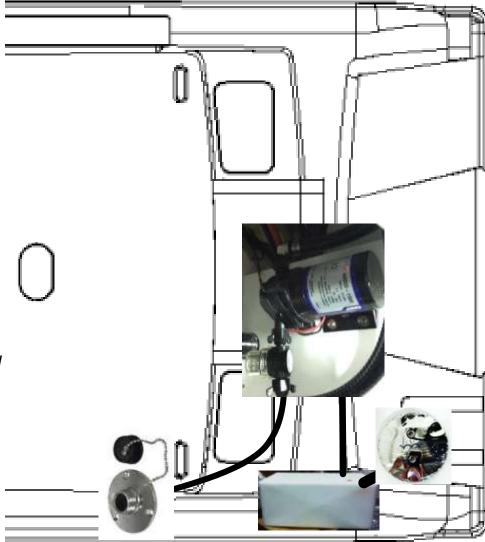





OPTIONS: Fiberglass T-Top With LED Lighting Included In The Platinum Package



Fiberglass T-Top option comes with the Platinum package. The T-Top switch turns on the 3 blue courtesy lights. The SPREADER switch operates the 2 back spreader lights and the front spreader light. The switch on the map light may be turned one way for a red or the other way for a white light.

Deluxe Soft T-Top option comes with the Sport package. The T-Top switch turns on the blue courtesy light. The SPREADER switch operates the front and back spreader light.



Deluxe Soft T-Top With LED Lighting Included In The Sport Package

DETISINA

Underwater light Option comes with both the Platinum and the Sport Packages, they can be operated with the ACCESSORY 1 switch. These High-Intensity LED Underwater Lights are totally waterproof. A broad flood light effect is created by the engineered optics of the convex light face.









Rules When Encountering Vessels

There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- •Meeting: you are approaching another vessel head-on
- •Crossing: you are travelling across the path of another vessel
- •Overtaking: you are passing or being passed by another vessel

<u>When Crossing</u>: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.


<u>When Meeting Port-to-port</u>: Continue on course. The same holds true for meeting starboard-tostarboard.


<u>When Meeting Head On</u>: As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

I BLAST
 I

<u>When Overtaking Another Boat</u>: The boat being overtaken is the privileged vessel. Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use on blast to pass on the right, and two blasts to pass on the left.

<u>When Being Overtaken</u>: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.

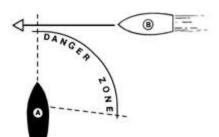

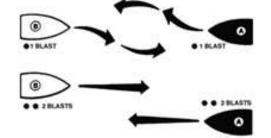

Product Changes

Sportsman is committed to our boats and their development. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

<u>Service</u>

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. **The boat owner is responsible for delivering the boat to the dealer for warranty service**. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. **Sportsman will not reimburse owners for unauthorized warranty work**.

Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.



SPORTSMAN BOATS LIMITED WARRANTY

<u>Ten-Year Hull Limited Warranty:</u> This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term *"Hull"* shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term *"Structural Hull Defect"* shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

<u>One Year Nonstructural Limited Warranty</u>: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term *"Nonstructural Defect"* shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

<u>Registration and Transfer of Limited Warranty</u>: Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.

EXCLUSIONS

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "*Exclusions*"

1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;

2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;

3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;

- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products

9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents; 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term *"Commercial Purposes"* shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);

11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;

12)Machinery, equipment and accessories not installed by Sportsman;

13) Condensation of gauges;

14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";

15) Any representation relating to the speed or weight of any part or component of the boat;

16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;

17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;

18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or

19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat. Please contact us at any of the following:

Sportsman Boats Manufacturing, Inc. 113 Issac Way Summerville, SC 29483

Office:843-376-2628 Fax: 843-376-2636

P.O. Box 2100 Summerville, SC 29484 Email: <u>sales@sportsmanboatsmfg.com</u> Visit:www.sportsmanboatsmfg.com

