Owner's Manual and Quick-reference Guide 2017

SYANAHA

300

MASTERS

Sedraman

Condition (

Table of Contents



Topic

Introduction	3
Important Information	4
Specifications	5
Overall Dimensions & Terminology	6
Features & Performance	7
Certifications & Registrations	11
Boating Safety	12
Electrical & Plumbing Systems	18
Fuel System	29
Boating Navigation Rules	34
Warranty & Services	35
Contact Information	38





WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard.

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines, Tommy Hancock and Dale Martin



Important Information

DELIVERED:
REGISTRATION #:
WEIGHT:
RMATION
MODEL:
OF BLADES:
MODEL:
MODEL:
MODEL: GVRM:
GVRM:
GVRM: SPORTSMAN
GVRM: SPORTSMAN PHONE:
GVRM: SPORTSMAN




We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.



Length Overall	24'4"
Beam	8′5″
Draft	14″
Deadrise at Transom	15°
Approximate Usable Fuel Capacity	71 gal.
Approximate Dry Weight	2650 lbs.
People Capacity	10 persons
Maximum Engine Horse Power	300 HP (4 Stroke)



Overall Dimensions & Terminology

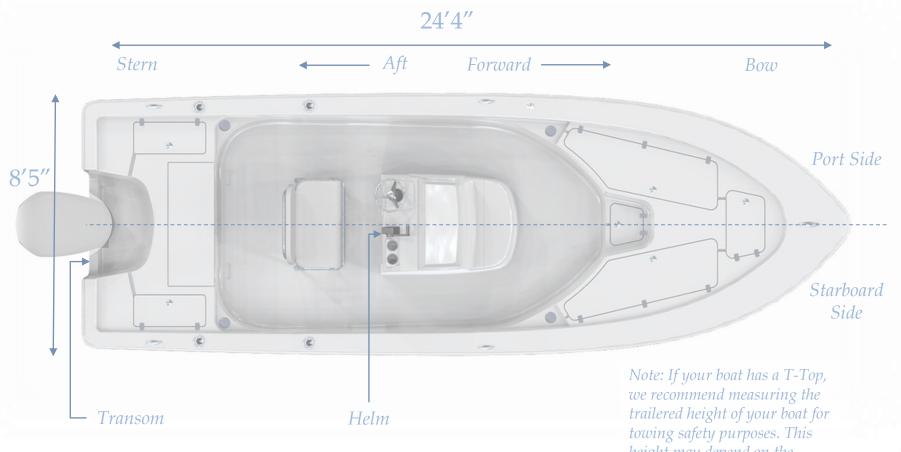

towing safety purposes. Thi height may depend on the specific trailer being used.

STERS



Feature Packages

-

_

-

-

_

_

_

_

-

-

_

-



Color Selection

Powder Coat - Driftwood - Sea Mist Green - Ice Blue - Silver Cloud Selection Island Blue Steel Blue - Jet Black - White - Black - White 10 Year Hull Warranty Console Grab Rail Large Console Access with 71 Approx. Usable Console Windscreen Dry Storage and Battery Gallon Fuel Tank Console Footrest (with Storage 9" Simrad GPS & Thru Glove Box & Storage Bin) Lockable Console Storage -Hull Transducer Dash Panel Cover NMMA Certified 12 Volt Power Plug **Deluxe** Leaning Post **Pull-up Cleats** _ 4 Flush-mounted Gunwale (with Flip-up Bolsters) **Recirculating Livewell** -Rear Fold-up Bench Seat Rod Holders **Dual Battery Switch** 6 Vertical Console Rod Extra Large Forward (with Lockable Storage) Holders (if no T-Top) Rear Total Access Hatch Storage Box 2 Rear Aerated Livewells Grip Tex Yacht 6 Stainless Steel Cup Holders --Style Non-skid (25 Gallon) Stainless Steel Drain Covers _ Front Seat Console Horn Stainless Steel Propeller -Livewell (12 Gallon) Hydraulic Tilt Steering Stainless Steel Rub Rail _ -All White Hull **Rub Rail Navigation Lights** Stainless Steel Steering Wheel -_ Anchor Storage Interior LED Lighting (with Knob) **Camel Cushions** Swim Platform & Ladder Package Cast Net Storage Box Large Box Casting Deck (with-Trim Tabs with LED -Cockpit Drain Sumps Lockable Storage for 10 Rods) Indicator (Self-bailing Cockpit) Large Rear Casting Deck **Trolling Motor Plug** -

	$\boldsymbol{\nu}$				
re Package	s (co	nt'd)	Stereo U	Ipgrade	247
0		um Package	 MB Quart S Four Chann 8" Amplifie 		
Irchased the Masters Platinum Packages, Platinum Package additional to the es previously listed.	 Comp Fiberg LED I Freshv Helm Light 	pass glass T-Top with Lighting water Wash-down	 Misters Porta Potty Powder Co Raw Water Spray Shiel Stereo with Underwate 	oating : Wash-down ld 1 4 Speakers	Sport Package Compass Freshwater Wash-down Raw Water Wash-down Stereo with 4 Speakers Deluxe Top with LED Lighting Underwater Lights
ble Options		E:1 D (D (/D	````		
io with Antenna (8')	-	Fish Box (Port/Bo	,		aw Water Wash-down
scan Transducer	-	Freshwater Wash	-down		eaStar Jack Plate
75M Transducer Upgrad		Gull Wings	1		econd 9" Simrad
ad Add-on	-	Gunnel Rod Hold	lers		2″ Simrad
ather	-	Helm Pad			ki Tow Bar
harger	-	Fiberglass Leanin			lide-out Cooler
ip Ghain		with Tackle Center	er		pray Shield
ing Chair	-	Light Hull Color	D1		tereo with 4 Speakers
nion Set	-	Livewell Leaning			ilt Optimus Steering
	-	Matching Unders	oue Color		ranshield Shipping Cover
Cover	-	Misters			iberglass T-Top with LED Lighting
l Color (Black or Steel Bl	,	Mooring Cover			-Top Cargo Net
n Chair Leaning Post	-	Powder Coating	n Cla Toru Par		nder Leaning Post Tackle Storage
roc Seat on	-	Powder Coating of	on SKI IOW Bar		nderwater Lights
Ecaning Post p with LED Lighting	-	Porta Potty 4G Radar		- /\	/hite Cushions

Featur

Note: If you pur 247 Sport or P the Sport and features are a standard features

Availab


- VHF Radio -
- Structuresc -
- Chirp B175 -
- GoFree iPa -
- Sirius Weat -
- Battery Cha -
- Bimini Top -
- Bow Castin -
- Bow Cushie -
- Compass -
- Console Co -
- Dark Hull _
- Dual Helm -
- Dual Llebro _ Fiberglass
- Deluxe Top -

Sportsman



Major Features



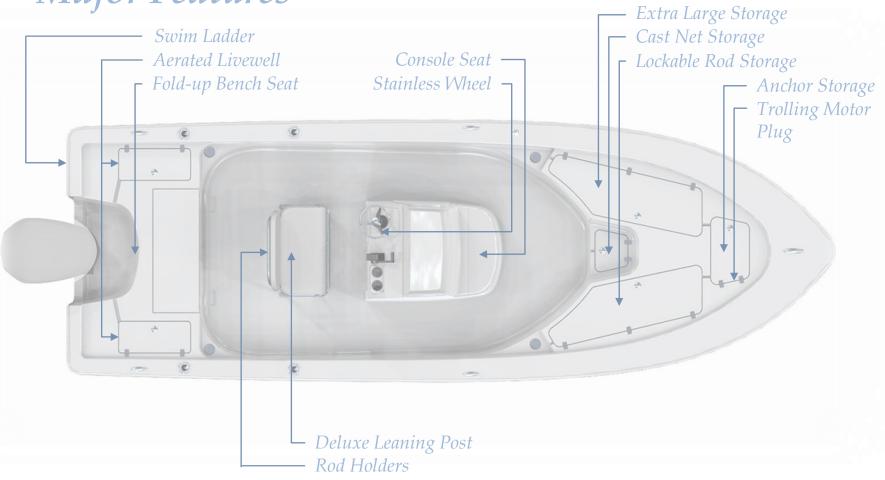



250 HP

PERFORMANCE BULLETIN

YPB#: PB_SPT_Masters247_F250XA_2013-06-03_BAY



SPORTSMAN Boat Manufactured By: Sportsman Boats - PO Box 2100 - Summerville, SC 29484 843-376-2628 • www.sportsmanboatsmfg.com

RPM	MPH	GPH	MPG
1000	5.6	1.3	4.31
1500	7.5	1.9	3.95
2000	9.3	3.0	3.10
2500	14.0	4.0	3.50
3000	22.1	5.1	4.33
3500	28.6	6.4	4.47
4000	32.7	8.5	3.85
4500	37.4	11.3	3.31
5000	41.4	14.2	2.92
5500	45.5	16.9	2.69
5950	51.4	23.3	2.21



Sportsman [®] Masters 247	
Length	24' 4"
Beam	8' 5'
Dry Weight (Boat Mfr. Pub)	2,750 lbs
Maximum HP	300
Fuel Capacity	72 ga
Weight as Tested	3,988 lbs
F250XA	
Horsepower	250 HF
Induction	EF
Displacement	3.3 (
Weight	608 lbs
Gear Ratio	2.00
ENGINE MOUNTING HEIGHT	
Mounting Hole Position	#2
Ventilation Plate Height	1" Above Boat Bottom
PROPELLER/S	
Series	Saltwater Series II-SDS
Diameter/Pitch	15-1/4 x 19
Yamaha Part #	6CE-45970-00-00

YAMAHA

Test Date 6/3/13

Polished Stainless Steel

TEST CONDITIONS

Propeller Material

Cnartaman[®] Masters 247

Number of People	2
Air / Water Temperature (Fahrenheit)	75 / 80° F
Elevation (in feet above sea level)	Sea Level
Wind Velocity	0-5 mph

Comments: Test weight includes 1/2 tank of fuel, 2 batteries, safety and test gear.

Notice to Consumer. The information and data contained in this Parlamence Bullatin is any Notice to Consumer: The information and data contained in this Performance Buildin a approximate of an advanced to make the temporal advanced temporal and should the main the information of the advanced temporal temporal advanced temporal advanced temporal tempora

For more information Yamaha Motor Corporation, U.S.A. OEM Division, Marine Group 1270 Chastein Road NW Kennesaw, GA 30144 • (800) 88-YAMAHA For other Performance Bulletins, visit www.yamaha-motor.com

SPORTSMAN

© 2013 Yamaha Motor Corporation, U.S.A. All rights reserved

PERFORMANCE BULLETIN

300 HP


YPB#: PB_SPT_Masters247_F300XCA_2013-06-03_BAY





RPM	MPH	GPH	MPG
1000	5.8	1.3	4.46
1500	7.8	2.2	3.55
2000	11.2	3.4	3.29
2500	20.5	5.0	4.10
3000	27.3	6.3	4.33
3500	33.0	8.5	3.88
4000	37.6	11.5	3.27
4500	42.7	15.5	2.76
5000	47.2	19.4	2.43
5500	51.7	22.8	2.27
5950	55.5	25.9	2.14

 0-30 MPI



Note: This is posted on our website at

http://sportsmanboatsmfg.com/masters-247-bay-boat/



Test Date 6/3/13

Sportsman [®] Masters 247	
Length	24' 4"
Beam	8' 5"
Dry Weight (Boat Mfr. Pub)	2,750 lbs
Maximum HP	300
Fuel Capacity	72 gal
Weight as Tested	4,241 lbs

F300XCA

Mou

Ven

Horsepower	300 HP
Induction	EFI
Displacement	4.2 L
Weight	562 lbs
Gear Ratio	1.75

ENGINE MOUNTING HEIGHT

unting Hole Position	#2
ntilation Plate Height	1" Above Boat Bottom

PROPELLER/S

Series	Saltwater Series II-SDS
Diameter/Pitch	15-1/4 x 19
Yamaha Part #	6CE-45970-00-00
Propeller Material	Polished Stainless Steel

TEST CONDITIONS

Number of People	2
Air / Water Temperature (Fahrenheit)	75 / 80° F
Elevation (in feet above sea level)	Sea Level
Wind Velocity	0-5 mph

Comments: Test weight includes 1/2 tank of fuel, 2 batteries, optional hard top, safety and lest gear

Notice to Consumer: The information and data contained in this Performance Bulktin is a and subject to many different factors and variables. It is provided as a guideline only and should not be relied upon as representative of actual performance. Your boat's performance may be different than the information contrained in this Performance Builten due to various factors, including you them the information contained on this Performance Bulketin due to wrisking letters, let-both schalt weight wird and weight conducts, impressions, a mitigation, and a schalt sc ion with your deale

For more information Yamaba Motor Corporation, U.S.A. OEM Division, Marine Group 1270 Chastain Boad NW Kennesaw, GA 30144 • (800) 88-YAMAHA For other Performance Bulletins, visit www.yam

© 2013 Yamaha Motor Corporation, U.S.A. All rights reserved.

Certifications & Registrations



NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit <u>http://www.nmma.org/certification/boats</u>.

Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). **The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail.** When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.



Boating Safety



LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.


VISUAL DISTRESS SIGNALS

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.





Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:

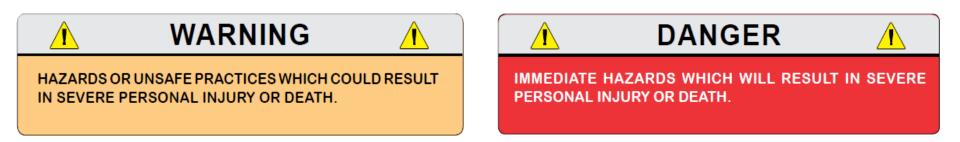


Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.





 Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.





Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.


If your label is damaged. Please call Sportsman's parts department for replacement stickers.






Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

888 888 888 888 888 888 888 888 888 88	Carbon monoxide (CO) can cause brain damage or death. Engine and generator exhaust contains odorless and coloriess carbon monoxide gas. Carbon monoxide will be around the back of the
	boat when engines or generators are running. Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

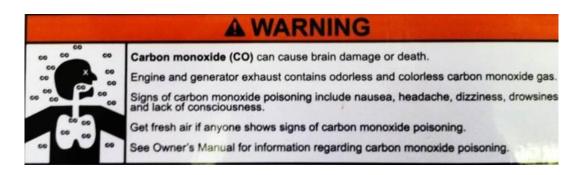



Boating Safety Label Locations

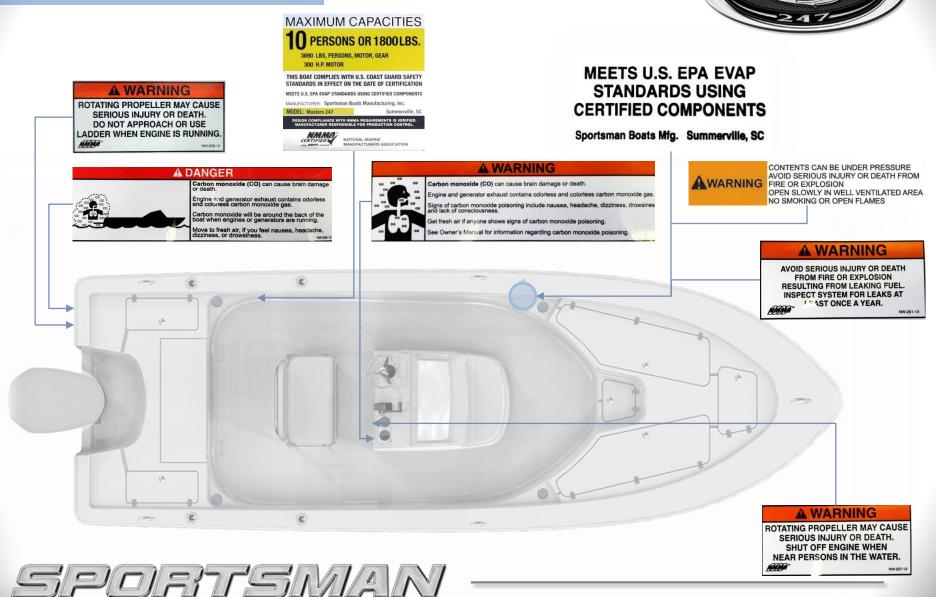

16

Boating Safety



The Sportsman Masters 247 has a 10 Person Capacity. Seating locations are shown below.

For your safety, casting deck is not to be used while boat is in motion.



MAXIMUM CAPACITIES

3690 LBS, PERSONS, MOTOR, GEAR

300 H.P. MOTOR


PERSONS OR 1800LBS.



Summerville, SC



Wire Harness

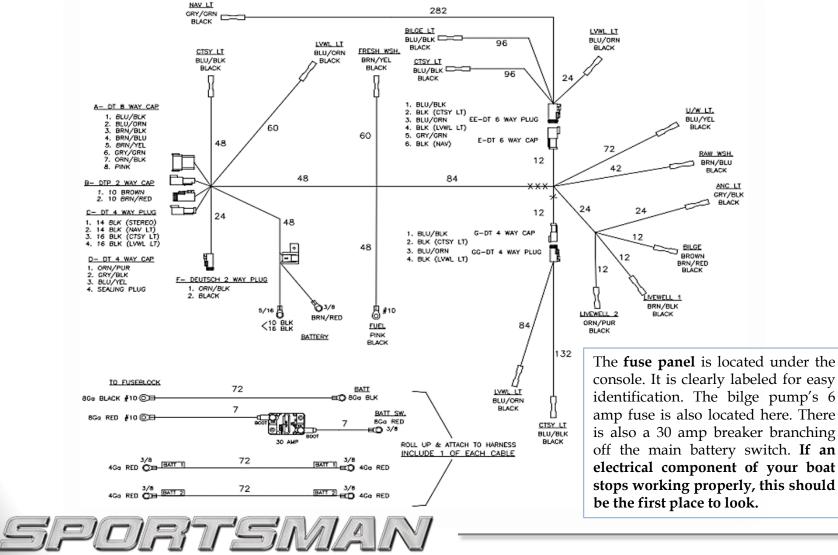

Electrical & Plumbing Systems Simrad 9" Package



Sportsman offers the Simrad NSS EVO2 Multi-function display, which integrates the following functions of the boat:


- Structure Scan Capability
- Sonic Hub Stereo
- Sonar
- Radar Capability
- Navigation
- Engine Instruments
- Coastal Charts





Electrical & Plumbing Systems Simrad 9" Package (cont'd)



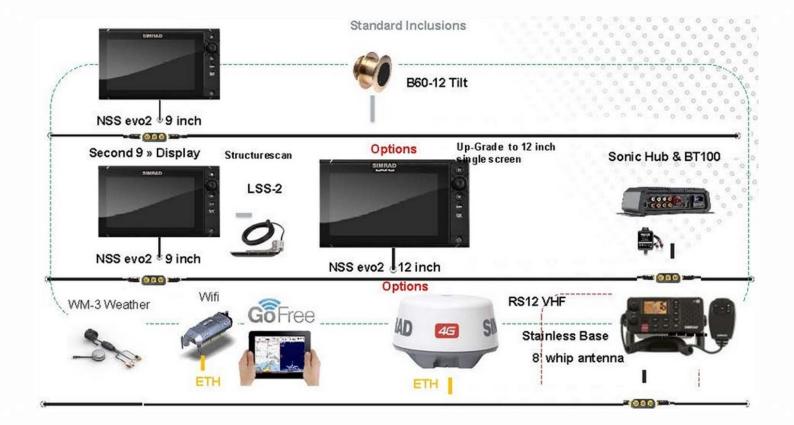

Sportsman

Lights

The *NAV/ANC Switch* is a 3-position switch on the console that controls the running lights.

- **NAV** position will turn on the red and green navigation lights and the white all-round light for night driving.
- ANC turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
 Off is in the center position.

Sidelights: The Masters 247 has integrated rub rail navigational lights installed at the bow (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

All-round/Anchor Light: This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 225° and fixed to show from anywhere ahead, to just behind the beams of the vessel. See the figure to the right for location.

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.

SPORTSMAN

PAASTERS S 247

Bow Sidelights

If you have the underwater lights option installed, they can be turned on with the switch at the helm labeled "Accessory 1."

If your boat has a Ttop, the anchor light is located on top of the Ttop at the aft end. With no T-top, the location is at the stern of the boat as shown here.

Anchor Light if no T-Top




Stereo

If your boat has the stereo option, it comes with a four-speaker SonicHub stereo system. The speaker locations are shown below. The SonicHub system is located inside the console. The stereo system interfaces with the Simrad unit at the helm, so that it can be controlled through the Simrad unit as a central hub and leave more open space on the console. If you purchased the stereo upgrade option, this comes with MB Quart speakers, a four channel amplifier, and an 8" subwoofer.





Speakers (if no T-Top)

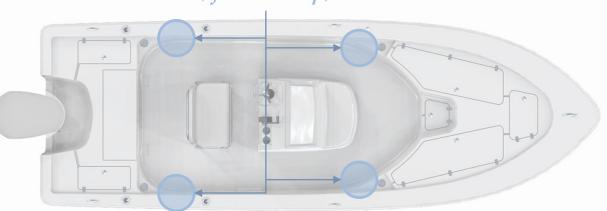

If your boat has a Fiberglass T-top, the aft pair of speakers (the left two speakers in the figure to the left) will not be located here. These two speakers will be located on the T-Top underside.

Trim Tabs Option

Sportsmar

Your Masters 247 may have the trim tabs installed as an option. If so, they will be attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions.

The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab. The lights on the left indicate the port tab position, and the lights on the right indicate the starboard tab position.







Control Panel

Trim Tabs

Trim Tabs Option



If you keep your boat in a wet slip/marina environment. Here is a list of different anodes recommended for various water types to prolong the life and shine of your stainless steel tab. Never use a wire brush to clean your tab

Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-18001K)

Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water

Proven to last longer than zinc due to increased capacity

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-24779(SH))

Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water




Trim Tabs



Bilge Pump

A small bilge pump is located on the hull bottom at the stern of your boat. Water is pumped out of a thru- hull fitting located on the starboard side of the boat near the transom. The pump may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pump on manually by flipping on your bilge switch located on the switch panel at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pump is designed to remove excess water only, and it is not intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.

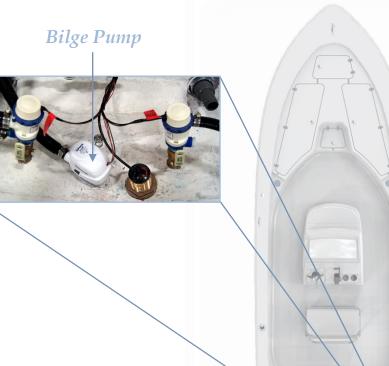

Drain Outlet





Livewells

The Sportsman 247 comes with two 25 gallon livewells at the stern of the boat and one 12 gallon livewell under the front seat of the console. For easy access to the pumps and plumbing systems, open the total access hatch forward of the transom. The livewell pumps are located on either side of the bilge pump in the hull of the boat, and the livewell fill hoses are connected to the top of the pumps. To operate the livewells, turn on the livewell switch at the helm and turn the fill valve in the livewell to "open." To operate the starboard aft livewell and the console livewell, use the switch labeled "Livewell 1." To operate the port aft livewell, use the switch labeled "Livewell 2." All livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, each livewell has LED lighting installed. To illuminate the livewells, turn on the switch at the helm.

Sportsmar









26



Recirculating Aerated Livewell

Your Sportsman Masters 247 has a recirculating livewell as a standard feature. The starboard aft livewell is equipped with an aeration and recirculation system. The two black strips on the inside walls of the livewell are part of the aeration system. The air pump (mounted on the side of the livewell) pushes air through the air stone at the base of each strip, which produces air bubbles to oxygenate the water. This feature is best for keeping bait alive overnight or for use when the boat is not in use, because it draws very little power. The recirculation system features an intake (with a strainer cover, shown in the figure) and an outlet water jet. The jet is mounted in the corner of the livewell in order to allow for optimal water recirculation when in use. The recirculation pump is a white tsunami water pump mounted on the side of the livewell. This system is operated with a 3-way switch at the helm of the boat. The system is off


Note: The set-up in this figure is not exactly like the set-up in your boat. This is just a simple representation of the major features for this system. The exact mounting locations will be different in your boat than the locations shown here.

Air Pump

Air Stone Recirculation

Kecirculation Intake

ミョーロネイターム

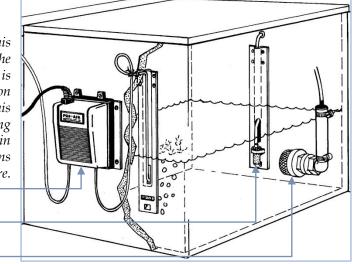


with the switch in the middle position. With the switch up, the aeration system alone will run, which draws very little power. With the switch down, both aeration the and recirculation systems will run. The figure here displays most of the important features the recirculating of livewell system.

Electrical & Plumbing Systems Raw Water Wash-down




Your Masters 247 may have the raw water wash-down installed as an option. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch panel at the helm. The wash-down outlet is found inside the small step storage compartment at the bow. See the figures here for important feature locations for the raw water wash-down system.

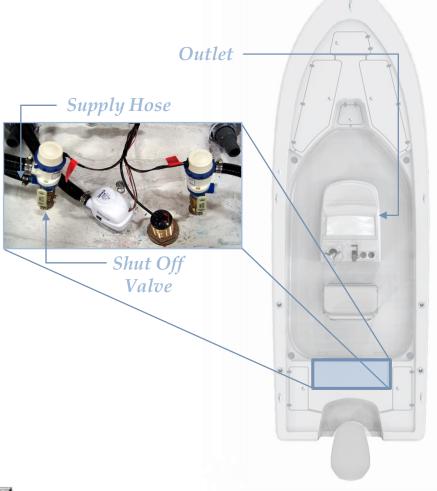



Fresh Water Wash-down

Your Masters 247 may have the freshwater wash-down installed as an option. The freshwater fill fitting is located inside the step storage compartment at the bow. The tank is under the forward end of the console. Do not leave the tank full if your boat will be left unattended for an extended period of time; pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the pump. The pump is mounted on the inside of the console on the starboard side. To operate this system, turn on the switch labeled "ACCESSORY 2" at the helm. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.

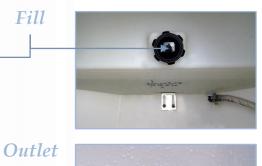

Fill



Fuel System

Fuel Tank

The Sportsman Masters 247 comes with a fuel tank installed (71 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and fill cap. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out gassing emissions through a vent in the new designed

fuel fill cap.

Note: This photo was taken during the assembly process. At this stage, some of the hoses had not yet been connected. In your boat all lines and hoses will be connected as necessary.

Sportsman



Fill Cap

A Boo





Bluskies EPA DIURNAL FUEL SYSTEMS

NOTE: Pressure may be present when opening your deck fill,

What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

- 1. Produce a clean refueling shut off event
- 2. Create a 5% vapor space
- 3. Reduce the propensity of a refueling spit-back event.
- 4. Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation

regardless of system type.

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

Sportsman

Only open the fuel cap for refueling







Fuel System







Diurnal Fuel System (cont'd)


Vapor Space (Ullage) And Refueling Management

Another fuel system necessity to remain EPA complaint it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation. BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.


Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.



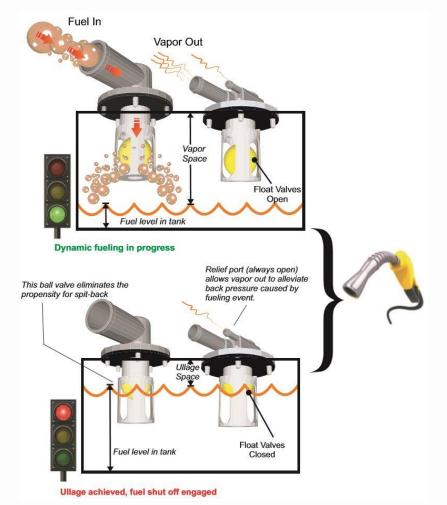



Tank Vapor Space & Fluid Management

 



This fill valve ball is set lower than the vent valve ball but does not close until the refueling vapors are shut off by the vent valve.

This vent valve shuts off the refueling vapors and creates back pressure to lift the fill valve ball into place.

Sportsman

Fuel System





Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)

Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.


Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.

WARNING FIRE OR EXPLOSION

CONTENTS CAN BE UNDER PRESSURE AVOID SERIOUS INJURY OR DEATH FROM **OPEN SLOWLY IN WELL VENTILATED AREA** NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.

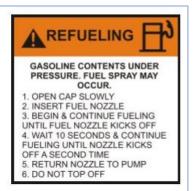




Boating Navigation Rules




There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed: -Meeting: you are approaching another vessel head-on -Crossing: you are travelling across the path of another vessel -Overtaking: you are passing or being passed by another vessel

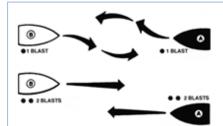


When Meeting Port-to-port: Continue on course. The same holds true for meeting starboard-to-starboard.

When Meeting Head On: As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

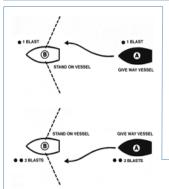

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

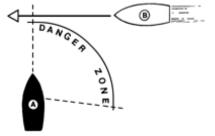

When Overtaking Another Boat: The boat being overtaken is the privileged vessel. Only after signaling and receiving an acknowledgment can the overtaking boat

pass. (Use one blast to pass on the right, and two blasts to pass on the left.

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.





Product Changes

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. **The boat owner is responsible for delivering the boat to the dealer for warranty service**. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. **Sportsman will not reimburse owners for unauthorized warranty work.**



Warranty and Services



SPORTSMAN BOATS LIMITED WARRANTY

Ten-Year Hull Limited Warranty: This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term *"Hull"* shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term *"Structural Hull Defect"* shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One Year Nonstructural Limited Warranty: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term "*Nonstructural Defect*" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

Registration and Transfer of Limited Warranty: Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.



Warranty and Services



SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

EXCLUSIONS:

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "*Exclusions*:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "Commercial Purposes" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc. 113 Isaac Way · Summerville, South Carolina 29483 Telephone (843) 376-2628 · Fax (843) 376-2636

Email sales@sportsmanboatsmfg.com www.sportsmanboatsmfg.com

Website

P.O. Box 2100 Summerville, SC 29484

