

# Table of Contents



Topic Page

Introduction	3
Important Information	4
Specifications	5
Overall Dimensions & Terminology	6
Features & Performance	7
Certifications & Registrations	12
Boating Safety	13
Electrical & Plumbing Systems	19
Fuel System	32
Boating Navigation Rules	37
Warranty & Services	38
Contact Information	41



### Introduction



#### WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard.

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines, *Tommy Hancock and Dale Martin* 



## Important Information

BOAT INFORMATION / SPECIFIC	ATIONS
MODEL:	HULL SERIAL #:
PURCHASE DATE:	DELIVERED:
IGNITION KEY #:	REGISTRATION #:
DRAFT:	WEIGHT:
VERTICAL CLEARANCE:	
ENGINE / PROPELLER INFORMA	TION
ENGINE MAKE:	MODEL:
ENGINE SERIAL #:	
PROPELLER MAKE:	# OF BLADES:
DIAMETER / PITCH:	MODEL:
PART #:	
OPTIONAL EQUIPMENT / OPTIO	N PACKAGES
TRAILER INFORMATION	
MAKE:	MODEL:
SERIAL #:	GVRM:
ADDITIONAL INFORMATION:	
DEALER	SPORTSMAN
NAME:	PHONE:
PHONE:	REPRESENTATIVE:
SALES PERSON:	ADDRESS:
SERVICE MANGER:	
ADDRESS:	



We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.



# Specifications




Length Overall	25′2″
Beam	9'2"
Draft	18"
Deadrise at Bow	50°
Deadrise at Transom	21°
Approximate Usable Fuel Capacity	147 gal.
Approximate Dry Weight	3900 lbs.
People Capacity	12 persons
Maximum Engine Horse Power	400 HP (4 Stroke)



# Overall Dimensions & Terminology



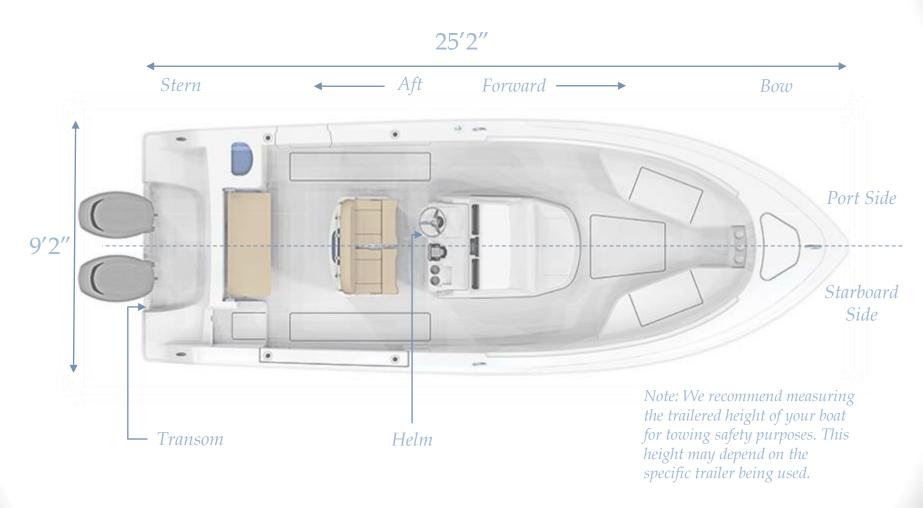



#### Standard Features



- •SportTech™ Advanced Fabrication Process
- •SportLink™ Electronics Integration System
- •Simrad NSS12 EVO3 12" GPS w/Built-In Wi-Fi
- •Airmar SS60 Thru-Hull Transducer
- Simrad RS20 VHF Radio w/ Antenna
- •10-Year Hull Warranty
- •12 Gallon Built-In Console Cooler Seat
- •13 Gallon Freshwater Tank w/ Washdown
- •155 Gallon Fuel Tank w/ Fuel Level Sensor
- •3 Macerated In-Deck Fish Boxes
- •30 Gallon Rear Livewell
- •4 Flush Mount Gunwale Rod Holders
- Advanced Fiberglass Stringer System (No Wood)
- •Anchor Windlass System w/ Anchor & 300' Line
- Battery Switches & 3 Batteries
- Bow Bolsters
- •Bow Cushion Set w/ Removable Filler Board
- •Built-In Swim Platform w/ 3 Step Ladder
- Compass
- Console Footrest with Pads

- Console Interior Liner
- Dash Panel Cover
- •Fiberglass Hard-Top w/ LED Lighting & Misters
- •Fiberglass Leaning Post w/ Built-In 30 gal. Livewell
- •Grip Tex Yacht Style Non-Skid
- Helm Pad
- •High Speed Livewell Pick Up
- •Under Gunwale Rod Racks
- •Horn
- •Insulated Bow Storage
- •Integrated Tempered Glass Windshield
- •Interior LED Lighting Package
- Light Hull Color
- •Lockable Console Storage w/ Porcelain Head
- •Marine Bluetooth Stereo w/ 6 Speakers
- Matching Hard-Top Underside Color
- NMMA Certified
- Port and Starboard Toe Rail
- Pull-Up Cleats
- •Raw Water Washdown

- •Rear Fold Down Seat w/ Access
- •Recessed Bow Hand Rails
- •Removable Bow Backrest
- •Rub Rail Navigation Lights
- Self Bailing Cockpit
- Side Entry Door
- •Stainless Steel Cup Holders 10
- Stainless Steel Drain Covers
- •Stainless Steel Propeller
- Stainless Steel Rub Rail
- Stainless Steel Steering Wheel w/ Knob
- Stainless Steel Switches
- •Tilt Optimus Power Steering
- •Trim Tabs w/ LED Indicator
- •UltraLeather® Tan Cushions
- Underlid Gasket
- Underwater Lights
- •USB & 12V In-Dash Charging Plug



### **Optional Features**

#### **Available Options**

- Second Simrad NSS12 EVO3 12" GPS
- •Halo Radar 3 ft. \*\*\*\*
- •4G Radar \*\*\*\*
- •4G Radar for Second Station
- StructureScan® HD Transducer
- •StructureScan® 3D Transducer
- •Airmar SS175M CHIRP Transducer Upgrade
- Simrad WM-3 Weather Receiver SiriusXM
- Auto Pilot
- Auto Pilot Wireless Remote
- Custom Color Engine (Twins)

- •Dark Hull Color\*\* Upgrade
- Deluxe LP w/Flip Up Bolsters\*\*
- •Dual Premium Seat (req. Fiberglass LP)
- •Edson 13" SS Comfort Grip Steering Wheel w/ PowerKnob
- •Fiberglass LP w/ Tackle Center
- •Gull Wings
- •Half Tower w/ Second Station
- Mooring Cover (Sunbrella®)
- On-Board Battery Charging System
- Optimus 360 Joystick (Twin DEC only)
- •Powder Coating for Ski Tow Bar

- Powder Coating\*
- •Premium Sound System\*
- •Release Marine Package
- Ski Tow Bar (Single Engine only)
- •Sun Shade w/Poles Front
- •Sun Shade w/Poles Rear
- •Table (Removable) w/ Mount Bow
- •Taco Outriggers GS280
- Transhield Shipping Cover
- UltraLeather® White Cushions
- •Windshield Close Out

#### Color Selection

- Driftwood
- Sea Mist Green
- Ice Blue
- Silver Cloud
- Island Blue
- Steel Blue
- Jet Black
- White

#### Stereo Upgrade

- JL Speakers
- JL 10" Amplified Subwoofer
- JL Amplifier


#### Powder Coat Selection

- Black - White





Major Features

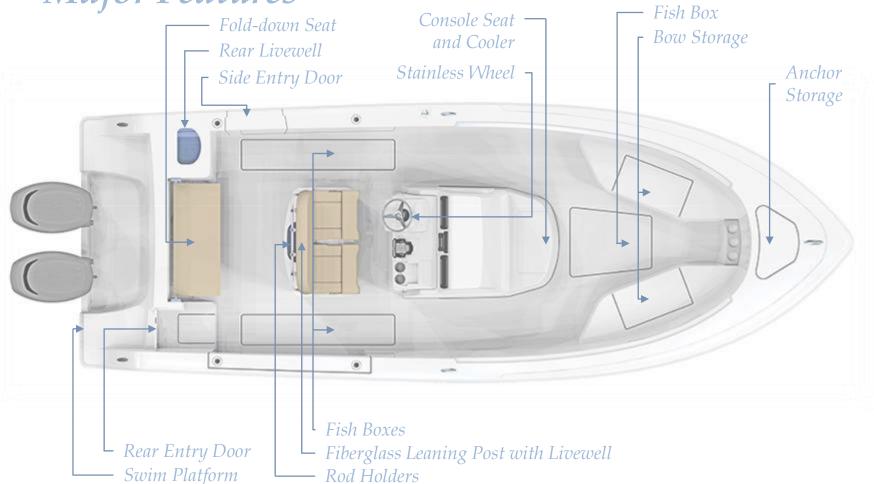



Twin 150 HP







PILSPIJA	errogs251_F28	IUGA ZIHATI	21_000		the last
Tally and a first	The state of the s		CONTROL OF THE PARTY OF THE PAR	Sportamen* theritage 200	3500
205	1	- Control	22500	Length	20 2
	-	1000		Destr	92
			1000	Dry Weight (Aug 10) Put)	4,100 fm
-			1	Meximum NP	400
ALC: U				Fuel Capacity	150 gai 5.050 to
ALC:			4	Weight so Tooked .	5,039 to
				F300UCA	
	-	-		Horsepower	300 HP
	*	9		Induction Displacement	EP1 421
2	5)PICIF71		W	Weight	575 to
Constraint D		withered By: of Lane - Summan	the the states	Gest Natio	1.75
		portenentowanity		CHANGE STATE	
	HOMEVEROOM	на систем си и и		ENGINE MOUNTING HEIGHT	
	PERFORM	ANCE DATA	V.	Mounting Hole Position	#2
RPM	MEH	GPH	MPG	Vertilation Plats Height	34" Above Boar Bottom
1000	53	1.3	400		
1500	76	2.1	3.62	PROPELLERS	
2000	0.0	2001		Series	Sahvarer Series III 808
_	-	3.5	251	Diameter Prich	15-1/2×17
2500	12.9	5.2	2.48	Yersaha Part #	BCE-45979-00-00
3000	15.0	63	251	Propeller Material	Polished Stainless Stee
3500	25.7	4.8	2.92	C. 4400 00000000000000000000000000000000	
4000	21.6	11.5	0.70	TEST CONDITIONS	
4500	36.0	15.0	2.40	Number of People	
5000	40.8	18.9	2.16	Air / Witter Temperature (*erumet)	65 / 70° F
5500	44.0	21.6	1.90	Destino o ser em entre	Destane
5900	49.1	26.5	1.05	Wind Welocity	10-15 mph
D-30 MPH			587	General Net reprint date of the artist Exerci-	es, manta foca, seriely enterteed paed
		, e	-	media de Camarament, "Part formatino arca asso comenda and a deposit nevel present framación de caración a la presenta a proposition de la presentación de caración a la presentación de man framación de caración de la referencia de la presentación de come a salten a presentación de la presentación de come a salten a presentación de la presentación de presentación de la presentación de la presentación de presentación de la presentación de la presentación de presentación de la presentación de la presentación de reconstrucción de la presentación de la presentación de la presentación de la presentación de la presentación del la presentación de la presentación de la presentación de la presentación de la presentación del la presentación del presentación del	in that we a government any and once in the court performancy may be offered my que to vertical seators. Antendra de mayor, whether some content par- rian opening softs, figures content to a territorial to the features that a territorial temperature. Sometiment and or that Antendra de Land or the account of the features of the con- cernment bloomings. I may use com-

Note: These bulletins are for the Heritage 251, but the 252 has the same performance. These are posted on our website at <a href="http://sportsmanboatsmfg.com/heritage-251-center-console/">http://sportsmanboatsmfg.com/heritage-251-center-console/</a> SPORTSMA



#### Twin 200 HP



**Note:** These bulletins are for the Heritage 251, but the 252 has the same performance. These are posted on our website at <a href="http://sportsmanboatsmfg.com/heritage-251-center-console/">http://sportsmanboatsmfg.com/heritage-251-center-console/</a>

# Certifications & Registrations



#### NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit <a href="http://www.nmma.org/certification/boats">http://www.nmma.org/certification/boats</a>.

#### Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail. When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.





#### LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

#### REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

#### FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

#### SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

#### PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.

#### **VISUAL DISTRESS SIGNALS**

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.





Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:



#### WARNING



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



#### **DANGER**



IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

 
Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.





Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.






Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.


If your label is damaged. Please call Sportsman's parts department for replacement stickers.





Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

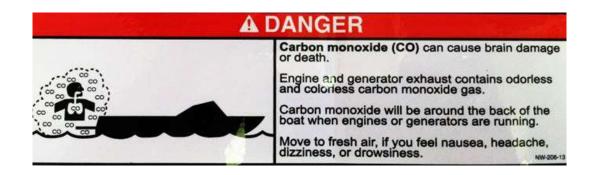

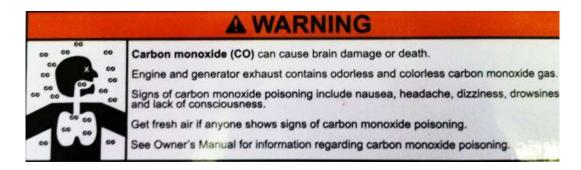



## Boating Safety Label Locations

**A WARNING** 

**ROTATING PROPELLER MAY CAUSE** 

SERIOUS INJURY OR DEATH.


DO NOT APPROACH OR USE





#### **MEETS U.S. EPA EVAP** STANDARDS USING CERTIFIED COMPONENTS

Sportsman Boats Mfg. Summerville, SC

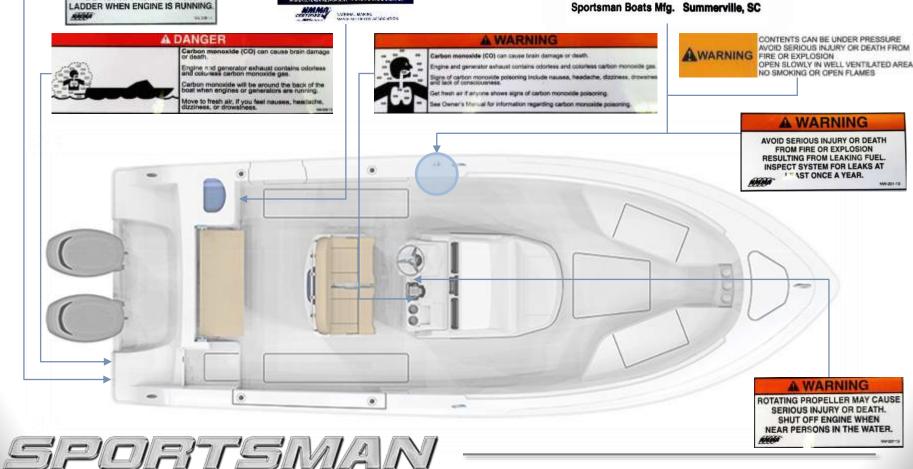




The Sportsman Open 252 has a 12 Person Capacity. Seating locations are shown below.







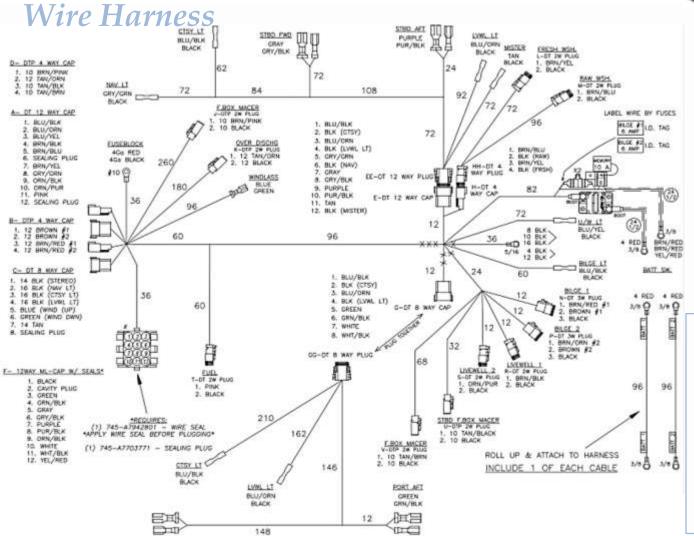



## Fuse Panel

The fuse panel is located under the console. It is clearly labeled for easy identification. The bilge pump's 6 amp fuse is also located here. There is also a 30 amp breaker branching off the main battery switch. If an electrical component of your boat stops working properly, this should be the first place to look.



# Electrical & Plumbing Systems Simrad 12" Package



Sportsman offers the Simrad NSS EVO2 Multi-function display, which integrates the following functions of the boat:

- Structure Scan Capability
- Stereo
- Sonar
- Radar Capability
- Navigation
- Engine Instruments
- Coastal Charts

#### Model Year 2018 | Factory Certified Packages




III NSS12 evo 3 Package





# Electrical & Plumbing Systems Simrad 12" Package (cont'd)



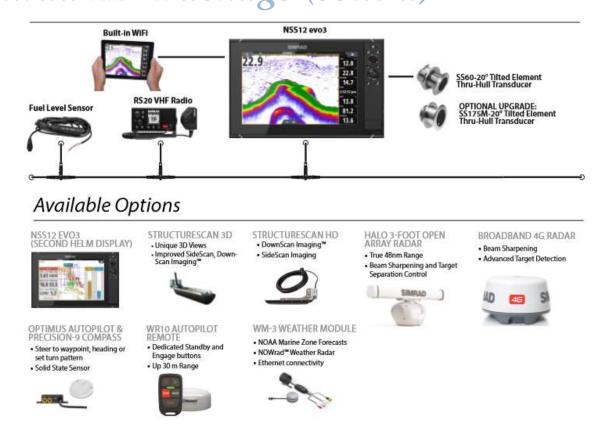

The Sportsman Open 252 includes a 12" Simrad unit as a standard feature. The transducer is located on the hull bottom at the stern of the boat. The Infinity Stereo system is another standard feature of the Open 252 and is located on the inside wall of the console. The Infinity Stereo system is controlled through the Simrad unit.



# S PEN S

### Optimus Electronic Power Steering

SeaStar's Optimus Electronic Power Steering (EPS) is at the forefront of boating technology. This system provides both the comfortable and versatile most maneuverability for your boat. When running at speed in open water, the steering system can be set to increase lock-to-lock turns to increase steering effort so the driver can effortlessly stay on course. At low speeds, Optimus may be adjusted for reducing the number of turns lock-to-lock. This will increase the sensitivity of the steering and enable tight, precise movements necessary for navigating through heavy traffic areas and tight spots. Optimus allows the boat to adapt to the environment as necessary to give the driver the most comfortable and pleasant experience possible.





# Electrical & Plumbing Systems Optimus 360 Joystick Option



Sportsman offers the Optimus 360 as an option on the Open 252. This joystick significantly enhances the boat's maneuverability and ease of use at low speeds, such as pulling in or out of a slip. This allows you to move the boat sideways by pushing the stick left or right; you can also use this to rotate the boat about a point by twisting the joystick. It does this by

moving each motor independently from one another at differing speeds and directions, as seen in the image below. to provide the smoothest possible motions and intuitive controls, the Optimus 360 is programmed to minimize the amount of shifting when practicing tight maneuvers. It also uses progressive throttling, which means a lighter push or

 
twist will result in a slower, more precise motion than that of a strong push or twist. This system works seamlessly with the boat's components to give you total control when docking and navigating in tight areas.







## Lights



- **NAV** position will turn on the red and green navigation lights and the white all-round light for night driving.
- **ANC** turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
- Off is in the center position.

*Sidelights:* The Open 252 has integrated rub rail navigational lights installed at the bow (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

**All-round/Anchor Light:** This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 225° and fixed to show from anywhere ahead, to just behind the beams of the vessel. See the figure to the right for location.

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.



Bow Sidelights

The underwater lights can be turned on with the switch at the helm labeled "Accessory 1."

The anchor light on the Open 252 is located on the aft end of the T-Top. The location of the light is shown here without a visible T-Top.

#### Anchor Light








#### Stereo

Your boat is equipped with and Infinity black box is located inside the console with 2 Infinity speakers. The speaker locations are shown below. The. The stereo system interfaces with the Simrad unit at the helm, so that it can be controlled through the Simrad unit as a central hub and leave more open space on the console.

Your boat has a Fibergalss T-Top, is standard with 4 speakers. These four speakers will be located on the T-Top underside fore and aft.


If you purchased the JL stereo upgrade option, this comes with 6 JL speakers, a fo 10" subwoofer. Also 8 channel amp to power your speakers and subwoofer

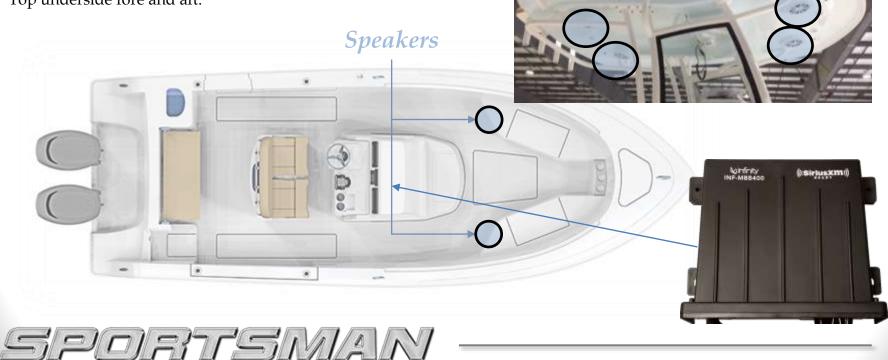

#### Trim Tabs

Your Open 252 has trim tabs installed as a standard feature. They are attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions.

The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab. The lights on the left indicate the port tab position, and the lights on the right indicate the starboard tab position.

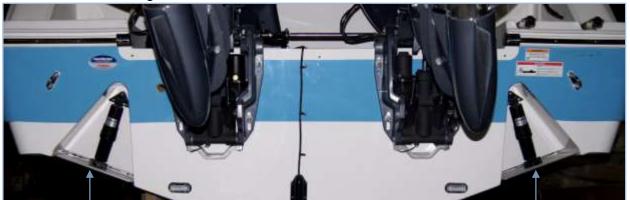





Control Panel

Trim Tabs



# S)

#### Trim Tabs

If you keep your boat in a wet slip/marina environment. Here is a list of different anodes recommended for various water types to prolong the life and shine of your stainless steel tab. Never use a wire brush to clean your tab

#### Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-18001K)

#### Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water

Proven to last longer than zinc due to increased capacity

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-24779(SH))

#### Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water




Trim Tabs



## Bilge Pumps

Two small bilge pumps are located on the hull bottom at the stern of your boat. Water is pumped out of thru-hull fittings located on the port and starboard sides of the boat near the transom. The pumps may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pumps on manually by flipping on a bilge switch located on the switch panel at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pumps are designed to remove excess water only, and they are not intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.

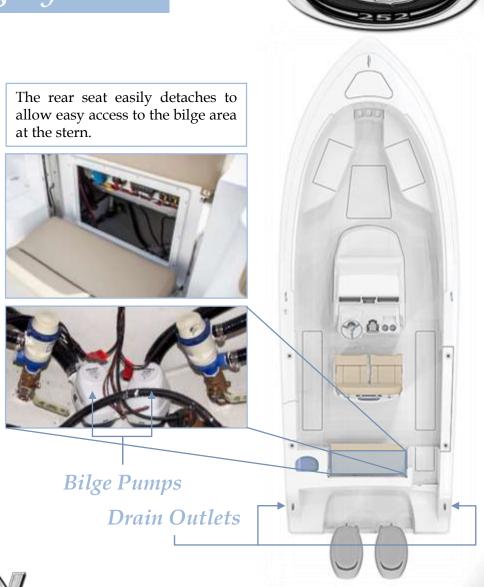



#### Fish Boxes

The Sportsman 252 Open features 3 fish boxes with macerators: one in the bow and one on each side of the helm. The bow fish box has an 80 gallon capacity, and its macerator is located inside the console behind a snap on vinyl curtain. The other two fish boxes are located on each side of the leaning post; their macerators are inside the bilge area mounted to the side of the stringer. To operate the macerators, flip on the switch at the helm labeled "FISH/MACER." This will empty the fish box with a dual-cut blade design, which allows for thoroughly ground waste. The macerator will not process hard objects, such as bones and rags. The maximum flow rate is approximately 13 gallons per minute. The macerators discharge via a thru hull fitting on the port side mid-ship of the hull.







Aft Macerator



- Aft Fish Box






# S)

#### Livewells


The Sportsman Open 252 comes with two 30 gallon livewells: one at the port stern of the boat and one built in to the leaning post. For easy access to the pumps and plumbing systems, open the total access hatch forward of the transom. The livewell pumps are located on either side the bilge pumps in the hull of the boat, and the livewell fill hoses are connected to the top of the pumps. To operate the livewells, open the pump valve in the bilge, turn on the livewell switch at the helm, and turn the fill valve in the livewell to "open." The switch labeled "Livewell 1" fills the leaning post livewell, and the switch labeled "Livewell 2" fills the stern livewell. Both livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, each livewell has LED lighting installed. To illuminate the livewells, turn on the switch at the helm.

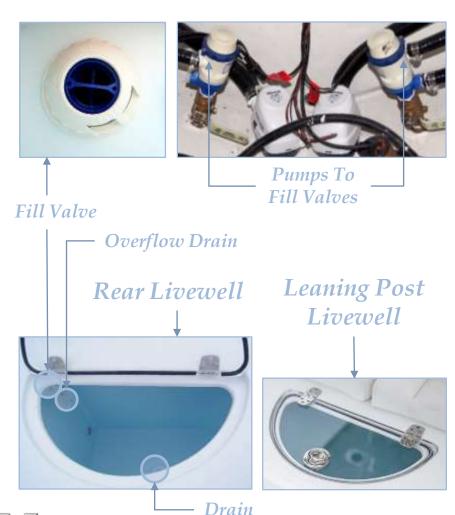



Raw Water Wash-down


Your Open 252 has the raw water washdown installed as an standard feature. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch panel at the helm. The wash-down outlet is found on the starboard side of the boat under the gunwale. See the figures here for important feature locations for the raw water wash-down system.

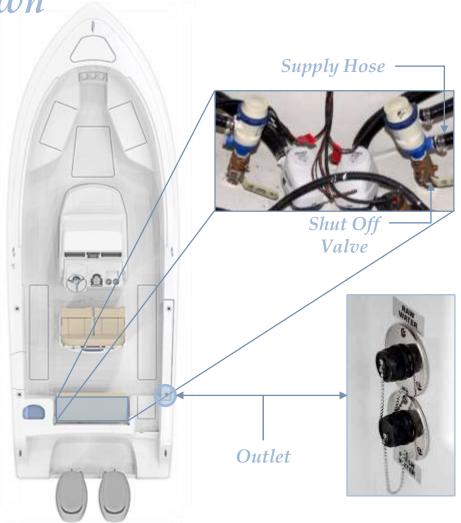



Fresh Water Wash-down

Your Open 252 has the freshwater wash-down installed as a standard feature. The freshwater fill fitting is located at the stern of the boat on the starboard side. The tank underneath the deck near the swim platform. Do not leave the tank full if your boat will be left unattended for an extended period of time; pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the pump. To operate this system, switch on the labeled turn "ACCESSORY 2" at the helm. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.

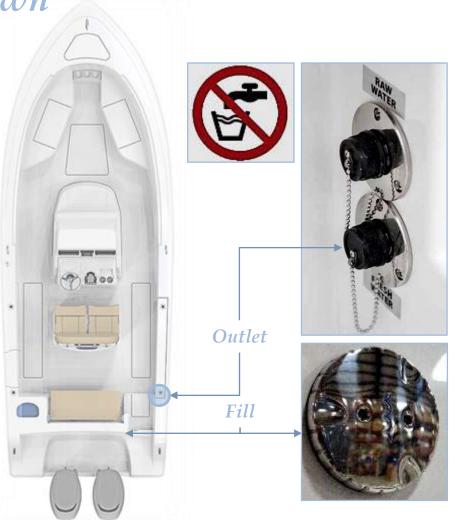





# Fuel System Fuel Tank

The Sportsman Open 252 comes with a fuel tank installed (147 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and fill cap. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out gassing emissions through a vent in the new designed

*Note: This photo* was taken during the assembly process. At this stage, some of the hoses had not yet been connected. In your boat all lines and hoses will be connected as necessary.

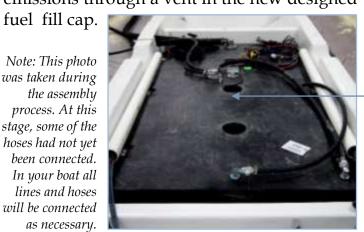

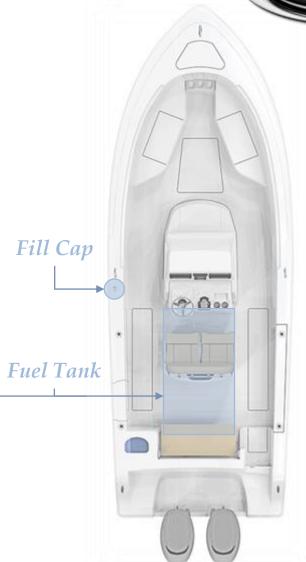



#### Diurnal Fuel System





## EPA DIURNAL FUEL SYSTEMS

NOTE: Pressure may be present when opening your deck fill, regardless of system type.



#### Only open the fuel cap for refueling

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

#### What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

- 1. Produce a clean refueling shut off event
- 2. Create a 5% vapor space
- 3. Reduce the propensity of a refueling spit-back event.
- Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation



#### Diurnal Fuel System (cont'd)


#### Vapor Space (Ullage) And Refueling Management

Another fuel system necessity to remain EPA complaint it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation.
BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.

Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.



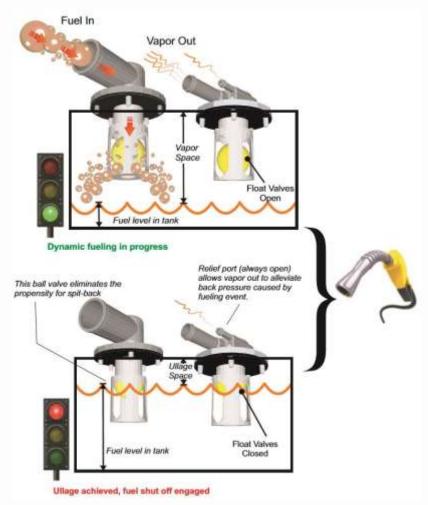



Tank Vapor Space & Fluid Management

**Ullage (Vapor Space) Level Attainment**Spit-back/Well-back Control

This vent valve shuts off the refueling vapors and creates back pressure to lift the fill valve ball into place. This fill valve ball is set lower than the vent valve ball but does not close until the refueling vapors are shut off by the vent valve.



### Diurnal Fuel System: Refueling



Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)

#### Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.

Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.



CONTENTS CAN BE UNDER PRESSURE AVOID SERIOUS INJURY OR DEATH FROM WARNING FIRE OR EXPLOSION OPEN SLOWLY IN WELL VENTILATED AREA NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.

## REFUELING

#### GASOLINE CONTENTS UNDER PRESSURE. FUEL SPRAY MAY OCCUR.

- OPEN CAP SLOWLY 2. INSERT FUEL NOZZLE 3. BEGIN & CONTINUE FUELING UNTIL FUEL NOZZLE KICKS OFF 4. WAIT 10 SECONDS & CONTINUE FUELING UNTIL NOZZLE KICKS OFF A SECOND TIME 5. RETURN NOZZLE TO PUMP
- DO NOT TOP OFF




# Boating Navigation Rules




There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- -Meeting: you are approaching another vessel head-on
- -Crossing: you are travelling across the path of another vessel
- -Overtaking: you are passing or being passed by another vessel

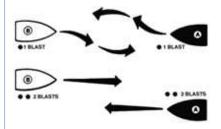


*When Meeting Port-to-port:* Continue on course. The same holds true for meeting starboard-to-starboard.

*When Meeting Head On:* As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

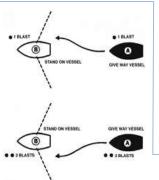

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

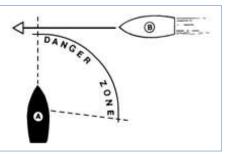

When Overtaking Another Boat: The boat being overtaken is the privileged vessel.
Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use one blast to pass on the right, and two blasts to pass on the left.

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.



# Warranty and Services



#### **Product Changes**

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

#### Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

#### Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. The boat owner is responsible for delivering the boat to the dealer for warranty service. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. Sportsman will not reimburse owners for unauthorized warranty work.



## Warranty and Services



#### SPORTSMAN BOATS LIMITED WARRANTY

**Ten-Year Hull Limited Warranty:** This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term "Hull" shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term "Structural Hull Defect" shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One Year Nonstructural Limited Warranty: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term "Nonstructural Defect" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

**Registration and Transfer of Limited Warranty:** Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.



## Warranty and Services

### SPEN S 2152

#### SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

#### **EXCLUSIONS:**

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "Exclusions:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "Commercial Purposes" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc. 113 Isaac Way · Summerville, South Carolina 29483 Telephone (843) 376-2628 · Fax (843) 376-2636

Email sales@sportsmanboatsmfg.com

Website www.sportsmanboatsmfg.com

P.O. Box 2100 Summerville, SC 29484

