

SPORTSMAN

Owner's Manual and Quick-Reference Guide 2019

Table of Contents



Topic Page

Introduction	3
Important Information	4
Specifications	5
Overall Dimensions & Terminology	6
Features & Performance	7
Certifications & Registrations	12
Boating Safety	13
Electrical & Plumbing Systems	19
Fuel System	32
Boating Navigation Rules	37
Warranty & Services	38
Contact Information	41



Introduction



WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard. Sportsman Boats builds the fastest growing line of family-friendly center console boats in-class, built with the latest designs, procedures and materials to give you and your family unparalleled performance with a dry, safe and comfortable ride

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines, Tommy Hancock



Important Information

BOAT INFORMATION / SPECIFIC	ATIONS
MODEL:	HULL SERIAL #:
PURCHASE DATE:	DELIVERED:
IGNITION KEY #:	REGISTRATION #:
DRAFT:	WEIGHT:
VERTICAL CLEARANCE:	
ENGINE / PROPELLER INFORMAT	TION
ENGINE MAKE:	MODEL:
ENGINE SERIAL #:	
PROPELLER MAKE:	# OF BLADES:
DIAMETER / PITCH:	MODEL:
PART #:	
OPTIONAL EQUIPMENT / OPTIO	N PACKAGES
TRAILER INFORMATION	
MAKE:	MODEL:
SERIAL #:	GVRM:
ADDITIONAL INFORMATION:	
DEALER	SPORTSMAN
NAME:	PHONE:
PHONE:	REPRESENTATIVE:
SALES PERSON:	ADDRESS:
SERVICE MANGER:	
ADDRESS:	



We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.



Specifications




Length Overall	20′11″
Beam	8'5"
Draft	12"
Deadrise at Transom	15°
Approximate Usable Fuel Capacity	61 gal.
Approximate Dry Weight	2400 lbs.
People Capacity	10 persons
Maximum Engine Horse Power	200 HP (4 Stroke)




Overall Dimensions & Terminology



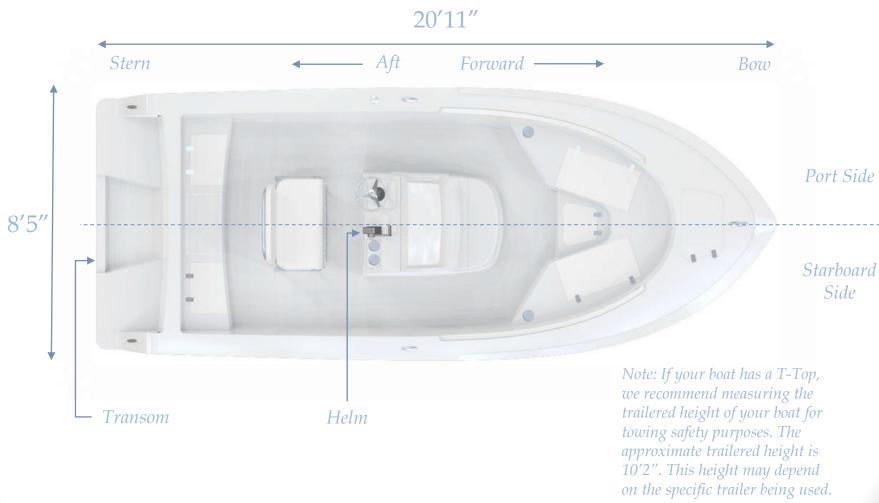

Feature Packages

 

SportLinkTM Electronics Integration

Garmin GPSMAP® 942xs MFD 9"

Airmar B60 Thru-Hull Transducer

(1) 20 Gallon Rear Livewell

(1) 20 Gallon Rear Recirculating Livewell w/ Pro-Air

10 Gallon Livewell Front Seat of Console

10-Year Hull Warranty

2 Flush Mount Gunwale Rod Holders

6 Vertical Rod Holders on Console (Boats w/o T-Top)

64 Gallon Fuel Tank w/ Fuel Level Sensor

Advanced Fiberglass Stringer System (No Wood)

All White Hull (Sides & Bottom)

Anchor Storage

 Console Footrest w / Glove Box & Storage Bin

 Console Grab Rail

 Console Windscreen

 Dash Panel Cover

• Deluxe Leaning Post w/Flip Up Bolsters

Dual Battery Configuration w/ Switch & Trays

Extra Large Forward Storage Box

Grip Tex Yacht Style Non-Skid

High Speed Livewell Pick Up •

Horn

 Hvdraulic Tilt Steering

Interior LED Lighting Package

• JL Audio Combo USB & 3.5 mm Audio Jack

Large Bow Fish Box

Large Rear Casting Deck

NMMA Certified

Premium Marine Vinyl with Distressed Look

• Pull-Up Cleats

• Rear Fold Up Bench Seat w/ Storage

Rear Total Access Hatch

Recessed Bow Hand Rails

Rub Rail Navigation Lights

Self Bailing Cockpit

Stainless Steel Cup Holders - 6

• Stainless Steel Propeller

Stainless Steel Rub Rail

Large Bow Casting Deck w/ Lockable Storage for 10 Rods

Stainless Steel Steering Wheel w/Knob

Stainless Steel Switches

Swim Platform w/ 3 Step Ladder

Trolling Motor Plug/Harness

Under Gunwale Rod Racks

Underlid Gasket

Color Selection

- Driftwood

- Sea Mist Green

- Ice Blue

Silver Cloud

Island Blue

Steel Blue

- Iet Black

- White

 
Powder Coat Selection

- Black - White



Feature Packages

Note: If you purchased the Heritage 211 Sport or Platinum Package, the Sport or Platinum Package features are additional to the standard features previously listed.



- Deluxe T-Top w/ LED Lighting
- Powder Coating
- JL Audio MM50 Stereo w/ MX Speakers
- Freshwater Washdown w/ 13 gal. Tank
- Raw Water Washdown
- Underwater Lights
- Compass
- Light Hull Color
- Helm Pad

Stereo Upgrade

- JL Quart Speakers
- JL Amplifier
- JL 8" Amplified Subwoofer



Sport Package

- JL Audio MM50 Stereo w/ MX Speakers
- Freshwater Washdown w/ 13 gal. Tank
- Raw Water Washdown
- Underwater Lights
- Compass



Options


- Garmin VHF 110 Radio w/ Antenna
- Garmin GXMTM 53 SiriusXM® Weather Antenna
- Airmar B175M CHIRP Thru-Hull Transducer Upgrade
- JL Audio MM50 Stereo w/ MX Speakers
- Bimini Top
- Bow Casting Chair
- Bow Cushion Set / Sundeck
- Compass
- Console Cover
- Custom Color Engine
- Dark Hull Color(Black/St Blue)
- Dark Hull Color(Black/St Blue) Upgrade
- Deluxe T-Top w/ LED Lighting
- Edson 13" SS Comfort Grip Steering Wheel w/ PowerKnob
- Freshwater Washdown w/ 13 gal. Tank
- Gunwale Rod Holders / Each
- Helm Pad
- ICON Cooler w/ Slide Out Track
- Light Hull Color
- · Mooring Cover
- On-Board Battery Charging System
- Optimus Electronic Power Steering w/ Tilt



- Powder Coating for Ski Tow Bar
- Raw Water Washdown
- Removable Reclining Bow Backrest w/ Seat Cushions
- SeaStar Jack Plate
- SeaStar ProTap Controller (req. Jack Plate)
- Ski Tow Bar
- Spray Shield
- Transhield Shipping Cover (w/o Top Only)
- Trim Tabs
- Under Leaning Post Tackle Storage
- Underwater Lights





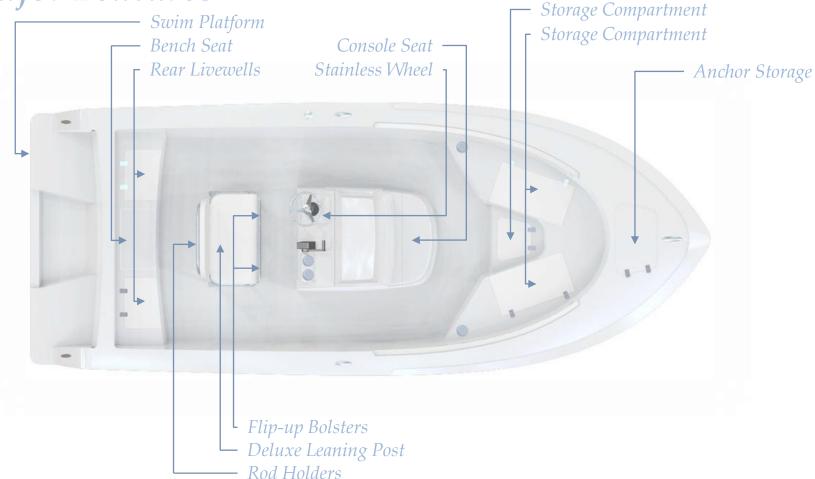



150 HP



Beary Dry Weight and to muc Machiners IIP Food Capority Weight as Tooled F-200XB Horsepower Voluntion Displacement Displacement Voluntion Displacement Displa	Length 20 11 Easy E 2 1	Length 20 to				Length Deart Dry Weight (see in ma)	2 300 be
Length Bears Dry Weight may on mus. Dry Weight may to mus. Dry Weight may to mus. Dry Weight and toolood 2.4 F200XB Horsepower Weight an Toolood Weight an Toolood F200XB Horsepower Weight an Toolood Mountains Block Mountains Block F200XB F200XB Mountains Block F200XB F	Length 20 11* Deary E 5* Dry Weight raus on nuc 2200 he Meaning HP 200 Meaning HP 200 Fuel Capacity 53 gai Weight an Tisoned 2.440 to F-200XB Horsepower 200 HP Induction EFF Capacinement 2.81 Weight 400 to ENGINE SHOUNTING HEIGHT Mounting Hole Position Verification Plans Height 1* Acres Base Bottom PROPELLERUS	Length 20 to		3		Length Deart Dry Weight (see in ma)	2 300 be
Boxin Weight tour in muc 2.3 Microtrop III Food Capacity Weight an Tended 3.4 FOODXB Horsepower Weight Date of Tended 1.5 Food Manufactured By: Superhorse Boxin + FO Box 2101 - Superhorse Sc 20004 63-279-2028 - results protection Sc 20004 Box Particular Capacity FOODXB Horsepower Weight General Weight General Capacity FOODXB FOODXB Horsepower Weight General Capacity FOODXB FOODXB	Dry Weight issue on ruc. 2200 fee Montenant IVP 2200 fee Montenant IVP 2200 fee Montenant IVP 2200 fee Montenant IVP 250 gal Weight on Teached 2.440 fee F200XB Horsepower 200 IVP Montenant 2.44 fee Monte	Bear Property Pr	-			Drawy Dry Weight source mus	2 300 be
Dry Weight source was Maximum IIP Fuel Capeority Weight on Tooled 2.4 F200XB Horsepower Velocities Displacement Velocities Velocities Displacement Velocities V	Dry Weight tour on must 2.000 fee Macanisant HP 200 fee fuel Capacity 50 gat Weight an Tended 2.440 fee F200XB Horsepower 200 in F200XB Horsepower 200 in F200XB Horsepower 2.55 gat Weight 460 fee Gear Facility 4.55 fee fuel 1.35 fee fuel 1.	Dry Weight (aut on ma) 2,300 fm	-	7	المالية	Dry Weight (source) must	2,300 be
Meximum IIP For Capority Weight an Torond 2.4 F200XB Horespower Voluntion Day Horespower Voluntion Day 100 Inc. (100 Inc. (1	Meanman HP 200 Fuel Capacity 53 gain Weight on Tector However 200 HP Homepower 200 HP Homepower 200 HP Homepower 201 HP Homep	Medicate RP 200 Fuel Capacity 65 ps Weight as Teacord 2,440 ps Weight 65 ps 65 ps Medicate Part 6	-				
Weight as Tooled F-200XB Horsepower Voluntion Displacement Weight George PERFORMANCE DATA Weight Mounting Now Position Mounting Now Position	Weight as Texted 2,440 to F200XB Horsepower Industrian EFF Displacement 2,81 Weight 466 to Gear Ratio 1,30 EMIGAINE MICHIENIS HEIGHT Mounting Hole Position Versiletion Plate Height 1*Acres Basif Section PRIOPELLERIS	Weight at Tented 3,440 for	-	1			200
F200XB Horsepower Velocities Don Manufactured By: Bushares Book, PC Bus 2001 - Survey the SC 2008L 60-279-2003 - non-partner featured by: PERFORMANCE DATA F200XB Horsepower Velocities Congressed Velocities Congressed Velocities Congressed Velocities Congressed Velocities Velocities Congressed Velocities	F200XB Horsepower 500 FP Industrian ER Depleasement 2.8 is Weight 500 be Gear Ratio 1.30 ENGINE MOUNTING HEIGHT Mounting Hole Position 47 Verification Plans Height 1*Annie Baar Becom	F200XB Horsepower 200 He	1	1		Fuel Capacity	63 gai
Horsepower Voluntion Southern State of the Control	Horsepower 200 LP Industries ER Depleament 2.8 L Weight 460 be Gear Roole 1.36 ENCIME SIGNINTING HEIGHT Mounting More Position Versileties Plate Hought 1*Acome Base Botton PRIOPELLERIS	Horsepower 2016				Weight as Tiested	3,440 tte
Solution Deplement Deple	Industrian EFI Displacement 2.81 Weight 3.66 to the Start Forting 1.66	Section Conference Confer			24	F200XB	
Displacement Short Manufactured By: Short Manufactur	Engine mount 2 8 is to be See See See See See See See See See	Description		-	Ni spiperi	Horsepower	200 HP
Boot Manufactured By: Sport M	Weight 400 be Gear Fastie 1.30 ENGINE MOUNTING HEIGHT Wounting Hote Position Writington Plant Hought 1*Anne Stat Botton PROPELLERS	Performance Data Performance Data Data		6		Induction	ER
Boar Manufacture Bg: Reserve Boar - FO Bar - FO	Gear Poole 1.30 ENGINE MOUNTING HEIGHT Mounting Hole Poolson Verifiction Plant Hought 1* Admit Start Botton PROPELLERS	Description Part		etrouvanien van	VENT (0.0)	The state of the s	100000
PERFORMANCE DATA School Processing Control Co	ENGINE MOUNTING HEIGHT Mounting Hole Position Werilletion Plans Height PROPELLER/S	Personance Post P	-		the same of	200	
PERFORMANCE DATA Wounting Hole Position	Mounting Hote Position #1 Werklistics Plate Height 1*Acons Sair Boson PRIOPELLER/S	Performance Data Mounting Note Position Fig.		Bowls - PD Bus 2100 - Su	mente, SC 28884	Gear Rutie	1.80
CLEANING MANAGEMENT AND POSITION	Verifietise Plate Height 1"Asses Saar Boson PROPELLER/S	RPM MPH GPH MPG Westlates Flore Hought 1" Again Shir Eccord 1000 5.1 0.0 0.08 1500 5.7 1.5 5.15 5.15 5.15 5.1	10	MESSES SAMO	100000	ENGINE MOUNTING HEIGHT	
BAN MAIN COM MPC Verification Flore Height 1" Asset State	PROPELLERS	1000 5.7 1.9 5.15 PROPELLERS PROPELLERS 1000 5.7 1.9 5.15 PROPELLERS 1000 5.7 1.9 5.15 1000 11.9 9.2 3.79 1000 11.9 9.2 3.79 1000 11.9 9.2 4.21 4.81 Propeler Meterial Published Spartner Steel 1000 25.3 5.1 4.95 1000 10.9 10		PERFORMANCE	DATA	Mounting Note Position	J1
	Table 19 To the second	1900 5.7 1.9 5.15 PROPELLERS Palares Series	RPM	MPH G	'H MPG	Verdistics Plate Height	1" Above Blast Botton
	1 Description Annual Control of the	1900 5.7 1.9 5.15 PROPELLERS Palares Series			the worth -		
The state of the s	Marine Ma	2500 11 0 3.2 1.72		- 10	The second second	PROPELLER/S	
2000 83 20 445 Series Helance Series	Define Deline-DUD	2000 11.9 3.2 3.72	2000	88 1	0 4.15	Series	Helance Series-505
2900 11.0 0.0 170		1000 2012 42 481 Propeller Meterial Published Systems Sheet	2900	11.9	2 179	The state of the s	
Venete Part # 50F-45072	Yumaha Part # 56F-45972-10-00	2500 25.3 5.1 4.95		Illiniar 13	THE STATE OF THE S	100000000000000000000000000000000000000	
		#000 500 7.0 4.40 TEST CONDITIONS #000 543 50 3,8 Notice of People 5 500 563 13.4 2.50 Ar / Water Temperature Jumping 55.10 5 (5) (5) (6) (6) (6) (7) (7) (7) (7) (7) (7) (7) (7) (7) (7		100000		Propeller Material	Polished Staintens Steel
3500 25.3 5.1 4.96	Propeller Material Polished Staintens Steel	#000 343 5.0 3.88 Neither of Picciple 5.000 25.3 13.4 2.50 Ar. / Water Temperature Gunnam 25.100 5.000 43.6 17.0 2.55 Electron in the constraint Constrain	3500	25-3	1 4.36	TORUS CONTRACTOR	
4000 30.0 7.0 4.40 TEST CONDITIONS	Propeller Material Polished Stainbeas Steel	2000 25-3 13.4 2.53 Air / Water Temperature 74	4000	707	0 4.40	TEST CONDITIONS	
#900 343 5.0 3,88 Number of People	TOTAL CONTROL OF THE	5000 43.6 17.0 2.55 Wind Websity 9-3 right	4900	343	0 3,88	Number of People	
	TEST CONDITIONS Number of Pacple 3	5900 436 170 257 Wind Westly 9-3 mg	2000	39.3 1	4 293	The state of the s	300000
5000 393 13.4 2.93	TEST CONDITIONS Number of People 2 Air / Water Temperature (Names) 25 / 120 F	bosses state troop bear trial receip >-1 run		435			
500 5.1 13.4 250 Elevation in the contract Contr	TEST CONDITIONS Name of People 2 Air / Water Temperature (Januaria) 05 / 100 F Elevisión (Industria para trail 500 Level		The second second	10000	The State of the S	Wind Winolty	9-3 mph
	100000000	25:00 25:3 5.1 4.96	3000	202	2 481	100000000000000000000000000000000000000	
3500 253 5.1 4.96	Propeller Material Polished Staintess Steel	#500 949 5.0 3.88 Housing of People 95.1 25 10 10 10 10 10 10 10 10 10 10 10 10 10	3500	25.3	1 4,96	100000000000000000000000000000000000000	
4000 300 7.0 4.40 TEST CONDITIONS	Propeller Material Polished Staintens Steel	9000 36.3 13.4 2.53 Ar / Water Temperature (Faculties (Faculties) 25.10°	4000	207	0 4.40	TEST CONDITIONS	
#500 349 50 3.88 Number of People	THE PROPERTY OF THE PROPERTY O	900 43.6 17.0 2.51 Wed Woodly 9-3 right	4500	343	0 3.88	Company of the Compan	
	TEST CONDITIONS Number of People	5900 43.6 17.0 2.52 Wed Worky 9-3 npr	±000	39.3 1	4 293	The state of the s	300000
5000 393 13.4 7.93 Ar / Webs Temperature June 101.	TEST CONDITIONS Number of People	make the tree seems that we will be to be the tree		7-74			Sea Leve
900 95 134 250 Desition in security Est	TEST CONDITIONS Name of People Air / Water Temperature 2-manual 05 / 80* Electron participation produces and Electron El		TO COMMENT	10000	The State of the S	Wind Welocity	9-3 mpt
2000 39-3 13,4 2-93	TEST CONDITIONS Murities of People Air Water Impendian (Aurantia) Elevation in the amount and area Word Nationally 53 mg		Time to Plane 0-35 MPH	ممر		Comments Net registrosce (Claric chick) and the comments of t	con ma remanda de Buterri la bajo com- jos para la guiderna anti are amenda mus debit gertimento refer activa- ción del gertimento refer activa- para la comita de la comita de la para la comita de la comita de la para la comita de la comita de la mas debitante el ma remanda de la partir de la comita de la comita de partir de la comita de la comita de la comita de partir de la comita de la comita de la comita de partir de la comita de la comita de la comita de la comita de partir de la comita de la comita de la comita de la comita de partir de la comita de la comita de la comita de la comita de partir de la comita de la comita de la comita de la comita del la comita de partir de la comita de la comita de la comita del la comita de la comita de partir de la comita del

200 TID

Note: This is posted on our website at

http://sportsmanboatsmfg.com/heritage-211-center-console/

Partners, SA SCHOL-HOST SE VALIDA-I

For either Parkintgense Stateling, visit own nam

CODE Familia blaze Depositive, U.S.A. di regra man-



MAN SCHOOL SECTION AND

For either Partnerspens Bulleting, visit even say

BISINE Famely Minter Doppments, U.E.A. Ht. garda work

Certifications & Registrations



NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit http://www.nmma.org/certification/boats.

Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail. When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.





LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.

VISUAL DISTRESS SIGNALS

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.





Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:



WARNING



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



DANGER



IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

 
Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.





Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.






Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.


If your label is damaged. Please call Sportsman's parts department for replacement stickers.





Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

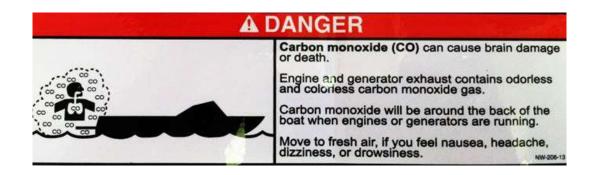

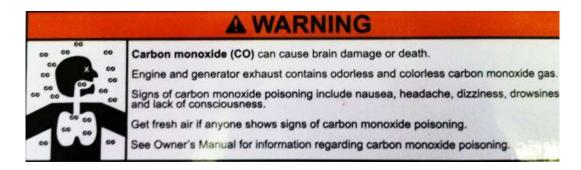



Boating Safety Label Locations





MEETS U.S. EPA EVAP STANDARDS USING CERTIFIED COMPONENTS

Sportsman Boats Mfg. Summerville, SC





The Sportsman Heritage 211 has a 10 Person Capacity. Seating locations are shown below.






FIERITACE S 2117

Wire Harness



Fuse Panel

The fuse panel is located under the console. It is clearly labeled for easy identification. The bilge pump's 6 amp fuse is also located here. There is also a 30 amp breaker branching off the main battery switch. If an electrical component of your boat stops working properly, this should be the first place to look.

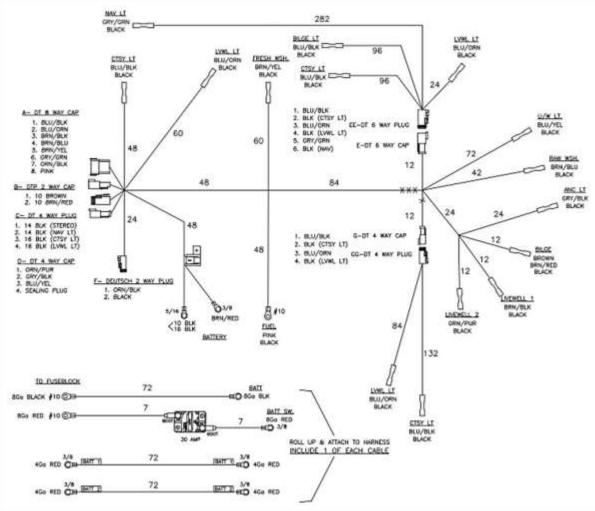



Electrical & Plumbing Systems Garmin 9" Package




Sportsman offers the Garmin 942xs multi-function Display which integrates the following functions with ease:

- -ClearVü
- -SideVü
- -Stereo
- -Sonar
- -Radar Capability
- -Navigation
- -Engine Instruments
- -Coastal Charts




PERITAGE S 211

Garmin 9" Package

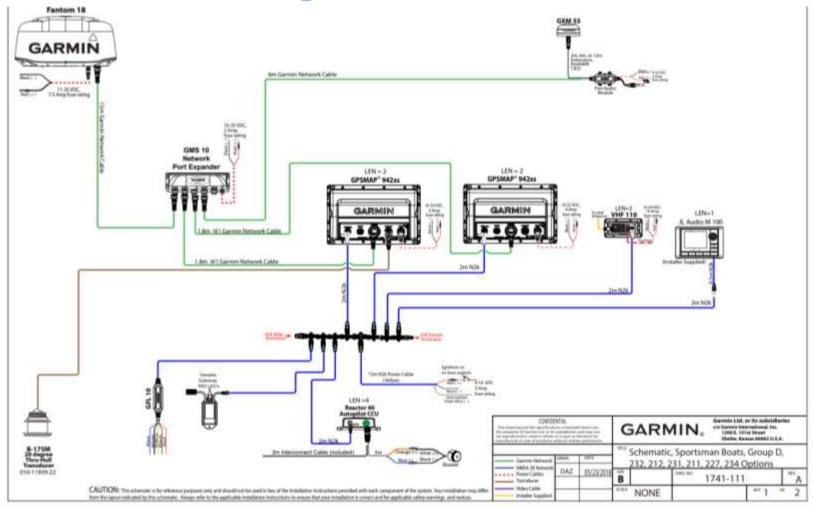



Lights

 

- NAV position will turn on the red and green navigation lights and the white all-round light for night driving.
- **ANC** turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
- Off is in the center position.

Sidelights: The Heritage 211 has integrated rub rail navigational lights installed at the bow (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

All-round/Anchor Light: This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 225° and fixed to show from anywhere ahead, to just behind the beams of the vessel. See the figure to the right for location.

Bow Sidelights

If you have the underwater lights option installed, they can be turned on with the switch at the helm labeled "Accessory 1."

If your boat has a T-Top, the anchor light is located on top of the T-Top at the aft end.
With no T-Top, the location is at the stern of the boat as shown here.

Anchor Light if no T-Top

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.








Stereo Upgrade

With the upgrade your boat is equipped with a JL Audio MM50 Stereo and 4 MX Speakers. The stereo is water resistant and built to withstand all elements. It gives an intuitive interface with and easy to read 2.8 inch LCD display with day and night functions.

If your boat has a Fibergalss T-Top, the aft pair of speakers (the left two speakers in the figure to the left) will not be located here. These two speakers will be located on the T-Top underside.



Speakers

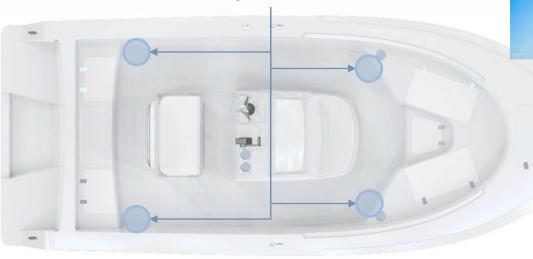


If you purchased the JL stereo upgrade option, this comes with JL Quart speakers, a four channel amplifier for your pair of 8" subwoofers. An 8 channel amp to power your speakers




PERITA CE

Stereo Diagram

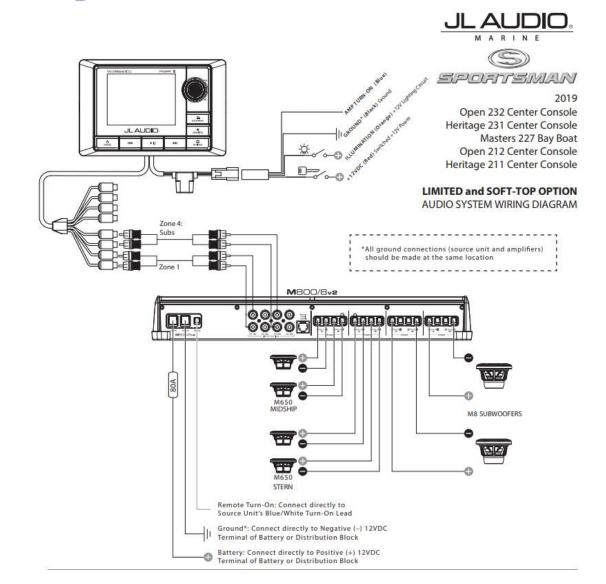

Electrical & Plumbing Systems 8 Channel Amp Diagram



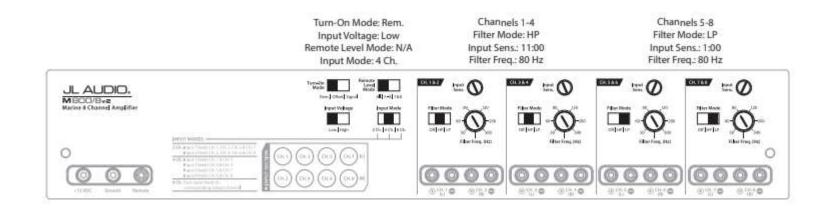

The Heritage 211 Premium Stereo is equipped with a M800/8v2 (8 channel Amplifier). This incredibly flexible amplifier packs a serious full-range punch and delivers a staggering 100 watts to each of its eight channels into 2 ohms (28.8V, 1% THD). The breakthrough that makes this much power possible in such a small chassis is our NexD™ ultra-high-speed switching design, which allows for full bandwidth Class D operation with extremely low distortion and outstanding efficiency.

Electrical & Plumbing Systems Trim Tabs Option



Your Heritage 211 may have the trim tabs installed as an option. If so, they will be attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions.

The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab. The lights on the left indicate the port tab position, and the lights on the right indicate the starboard tab position.





Control Panel

Trim Tabs



Trim Tabs Option



If you keep your boat in a wet slip/marina environment. Here is a list of different anodes recommended for various water types to prolong the life and shine of your stainless steel tab. Never use a wire brush to clean your tab!

Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-18001K)

Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water

Proven to last longer than zinc due to increased capacity

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-24779(SH))

Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water




Trim Tabs



Bilge Pump

A small bilge pump is located on the hull bottom at the stern of your boat. Water is pumped out of a thru-hull fitting located on the starboard side of the boat near the transom. The pump may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pump on manually by flipping on your bilge switch located on the switch panel at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pump is designed to remove excess water only, and it is not intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.

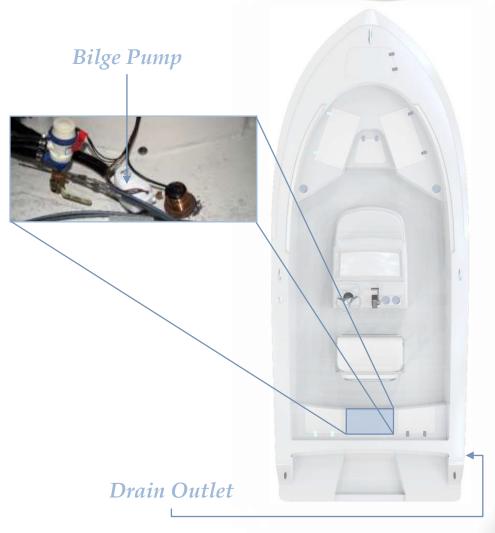




PERITAGE S

Livewells


The Sportsman Heritage 211 comes with two 8 gallon livewells at the stern of the boat. For easy access to the pump and plumbing system, open the total access hatch forward of the transom. The livewell pump is located next to the bilge pump in the hull of the boat, and the livewell fill hoses are connected to the top of the pump. To operate the livewells, open the pump valve in the bilge, turn on the livewell switch at the helm, and turn the fill valve in the livewell to "open." This will fill both stern livewells. Both livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, each livewell has LED lighting installed. To illuminate the livewells, turn on the switch at the helm.

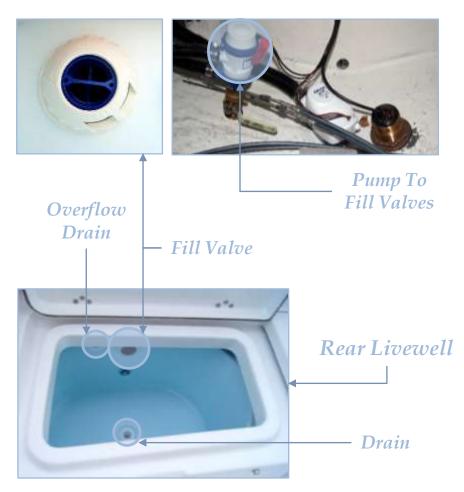



Raw Water Wash-down

Your Heritage 211 has the raw water washdown installed as an standard feature. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch panel at the helm. The wash-down outlet is found on the starboard side of the boat under the gunwale. See the figures here for important feature locations for the raw water washdown system.

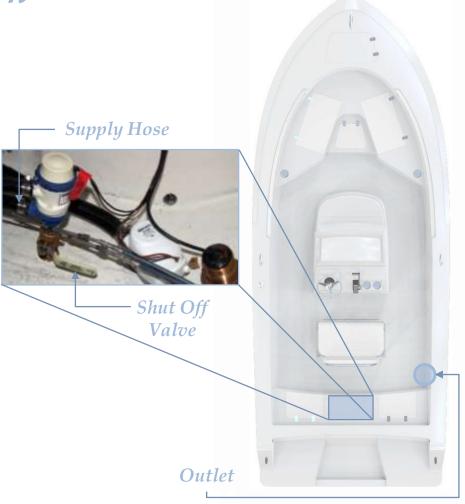



Fresh Water Wash-down

Your Heritage 211 may have the freshwater wash-down installed as an option. The freshwater fill fitting and outlet are marked and located on the starboard side of the console. Do not leave the tank full if your boat will be left unattended for an extended period of time; pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the The pump is mounted on the inside of the console on the starboard side. To operate this system, turn on the switch labeled "ACCESSORY 2" at the helm. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.






Fuel Tank

The Sportsman Heritage 211 comes with a fuel tank installed (61 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and fill cap. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out gassing emissions through a vent in the new designed

fuel fill cap.

Note: This photo was taken during the assembly process. At this stage, some of the hoses had not yet been connected. In your boat all lines and hoses will be connected as necessary.

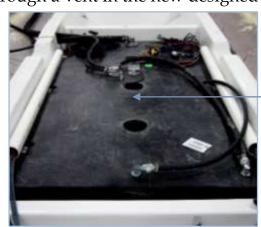





Diurnal Fuel System



3luSkies EPA DIURNAL **FUEL SYSTEMS**

NOTE: Pressure may be present when opening your deck fill, regardless of system type.



Only open the fuel cap for refueling

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

- 1. Produce a clean refueling shut off event
- 2. Create a 5% vapor space
- 3. Reduce the propensity of a refueling spit-back event.
- 4. Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation



Diurnal Fuel System (cont'd)


Vapor Space (Ullage) And Refueling Management

Another fuel system necessity to remain EPA complaint it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation. BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.


Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.



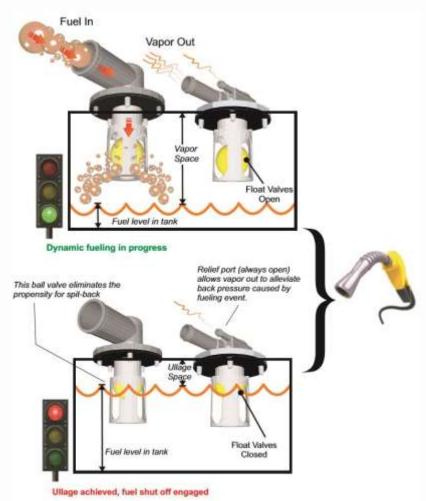



Tank Vapor Space & Fluid Management

 

This vent valve shuts off the refueling vapors and creates back pressure to lift the fill valve ball into place. This fill valve ball is set lower than the vent valve ball but does not close until the refueling vapors are shut off by the vent valve.



Diurnal Fuel System: Refueling



Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)

Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.

 
Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.



CONTENTS CAN BE UNDER PRESSURE AVOID SERIOUS INJURY OR DEATH FROM WARNING FIRE OR EXPLOSION OPEN SLOWLY IN WELL VENTILATED AREA NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.



GASOLINE CONTENTS UNDER PRESSURE. FUEL SPRAY MAY OCCUR.

- OPEN CAP SLOWLY 2. INSERT FUEL NOZZLE 3. BEGIN & CONTINUE FUELING UNTIL FUEL NOZZLE KICKS OFF 4. WAIT 10 SECONDS & CONTINUE FUELING UNTIL NOZZLE KICKS OFF A SECOND TIME 5. RETURN NOZZLE TO PUMP
- DO NOT TOP OFF




Boating Navigation Rules




There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- -Meeting: you are approaching another vessel head-on
- -Crossing: you are travelling across the path of another vessel
- -Overtaking: you are passing or being passed by another vessel

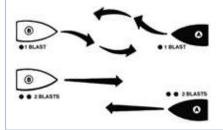


When Meeting Port-to-port: Continue on course. The same holds true for meeting starboard-to-starboard.

When Meeting Head On: As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

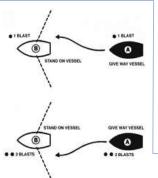

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

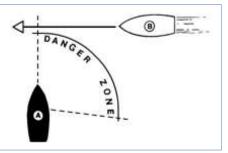

When Overtaking Another Boat: The boat being overtaken is the privileged vessel. Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use one blast to pass on the right, and two blasts to pass on the left.

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.



Warranty and Services



Product Changes

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. The boat owner is responsible for delivering the boat to the dealer for warranty service. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. Sportsman will not reimburse owners for unauthorized warranty work.



Warranty and Services



SPORTSMAN BOATS LIMITED WARRANTY

Ten-Year Hull Limited Warranty: This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term "Hull" shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term "Structural Hull Defect" shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One Year Nonstructural Limited Warranty: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term "Nonstructural Defect" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

Registration and Transfer of Limited Warranty: Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.



Warranty and Services

PIERITACE STATES

SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

EXCLUSIONS:

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "Exclusions:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "Commercial Purposes" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc. 113 Isaac Way · Summerville, South Carolina 29483 Telephone (843) 376-2628 · Fax (843) 376-2636

Email sales@sportsmanboatsmfg.com

Website www.sportsmanboatsmfg.com

P.O. Box 2100 Summerville, SC 29484

