

# Table of Contents

# Page

# **Topic**

Introduction	3
Important Information	4
Specifications	5
Overall Dimensions & Terminology	6
Features & Performance	7
Certifications & Registrations	13
Boating Safety	14
Electrical & Plumbing Systems	20
Fuel System	33
Boating Navigation Rules	38
Warranty & Services	39
Contact Information	42



# Introduction



### WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard. Sportsman Boats builds the fastest growing line of family-friendly center console boats in-class, built with the latest designs, procedures and materials to give you and your family unparalleled performance with a dry, safe and comfortable ride

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines, Tommy Hancock



# Important Information

BOAT INFORMATION / SPECIFICATIONS			
MODEL:	HULL SERIAL #:		
PURCHASE DATE:	DELIVERED:		
IGNITION KEY #:	REGISTRATION #:		
DRAFT:	WEIGHT:		
VERTICAL CLEARANCE:			
ENGINE / PROPELLER INFORMA	TION		
ENGINE MAKE:	MODEL:		
ENGINE SERIAL #:			
PROPELLER MAKE:	# OF BLADES:		
DIAMETER / PITCH:	MODEL:		
PART #:			
OPTIONAL EQUIPMENT / OPTIO	N PACKAGES		
TRAILER INFORMATION			
MAKE:	MODEL:		
SERIAL #:	GVRM:		
ADDITIONAL INFORMATION:			
DEALER	SPORTSMAN		
NAME:	PHONE:		
PHONE:	REPRESENTATIVE:		
SALES PERSON:	ADDRESS:		
SERVICE MANGER:			
ADDRESS:			



We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.



# Specifications




Length Overall	20'4"
Beam	8'
Draft	12"
Deadrise at Transom	15°
Approximate Usable Fuel Capacity	64 gal.
Approximate Dry Weight	2570 lbs.
People Capacity	7 persons
Maximum Engine Horse Power	150 HP (4 Stroke)



# Overall Dimensions & Terminology





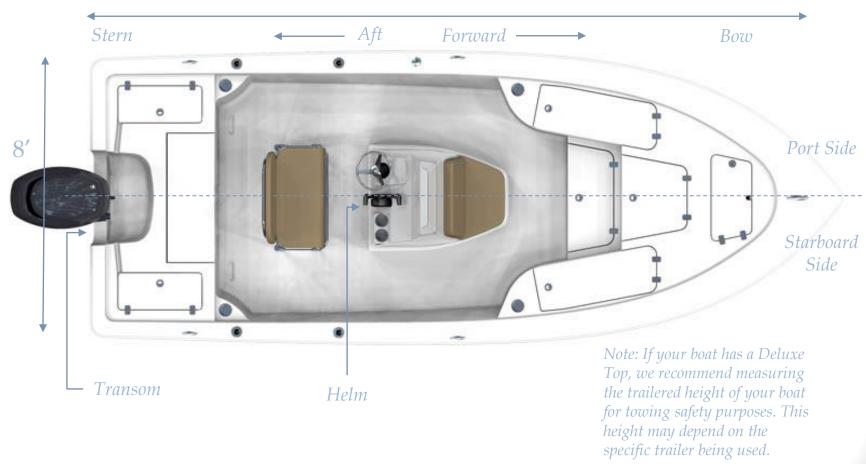



### Standard Features



- SportTech<sup>TM</sup> Advanced Fabrication Process
- SportLink<sup>TM</sup> Electronics Integration System
- Garmin GPSMAP® 942xs MFD 9"
- Airmar B60 Thru-Hull Transducer
- (1) 20 Gallon Rear Livewell
- (1) 20 Gallon Rear Recirculating Livewell w/ Pro-Air
- 10 Gallon Livewell Front Seat of Console
- 10-Year Hull Warranty
- 2 Flush Mount Gunwale Rod Holders
- 6 Vertical Rod Holders on Console (Boats w/o T-Top)
- 64 Gallon Fuel Tank w/ Fuel Level Sensor
- Advanced Fiberglass Stringer System (No Wood)
- All White Hull (Sides & Bottom)
- Anchor Storage

- Console Footrest w/ Glove Box & Storage Bin
- Console Grab Rail
- Console Windscreen
- Dash Panel Cover
- Deluxe Leaning Post w/Flip Up **Bolsters**
- Dual Battery Configuration w/ Switch & Trays
- Extra Large Forward Storage Box •
- Grip Tex Yacht Style Non-Skid
- High Speed Livewell Pick Up
- Horn
- Hvdraulic Tilt Steering
- Interior LED Lighting Package
- JL Audio Combo USB & 3.5 mm Audio Jack
- Large Bow Casting Deck w/ Lockable Storage for 10 Rods



- · Large Rear Casting Deck
- NMMA Certified
- Premium Marine Vinyl with Distressed Look
- Pull-Up Cleats
- Rear Fold Up Bench Seat w/ Storage
- Rear Total Access Hatch
- Recessed Bow Hand Rails
- Rub Rail Navigation Lights
- Self Bailing Cockpit
- Stainless Steel Cup Holders 6
- Stainless Steel Propeller
- · Stainless Steel Rub Rail

- Jet Black

- Stainless Steel Steering Wheel w/ Knob
- Stainless Steel Switches
- Swim Platform w/ 3 Step Ladder
- **Trolling Motor** Plug/Harness
- Under Gunwale Rod Racks
- Underlid Gasket

### Color Selection

- Driftwood
- Sea Mist Green
- Ice Blue
- Silver Cloud
- Island Blue
- Steel Blue
- White

### Powder Coat Selection

- Black - White



## Featured Packages

Note: If you purchased the Masters 207 Sport or Platinum Packages, the Sport and Platinum Package features are additional to the standard features previously listed.



- Deluxe T-Top w/ LED Lighting
- Powder Coating
- JL Audio MM50 Stereo w/ M3 Speakers
- Freshwater Washdown w/ 13 gal.
   Tank
- Raw Water Washdown
- Underwater Lights
- Compass
- Light Hull Color
- Helm Pad

### Stereo

- MM50 Source Unit
- JL M3 Speakers



### Sports Package

- JL Audio MM50 Stereo w/ M3 Speakers
- Freshwater Washdown w/ 13 gal. Tank
- Raw Water Washdown
- Underwater Lights
- Compass



## **Additional Options**




- Garmin VHF 110 Radio w/ Antenna
- Garmin GXM™ 53 SiriusXM® Weather Antenna
- Airmar B175M CHIRP Thru-Hull Transducer Upgrade
- JL Audio MM50 Stereo w/ M3 Speakers
- Bimini Top
- Bow Casting Chair
- Bow Cushion Set / Sundeck
- Compass
- Console Cover
- Custom Color Engine
- Dark Hull Color(Black/St Blue)
- Dark Hull Color(Black/St Blue) Upgrade
- Deluxe T-Top w/ LED Lighting
- Edson 13" SS Comfort Grip Steering Wheel w/ PowerKnob
- Freshwater Washdown w/ 13 gal. Tank
- Gunwale Rod Holders / Each
- · Helm Pad
- Yeti Cooler w/Slide Out Track
- · Light Hull Color
- Mooring Cover
- On-Board Battery Charging System
- Optimus Electronic Power Steering w/ Tilt



- Powder Coating
- Powder Coating for Ski Tow Bar
- Raw Water Washdown
- Removable Reclining Bow Backrest w/ Seat Cushions
- SeaStar Jack Plate
- SeaStar ProTap Controller (req. Jack Plate)
- Ski Tow Bar
- Spray Shield
- Transhield Shipping Cover (w/o Top Only)
- Trim Tabs
- Under Leaning Post Tackle Storage
- Underwater Lights



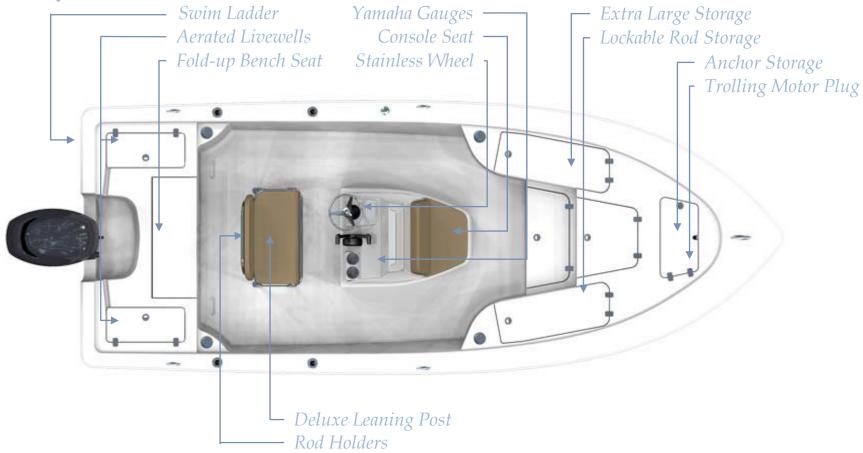




## Below Deck

All elements of the Sportsman Masters 207 are designed in CAD 3D. This ensures maximum capacity for storage compartments, tank, and linewells



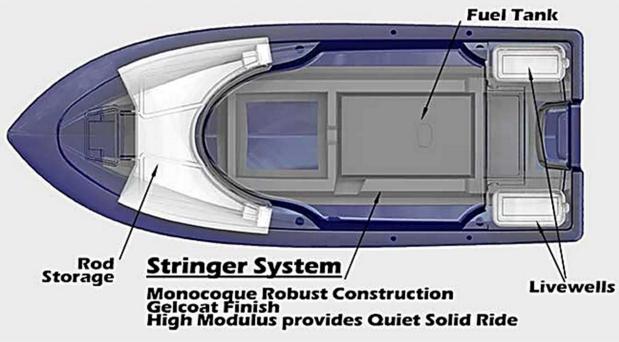



115 HP

### 150 HP

# SOIL SOIL

### PERFORMANCE BULLETIN

**@YAMAHA** 

Test Date 8/8/14

YPB#: PB\_SPT\_Masters207\_F115XB\_2014-08-08\_BAY





Boat Manufactured By: Sportsman Boats • 113 Issac Way • Summerville, SC 29483 843-376-2628 • www.sportsmanboatsmfg.com

RPM	MPH	GPH	MPG
1000	3.5	0.5	7.00
1500	5.2	0.8	6.50
2000	6.7	1.4	4.79
2500	7.9	2.1	3.76
3000	10.6	3.0	3.53
3500	18.9	3.6	5.25
4000	24.6	4.4	5.59
4500	29.0	5.5	5.27
5000	32.6	7.0	4.66
5500	36.3	9.0	4.03
6100	40.0	10.6	3.77



Time to Plane

Sportsman® Masters 207	
ength	20' 4"
Beam	8'
Ory Weight (Boat Mfr. Pub)	2,000 lbs
Maximum HP	150
Fuel Capacity	64 gal
Weight as Tested	3,188 lbs

F115XB	
Horsepower	115 HP
Induction	EFI
Displacement	111.8 cu in
Weight	386 lbs
Gear Ratio	2.15

### ENGINE MOUNTING HEIGHT

Mounting Hole Position	#1
Ventilation Plate Height	3/4" Above Boat Bottom

### PROPELLER/S

Series	Performance 3-Blade Series	
Diameter/Pitch	13-1/4 x 16	
Yamaha Part #	MAR-GYT3B-V4-16	
Propeller Material	Polished Stainless Steel	

### **TEST CONDITIONS**

Number of People	2
Air / Water Temperature (Fahrenheit)	95 / 85° F
Elevation (in feet above sea level)	Sea Level
Wind Velocity	5-10 mph

Comments: Test weight includes 3/4 tank of fuel, 1 battery, safety and test gear.

Notice to Consumer: The information and data contained in this Performance Bulletin is approximated and subject to many different factors and residue. It is provided as a judicilion only and should not be risked upon as representative of actual performance. Your boards performance may be different man the Information contained in this Performance Bulletin flow to various factors, locking your boards actual weight, wind and water conditions, temperature, humdly, elevation, bottom parts, board opposite actions, Present according to the proper part of the proper parts of the performance Bulletin and you may not have been performed useful or board weight contained in this Performance Bulletin any or may not have been performed using Variantal Powerharde components. Yumahar servers the right to change the specifications and performance data of this Performance Bulletin or expire without notice. This societies contained in this properties of the performance Bulletin or expire without notice. This societies contained in this properties of the performance Bulletin or expire without notice. The societies contained in the performance Bulletin or expire with or discussion to change the second contained and performance data of this Performance Bulletin or expire without notice. The societies of the performance Bulletin or expirate contained in the performance Bulletin or expirate according to the comparison of the performance Bulletin or expirate according to the defendation perspective only, and were of heterologic to be an endocrined.

For more information Yarnaha Motor Corporation, U.S.A. OEM Division, Marine Group

1270 Chastain Fload NW Kennesaw, GA 30144 - (800) 88-YAMAHA For other Performance Bulletins, visit www.yamaha-motor.com

© 2014 Yamaha Motor Corporation, U.S.A. All rights reserved.

# PERFORMANCE BULLETIN



Test Date 8/3/13

### YPB#: PB\_SPT\_Masters207\_F150XA\_2013-08-03\_BAY



SPORTSMAN

Sportsman Boats • PO Box 2100 - Summerville, SC 29484
843-376-2028 • www.aportsmanboatsmilg.com

RPM	MPH	GPH	MPG
1000	3.8	0.7	5.43
1500	5.9	1.2	4.92
2000	7.1	2.1	3.38
2500	9.9	3.3	3.00
3000	19.5	3.8	5.13
3500	26.4	5.0	5.28
4000	31.0	6.2	5.00
4500	35.9	8.1	4.43
5000	40.6	9.9	4.10
5500	45.5	12.5	3.64
6000	50.0	15.3	3.27

Time to Plane 0~30 MPH



Sportsman® Masters 207	
Length	20' 4"
Beam	8'
Dry Weight (Boat Mr. Pub)	2,000 lbs
Maximum HP	150
Fuel Capacity	60 gal
Weight as Tested	3,069 lbs

### F150XA

LISONA	
Horsepower	150 HP
Induction	EFI
Displacement	2.7 L
Weight	491 lbs
Gear Ratio	2.00

### **ENGINE MOUNTING HEIGHT**

Mounting Hole Position	п
Ventilation Plate Height	1" Above Boat Bottom

### PROPELLER/S

Series	Reliance Series-SDS
Diameter/Pitch	14-1/4 x 18
Yamaha Part #	68F-45978-10-00
Propeller Material	Polished Stainless Steel

### TEST CONDITIONS

Number of People	2	
Air / Water Temperature (Fahrenheit)	90 / 80° F	
Elevation (in feet above sea level)	Sea Level	
Wind Velocity	5-10 mph	

Comments: Test weight includes 1/2 tank of fuel, 1 battery, safety and test gear.

Notice to Consumer: The information and data contained in this Performance Bulletin is approximate and subject to many different factors and visables. It is provided as a guideline city and should not be rided upon an appreciation of a data partitionaries. The United performance has been been placed to the provided performance of the pr

For more Information Yamaha Motor Corporation, U.S.A. OEM Division, Marine Group 1270 Chastain Float NW

Kernesaw, GA 30144 - (800) 88-YAMAHA
For other Performance Bulletins, visit www.yamaha-motor.com

© 2013 Yamaha Motor Corporation, U.S.A. All rights reserved

**Note:** This is posted on our website at

http://sportsmanboatsmfg.com/masters-207-bay-boat/



# Certifications & Registrations



### NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit <a href="http://www.nmma.org/certification/boats">http://www.nmma.org/certification/boats</a>.

### Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail. When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.



### LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

### REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

### FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

### SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

### PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.

### **VISUAL DISTRESS SIGNALS**

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.





Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:



### WARNING



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



### **DANGER**



IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.





Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.



# ROTATING PROPELLER MAY CAUSE SERIOUS INJURY OR DEATH. SHUT OFF ENGINE WHEN NEAR PERSONS IN THE WATER.


Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.


If your label is damaged. Please call Sportsman's parts department for replacement stickers.





Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

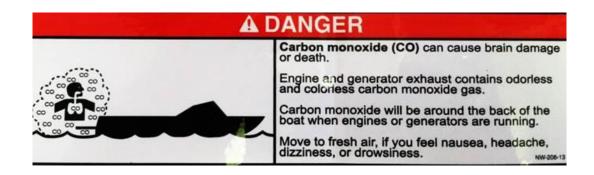


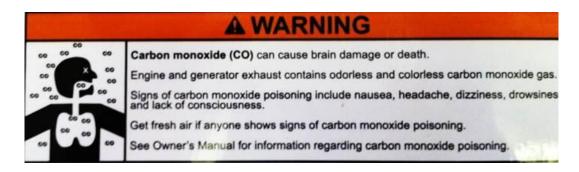




# Boating Safety Label Locations




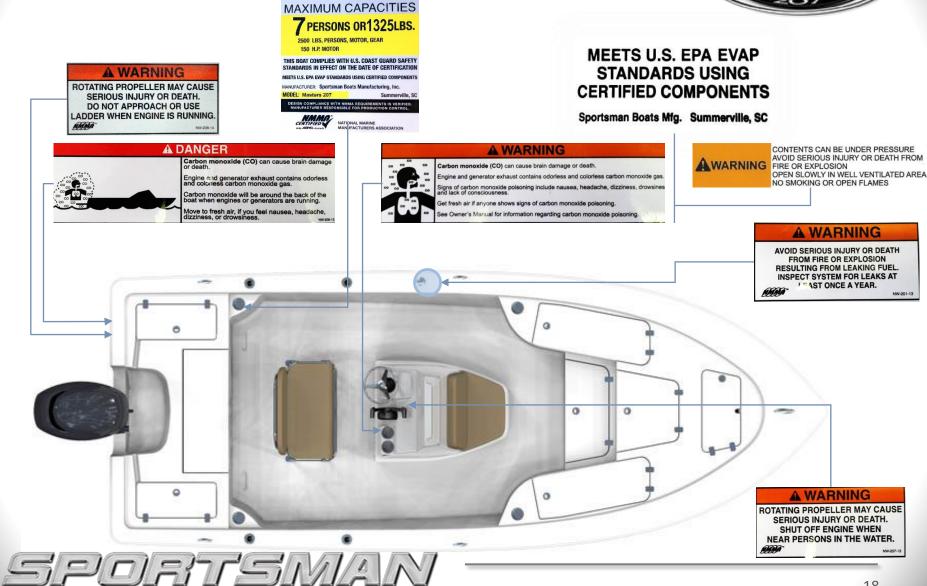

The Sportsman Masters 207 has a 7 Person Capacity. Seating locations are shown below.

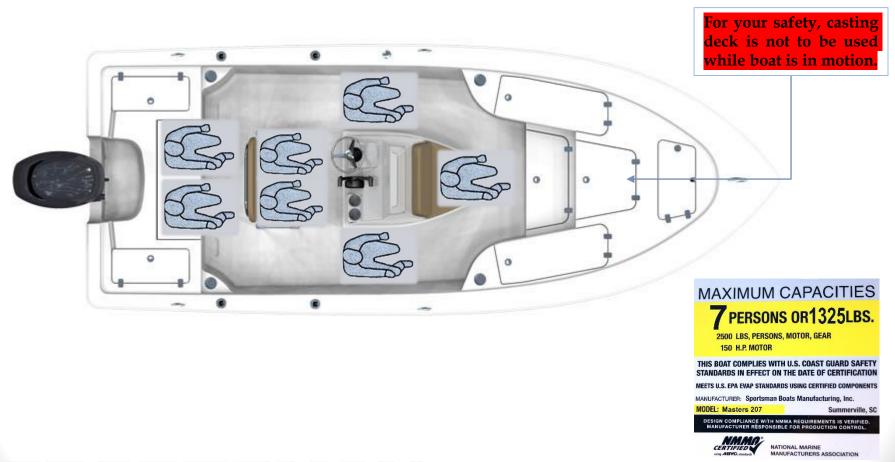




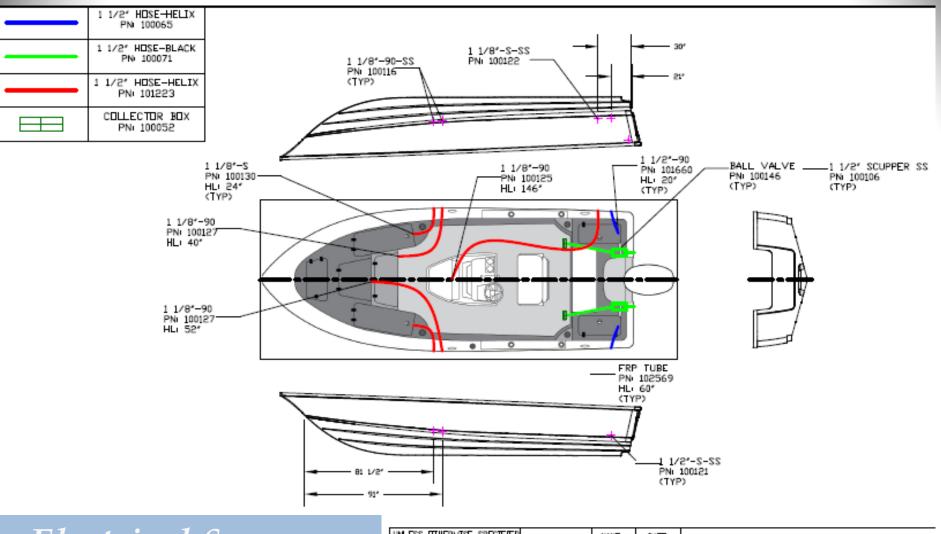

PROPRIETARY AND CONTINENTIAL
THE INFORMATION CONTAINED ON THIS
DRAVING ES THE SOLE PROPERTY OF
SPORTSHAN BOATS DIC. ANY
REPRODUCTION IN PART OR AS A WHOLE
WITHOUT THE WRITTEN PERMISSION OF
SPORTSHAN BOATS INC IS
DOCUMENTED.

UNLESS OTHERVISE SPECIFIED		NAME	DATE	SPORTSWAN	
DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± 1/16" ANGULAR: ±0.5 deg	IRAWN	ABT	2/19		
	CHECKED			TITLE	
	ENG APPR.			207 DRAIN HOSE	
	MFG APPR			ROUTING	
INTERPRET GEDMETRIC TOLERANCING PER	Q.A.			KLOTING	
	COMMENTS				
MATERIAL N/A				SIZE DWG. NO.	REV
FINISH				A 207CT-CW*000	
DO NOT SCALE DRAVING				SCALE: 1:8 WEIGHT: SHEET	1 DF 1

### Wire Harness

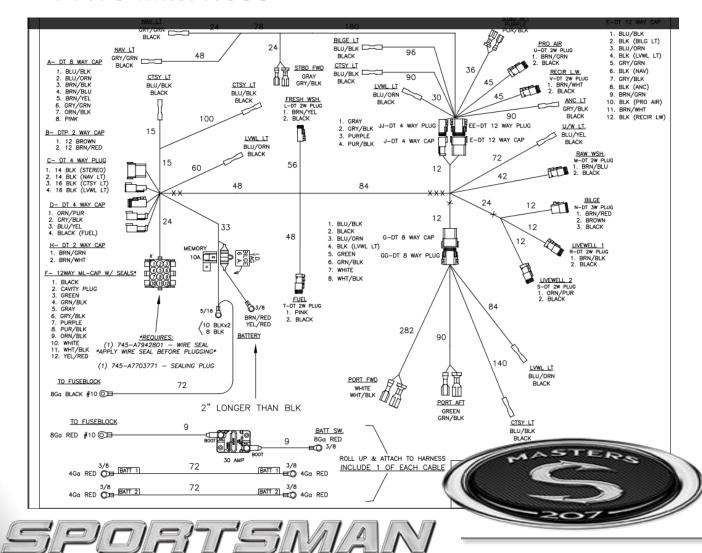



The fuse panel under located the console. It is clearly labeled for easy identification. The bilge pump's 6 amp fuse is also located here. There is also a 30 amp breaker branching off the main battery switch. If an electrical component of boat vour stops working properly, this should be the first place to look.



### SportLink®

### **Electronics Integration System**

Take control of your electronics with SportLink® Electronics Integration System, equipped standard on every Sportsman Boat. The Garmin & <u>JL Audio</u> powered electronics packages have been carefully designed around each model to meet an exceed your needs out on the water.


Sportsman offers the Garmin 942xs multi-function Display which integrates the following functions with ease:

- -ClearVü
- -SideVü
- -Stereo
- -Sonar
- -Radar Capability
- -Navigation
- -Engine Instruments
- -Coastal Charts







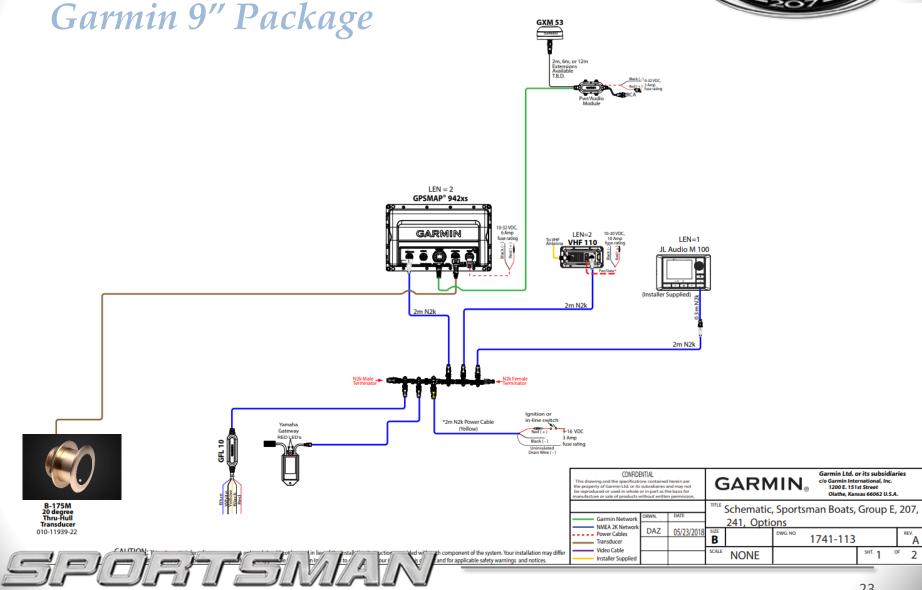

# Lights

The *NAV/ANC Switch* is a 3-position switch on the console that controls the running lights.

- NAV position will turn on the red and green navigation lights and the white all-round light for night driving.
- **ANC** turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
- Off is in the center position.

Sidelights: The Masters 207 has integrated rub rail navigational lights installed at the bow (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

**All-round/Anchor Light:** This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 360° See the figure to the right for location.

### Bow Sidelights

If you have the underwater lights option installed, they can be turned on with the switch at the helm labeled "Accessory 1."

If your boat has a T-top, the anchor light is located on top of the T-top at the aft end. With no T-top, the location is at the stern of the boat as shown here.

# Anchor Light if no T-Top

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.







# Electrical & Plumbing Systems Stereo Upgrade



With the upgrade your boat is equipped with a JL Audio MM50 Stereo and 4 M3-650X Speakers. The stereo is water resistant and built to withstand all elements. It gives an intuitive interface with and easy to read 2.8 inch LCD display with day and night functions.










# Stereo Diagram






2019 Standard Audio System Wiring Diagram

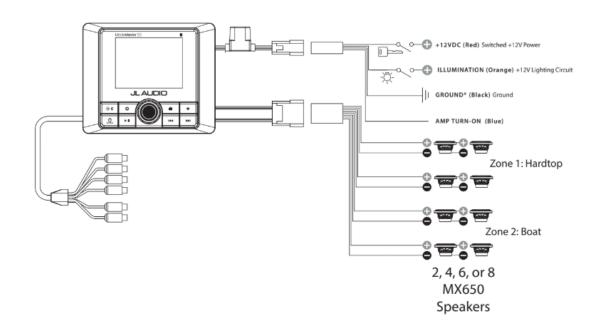

# Trim Tabs Option

Your Masters 207 may have the trim tabs installed as an option. If so, they will be attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions.

The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab. The lights on the left indicate the port tab position, and the lights on the right indicate the starboard tab position.

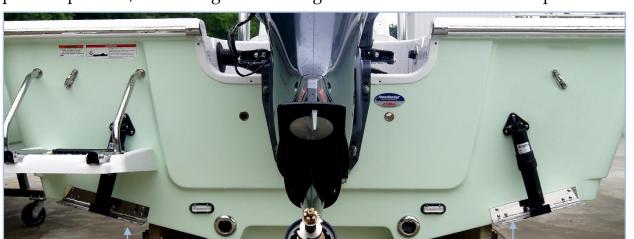





Control Panel

Trim Tabs



# S 201

# **Trim Tabs Option**

If you keep your boat in a wet slip/marina environment. Here is a list of different anodes recommended for various water types to prolong the life and shine of your stainless steel tab. Never use a wire brush to clean your tab!

### Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-18001K)

### Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water

Proven to last longer than zinc due to increased capacity

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-24779(SH))

### Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water




Trim Tabs



# Bilge Pump


A small bilge pump is located on the hull bottom at the stern of your boat. Water is pumped out of a thru-hull fitting located on the starboard side of the boat near the transom. The pump may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pump on manually by flipping on your bilge switch located on the switch panel at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pump is designed to remove excess water only, and it is not intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.

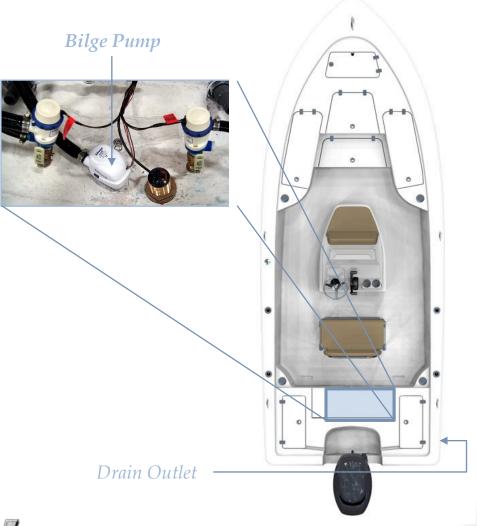



## Livewells

The Sportsman 207 comes with two 20 gallon livewells at the stern of the boat and one 10 gallon livewell under the front seat of the console. For easy access to the pumps and plumbing systems, open the total access hatch forward of the transom. The livewell pumps are located on either side of the bilge pump in the hull of the boat, and the livewell fill hoses are connected to the top of the pumps. To operate the livewells, turn on the livewell switch at the helm and turn the fill valve in the livewell to "open." To operate the starboard aft livewell and the console livewell, use the switch labeled "Livewell 1." To operate the port aft livewell, use the switch labeled "Livewell 2." All livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, each livewell has LED lighting installed. To illuminate the livewells, turn on the switch at the helm.

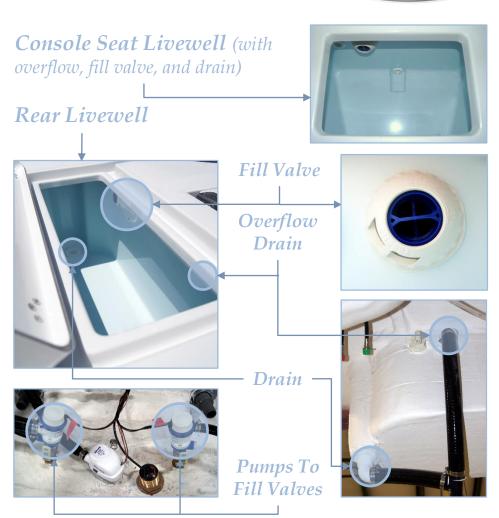




# Electrical & Plumbing Systems Raw Water Wash-down



Your Masters 207 may have the raw water wash-down installed as an option. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch panel at the helm. The wash-down outlet is found on the starboard side aft of the Gunwale cap. See the figures here for important feature locations for the raw water wash-down system.

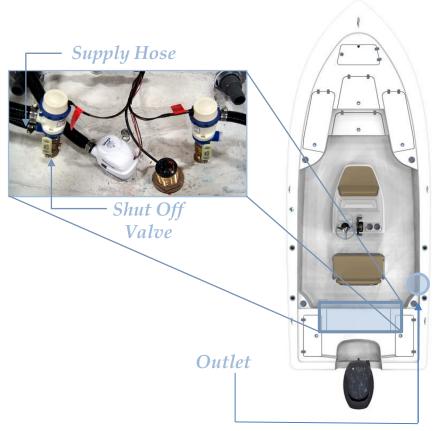





# Recirculating Aerated Livewell


Your Sportsman Masters 207 has a recirculating livewell as a standard feature. The starboard aft livewell is equipped with an aeration and recirculation system. The two black strips on the inside walls of the livewell are part of the aeration system. The air pump (mounted on the side of the livewell) pushes air through the air stone at the base of each strip, which produces air bubbles to oxygenate the water. This feature is best for keeping bait alive overnight or for use when the boat is not in use, because it draws very little power. The recirculation system features an intake (with a strainer cover, shown in the figure) and an outlet water jet. The jet is mounted in the corner of the livewell in order to allow for optimal water recirculation when in use. The recirculation pump is a white tsunami water pump mounted on the side of the livewell. This system is operated with a 3-way switch at the helm of the boat. The system is off

Note: The set-up in this figure is not exactly like the set-up in your boat. This is just a simple representation of the major features for this system. The exact mounting locations will be different in your boat than the locations shown here.

Air Pump

Air Stone

Recirculation Intake

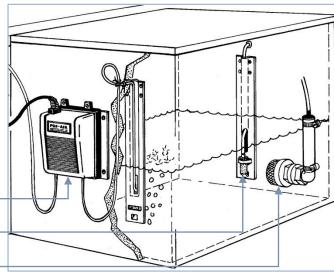

with the switch in the middle position. With the switch up, the aeration system alone will run, which draws very little power. With the switch down, the recirculation system will run. The figure here displays most of the important features of the recirculating livewell system.




## Fresh Water Wash-down

Your Masters 207 may have the freshwater wash-down installed as an option. The freshwater fill fitting and outlet are marked and located on the stb side of the console (as shown in the figure to the right). **Do not** leave the tank full if your boat will be left unattended for an extended period of time; pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the pump. The pump is mounted on the inside of the console on the starboard side. To operate this system, turn on the switch labeled "ACCESSORY 2" at the helm. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.





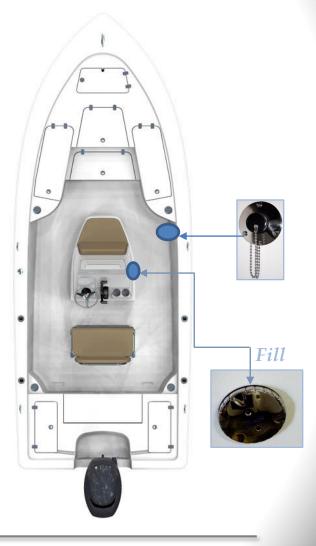




## Fuel Tank

The Sportsman Masters 207 comes with a fuel tank installed (64 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and fill cap. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out gassing emissions through a vent in the new designed

fuel fill cap.

Note: This photo was taken during the assembly process. At this stage, some of the hoses had not yet been connected. In your boat all lines and hoses will be connected as necessary.



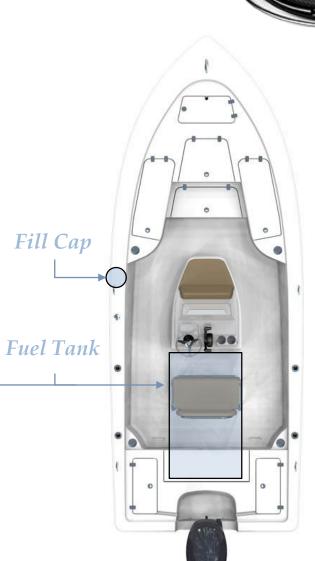



## Diurnal Fuel System



# **3luSkies** EPA DIURNAL **FUEL SYSTEMS**

NOTE: Pressure may be present when opening your deck fill, regardless of system type.



### Only open the fuel cap for refueling

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

### What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

- 1. Produce a clean refueling shut off event
- 2. Create a 5% vapor space
- 3. Reduce the propensity of a refueling spit-back event.
- 4. Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation



## Diurnal Fuel System (cont'd)

### Vapor Space (Ullage) And Refueling Management


Another fuel system necessity to remain EPA complaint it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation.

BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.

Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.



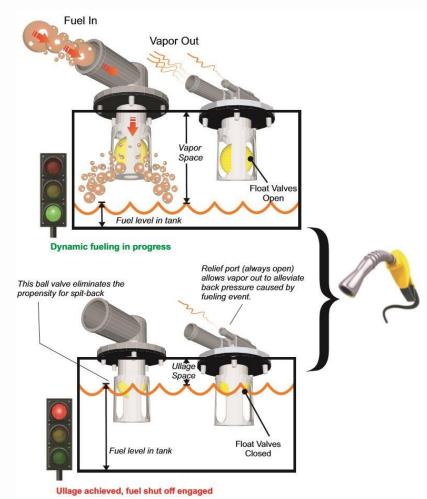



Tank Vapor Space & Fluid Management

Ullage (Vapor Space) Level Attainment

Spit-back/Well-back Control

This vent valve shuts off the refueling vapors and creates back pressure to lift the fill valve ball into place. This fill valve ball is set lower than the vent valve ball but does not close until the refueling vapors are shut off by the vent valve.



# Diurnal Fuel System: Refueling



Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)

## Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.

 
Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.



CONTENTS CAN BE UNDER PRESSURE AVOID SERIOUS INJURY OR DEATH FROM FIRE OR EXPLOSION OPEN SLOWLY IN WELL VENTILATED AREA NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.



### GASOLINE CONTENTS UNDER PRESSURE. FUEL SPRAY MAY OCCUR.

- 1. OPEN CAP SLOWLY
  2. INSERT FUEL NOZZLE
  3. BEGIN & CONTINUE FUELING
  UNTIL FUEL NOZZLE KICKS OFF
  4. WAIT 10 SECONDS & CONTINUE
  FUELING UNTIL NOZZLE KICKS
  OFF A SECOND TIME
  5. RETURN NOZZLE TO PUMP
- 6. DO NOT TOP OFF




# Boating Navigation Rules




There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- -Meeting: you are approaching another vessel head-on
- -Crossing: you are travelling across the path of another vessel
- -Overtaking: you are passing or being passed by another vessel

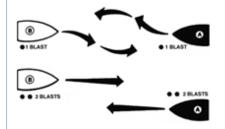


*When Meeting Port-to-port:* Continue on course. The same holds true for meeting starboard-to-starboard.

*When Meeting Head On:* As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

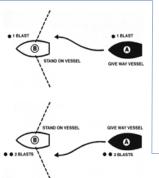

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

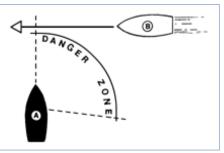

\ When Overtaking Another Boat: The boat being overtaken is the privileged vessel. Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use one blast to pass on the right, and two blasts to pass on the left.

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.



# Warranty and Services



### **Product Changes**

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

### Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

### Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. The boat owner is responsible for delivering the boat to the dealer for warranty service. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. Sportsman will not reimburse owners for unauthorized warranty work.



# Warranty and Services

# S POIL

### SPORTSMAN BOATS LIMITED WARRANTY

**Ten-Year Hull Limited Warranty:** This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term "Hull" shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term "Structural Hull Defect" shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One Year Nonstructural Limited Warranty: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term "Nonstructural Defect" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

**Registration and Transfer of Limited Warranty:** Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.



# Warranty and Services

### SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

### **EXCLUSIONS:**

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "Exclusions:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "Commercial Purposes" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc. 113 Isaac Way · Summerville, South Carolina 29483 Telephone (843) 376-2628 · Fax (843) 376-2636

Email sales@sportsmanboatsmfg.com www.sportsmanboatsmfg.com

Website

P.O. Box 2100 Summerville, SC 29484

