

WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard. Sportsman Boats builds the fastest growing line of family-friendly center console boats in-class, built with the latest designs, procedures and materials to give you and your family unparalleled performance with a dry, safe and comfortable ride

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines, Tommy Hancock



Important Information

BOAT INFORMATION / S	SPECIFICATIONS STATES OF THE PROPERTY OF THE P	
MODEL:	HULL SERIAL #:	
PURCHASE DATE:	DELIVERED:	
IGNITION KEY #:	REGISTRATION #:	
DRAFT:	WEIGHT:	
VERTICAL CLEARANCE:		
ENGINE / PROPELLER IN	<i>IFORMATION</i>	
ENGINE MAKE:	MODEL:	
ENGINE SERIAL #:		
PROPELLER MAKE:	# OF BLADES:	
DIAMETER / PITCH:	MODEL:	
PART #:		
OPTIONAL EQUIPMENT	/ OPTION PACKAGES	
TRAILER INFORMATION	1	
MAKE:	MODEL:	
SERIAL #:	GVRM:	
ADDITIONAL INFORMATION:		
DEALER	SPORTSMAN	
NAME:	PHONE:	
PHONE:	REPRESENTATIVE:	
SALES PERSON:	ADDRESS:	
SERVICE MANGER:		
ADDRESS:		

We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.



Masters 2470e

Specifications



Length 24' 4"

Beam 8'5"

Max Horsepower 350HP

Fuel Tank Capacity 71 gal.

Approx. Usable Fuel Capacity 65 gal.

Freshwater Tank Capacity* 13 gal.

Bow Livewell 15 gal.

Transom Aquarium Livewells (x2) 25 gal.

Bow Coffin Box 270 qt.

Draft (up) 14"


Deadrise at Transom 15°

Approx. Dry Weight 2,825 lbs.

Person Capacity 10



Overall Dimensions & Terminology

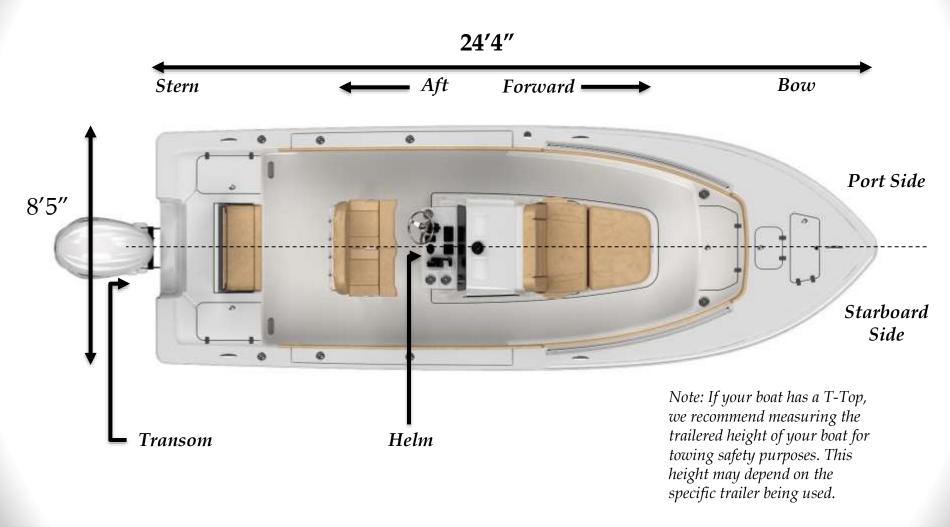



Standard Package

Electronics, Console & Helm

SportLink® Electronics Integration System
Garmin Fusion® Apollo™ RA670 Marine Stereo
Garmin GPSMAP® 1243xsv MFD 12"
Garmin VHF 115 Radio w/ Antenna
(8) JL Audio M3-650X Gloss White Sport Grille Speakers
Airmar B60 Thru-Hull Transducer

Compass

Dash Panel Cover

Dual Battery Configuration w/ Switch & Trays Fiberglass Hard-Top w/ Integrated D-Tubing Frame

Horn

Hydraulic Tilt Steering
Interior LED Lighting Package

Integrated Hard-Top Navigation Lights (Lumitec

Integrated Tempered Glass Windshield w/ Vent

Lockable Console Storage

Matching Hard-Top Underside Color

Stainless Steel Switches

Trim Tabs w/ LED Indicator

Trolling Motor Plug & Harness

Underwater Lights

USB Audio Plug In-Dash & 12V Receptacle

Seating, Upholstery & Pads

Console Footrest w/ Pads

Helm Pad

Premium Dual Chair LP w/ Flip Up Bolsters

Premium Sileather® Marine Silicone Fabrics

Rear Fold Up Bench Seat w/ Storage

Under Gunwale Reel Pads

Livewells, Pumps & Storage

(1) 25 Gallon Aquarium Rear Livewell

(1) 25 Gallon Aquarium Rear Recirculating Livewell

w/Pro-Air

12 Gallon Livewell Front Seat of Console

13 Gallon Freshwater Tank w/ Washdown

14 Gallon Bow Livewell

Anchor Storage

Bow Coffin Box - 270 qt

Bow Storage Step Box

High Speed Livewell Pick Up

Raw Water Washdown

Trolling Motor Battery Storage



Masters 2470e

Features & Performance

Standard Package

Hull & Deck

SportTech® Advanced Fabrication Process

10-Year Hull Warranty

4 Flush Mount Gunwale Rod Holders

71 Gallon Fuel Tank w/ Fuel Level Sensor

Advanced Fiberglass Stringer System (No Wood)

Console Interior Liner

Grip Tex Yacht Style Non-Skid

Jack Plate

Large Rear Casting Deck

Light Hull Color

NMMA Certified

Pull-Up Cleats

Rear Total Access Hatch

Self Bailing Cockpit

Stainless Steel Cup Holders - ?

Stainless Steel Drain Covers

Stainless Steel Propeller

Stainless Steel Rub Rail

Stainless Steel Steering Wheel w/ Knob

Swim Platform w/ 3-Step Ladder

Total Access Hatch

Under Gunwale Folding Rod Racks

Underlid Gaskets



Features & Performance Options

Masters 2470e

SECOND GARMIN GPSMAP® 1243XSV 12"

GARMIN GMR™ FANTOM 18 RADOME

GARMIN GMR™ FANTOM 18 RADOME (2ND STATION)

GARMIN GXM™ 54 SIRIUSXM® WEATHER ANTENNA

JL AUDIO ULTRA-PREMIUM M6 UPGRADE

AIRMAR B175M CHIRP THRU-HULL TRANSDUCER UPGRADE

COCKPIT BOLSTERS

CONSOLE DRAPE - BLACK SUNBRELLA (LP & CONSOLE, REQ. TOP)

CUSTOM COLOR ENGINE

DARK HULL COLOR (BLACK/SHARK) UPGRADE

EDSON 13" SS COMFORT GRIP STEERING WHEEL W/ POWERKNOB

GULL WINGS

GUNWALE ROD HOLDERS / EACH

HALF TOWER W/ SECOND STATION (XSB ONLY; REQ. JL AUDIO M6)

MOORING COVER - BLACK SUNBRELLA

ON-BOARD BATTERY CHARGING SYSTEM (2-BANK)

PORTA POTTI

POWDER COATING FOR SKI TOW BAR

SLIDE OUT TRACK ONLY

SUN SHADE W/ POLES - REAR OR FRONT

TACO OUTRIGGERS - GS280

TRANSHIELD SHIPPING COVER


UNDER LEANING POST TACKLE STORAGE

YAMAHA AUTO PILOT (XSB ONLY)

YAMAHA HELM MASTER EX (XSB ONLY, INCL. AUTO PILOT)



Major Features

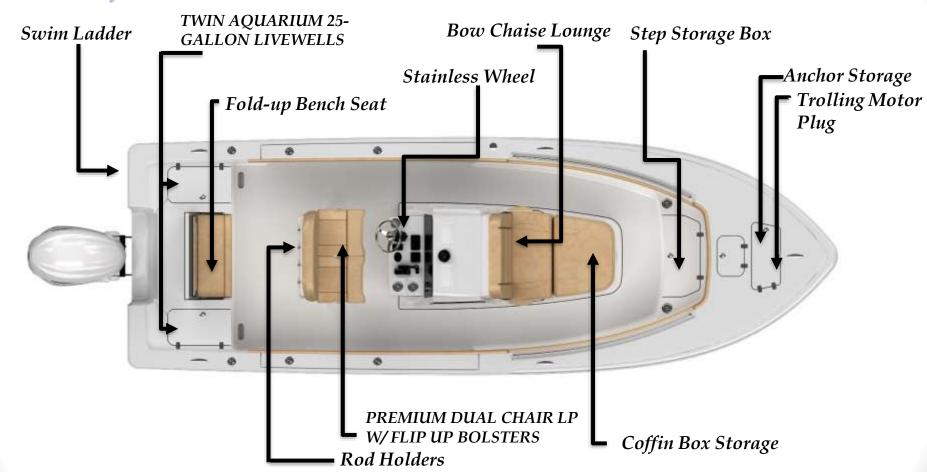



Single Yamaha F250XB



Fusing power, efficiency, speed and light weight, the Yamaha 250HP delivers intelligent design and sets the standard for offshore performance & reliability.

Mechanical Controls

ENGINE TYPE DISPLACEMENT HORSEPOWER WEIGHT

V6 4.2L 250hp @ 5500 rpm 562 lbs Single Yamaha F250XCB



Fusing power, efficiency, speed and light weight, the Yamaha 250HP delivers intelligent design and sets the standard for offshore performance. This engine features digital controls.

Digital Controls

ENGINE TYPE DISPLACEMENT HORSEPOWER WEIGHT V6

4.2L 250hp @ 5500 rpm 562 lbs Single Yamaha VF250XB



The V6 V MAX SHO® has transformed the game with its 4.2-liter big-bore displacement, impressive performance, signature four-stroke fuel economy and a faster hole shot.

Mechanical Controls

ENGINE TYPE DISPLACEMENT HORSEPOWER WEIGHT V6

4.2L 250hp @ 5500 rpm 555 lbs



Single Yamaha F300XA



Fusing power, efficiency, speed and light weight, the Yamaha 300HP delivers intelligent design and sets the standard for offshore performance & reliability.

Mechanical Controls

ENGINE TYPE
DISPLACEMENT
HORSEPOWER
WEIGHT

4.2L 300hp @ 5500 rpm 575 lbs NEW Single Yamaha F300XCB



Fusing power, efficiency, speed and light weight, the Yamaha 300HP delivers intelligent design and sets the standard for offshore performance. This engine features digital controls.

Digital Controls

ENGINE TYPE DISPLACEMENT HORSEPOWER WEIGHT V6

4.2L 300hp @ 5500 rpm 575 lbs NEW Single Yamaha F300XSB



These trusty outboards are turning heads again, with a fresh new look and new, integrated digital electric steering — making them even more responsive.

Digital Controls

ENGINE TYPE DISPLACEMENT HORSEPOWER WEIGHT Integrated Steering

4.2L 300hp @ 5500 rpm 588 lbs





6" JACK PLATE

All-in-One 6" jack plate made of anodized aluminum for durability. It will provide you with higher speed, gains in fuel economy and the ability to run in shallow water. This plate is required for the transom design of this model.



Certifications & Registrations

NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit http://www.nmma.org/certification/boats.

Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail. When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.



LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.

VISUAL DISTRESS SIGNALS

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.



Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:



WARNING



HAZARDS OR UNSAFE PRACTICES WHICH COULD RESULT IN SEVERE PERSONAL INJURY OR DEATH.



DANGER



 
IMMEDIATE HAZARDS WHICH WILL RESULT IN SEVERE PERSONAL INJURY OR DEATH.

Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.



Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.







Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.

If your label is damaged. Please call Sportsman's parts department for replacement stickers.




Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.

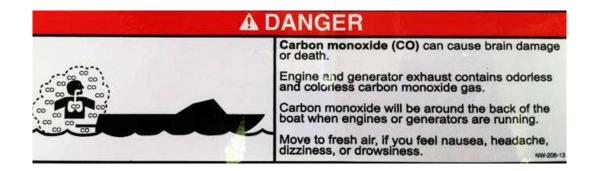

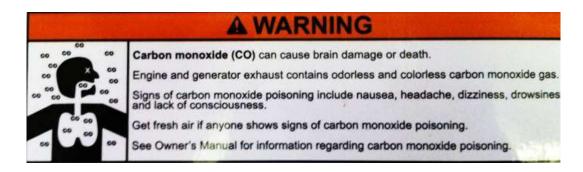



Boating Safety Label Locations

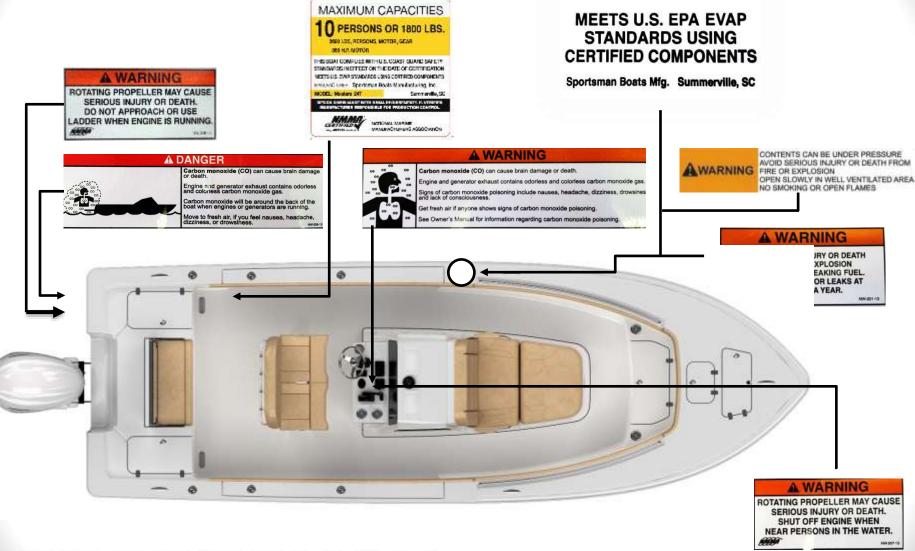


The Sportsman Masters 247oe has a 10 Person Capacity. Seating locations are shown below.

For your safety, casting deck is not to be used while boat is in motion.






Wire Harness

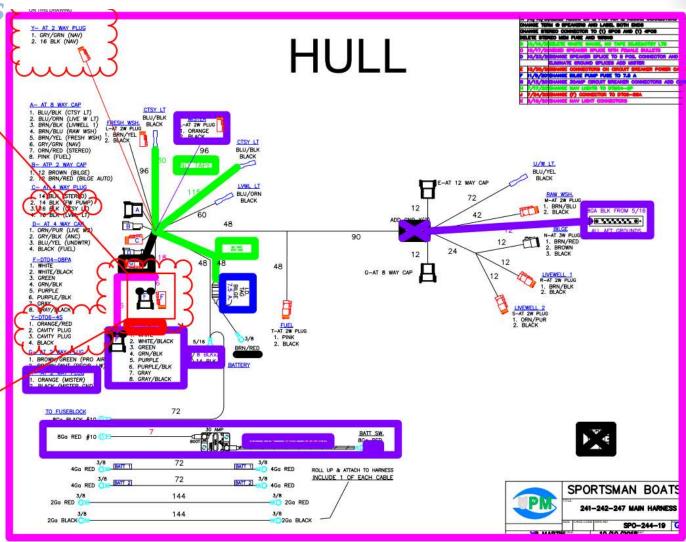


Wire Harness

STBD DECK

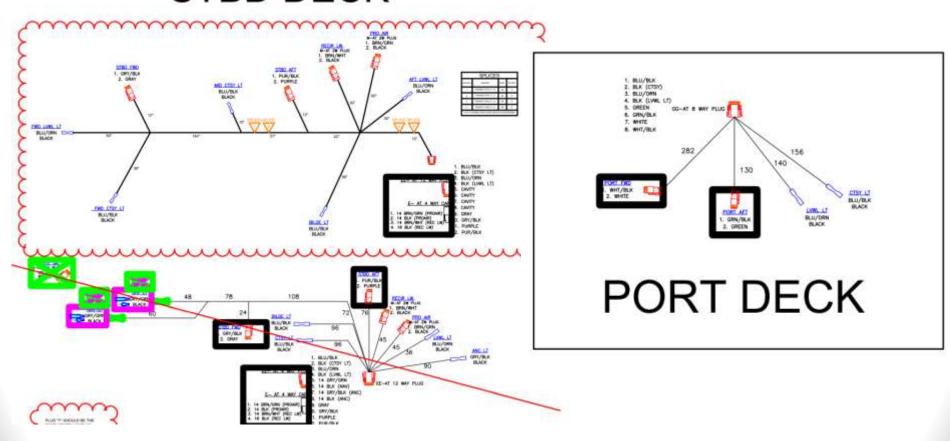

Wire Harness

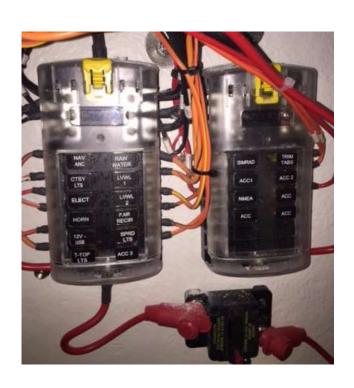

The fuse panel is located under the console. It is clearly labeled for easy identification. The bilge pump's 6 amp fuse is also located here. There is also a 30 amp breaker branching off the main battery switch. If an electrical component of your boat stops working properly, this should be the first place to look.

SportLink® Electronics Integration System

Take control of your electronics with SportLink® Electronics Integration System, equipped standard on every Sportsman Boat. The Garmin & powered electronics packages have been carefully designed around each model to meet and exceed your needs out on the water.

GARMIN GPSMAP® 1243XSV MFD 12"


With its ultra-sleek design, vivid sonar color palette and high-resolution 12" in-plane switching display, this large format chartplotter/sonar combo offers improved sunlight readability and wide-angle visibility. Experience unparalleled coverage and detail with preloaded BlueChart® g3 coastal charts and LakeVü g3 inland maps featuring integrated Garmin and Navionics® content and Auto Guidance3 technology. It can also supports FLIR cameras, GXM™ 53 marine weather receiver, VIRB® camera streaming and more. Network sharing allows you to share data among all compatible units connected to the network. Plus, it has built-in Wi-Fi® to support the ActiveCaptain™ app.







Garmin 12" Package

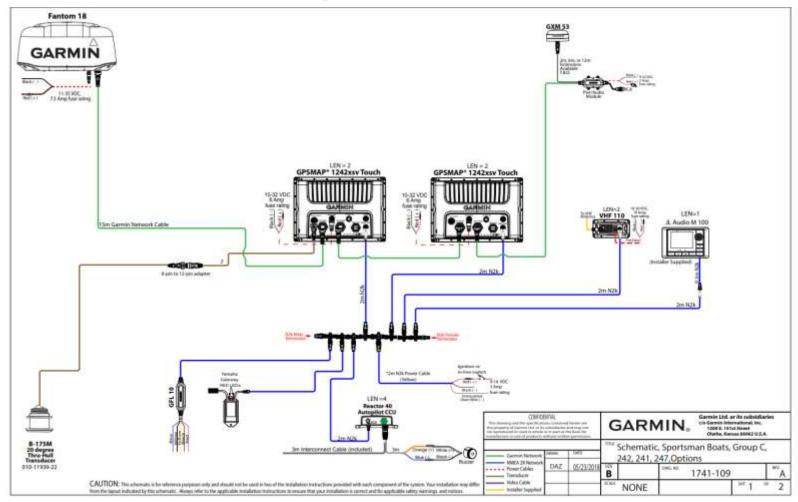



Lights

The NAV/ANC Switch is a 3-position switch on the console that controls the running lights.

- NAV position will turn on the red and green navigation lights and the white all-round light for night driving.
- ANC turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
- Off is in the center position.

Sidelights: The Masters 247oe has integrated rub rail navigational lights installed at the bow (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each Sidelights shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

All-round/Anchor Light: This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 360° See the figure to the right for location.

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.



When the sun goes down, molded in navigation lights can be found at the front corners of the hard-top. This location keeps them out of the way and completely unobstructed. Additionally, these Lumitec lights can dual purpose as docking lights with built in 1000 lumen white dock lights.



Bow





The anchor light is located on top of the T-top at the aft end.




Stereo

With the upgrade your boat is equipped with a RA670 or RA770 Stereo and 4 M3 Speakers. The stereo is water resistant and built to withstand all elements. It gives an intuitive interface with and easy to read 2.8 inch LCD display with day and night functions.

Your boat has a Fibergalss T-Top, is standard with 4 speakers. These four speakers will be located on the T-Top underside fore and aft.

Speakers




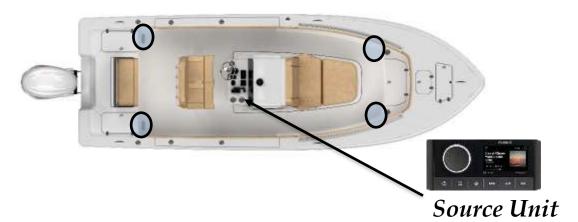

If you purchased the stereo upgrade option, this comes with 8 JL speakers, a four channel DSP amplifier for your pair of 8" subwoofers. Also 8 channel DSP amp to power your speakers




Stereo

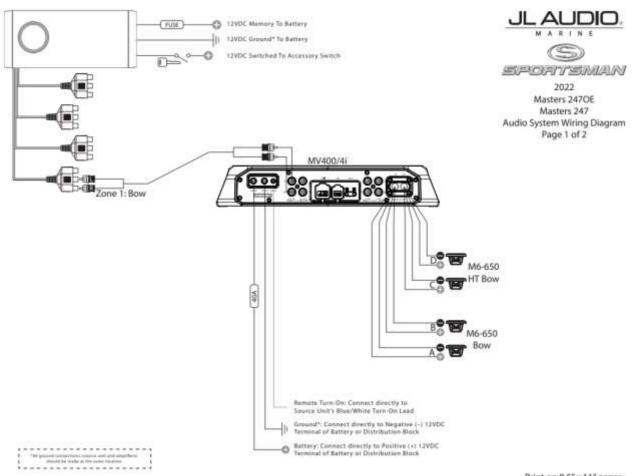

Print on 8.5" x 11" paper.



Stereo

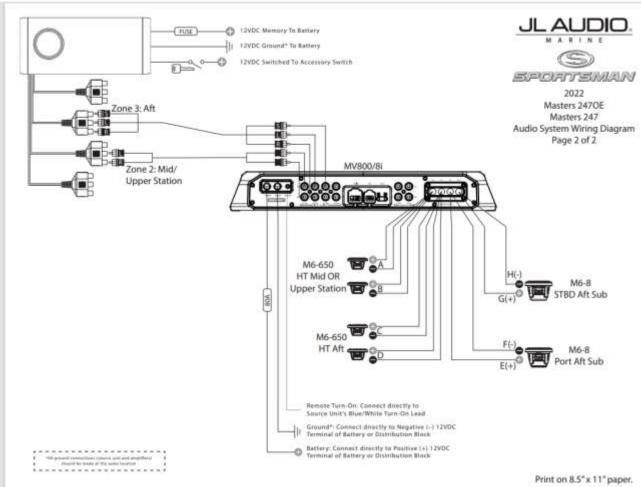





Electrical & Plumbing Systems Stereo 8 & 4 Channel DSP Amps



The NexD2™ full-range technology in this amplifier is DSP-controlled and features a reduced loop area design utilizing DirectFET™ outputs for outstanding fidelity, very low noise and exceptional efficiency. The amplifier chassis is ultra-compact, with all connections on one side, to greatly simplify installation into tight spaces.

Instead of traditional control knobs and switches, all amplifier adjustments and DSP functionality are configured via a compatible external device (PC, Tablet or Smartphone), with the appropriate JL Audio TüN™ Software application installed.



Trim Tabs

Your Masters 247oe comes standard with trim tabs installed. If so, they will be attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions.

The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab. The lights on the left indicate the port tab position, and the lights on the right indicate the starboard tab position.







Trim Tabs



Electrical & Plumbing Systems Trim Tabs Option

If you keep your boat in a wet slip/marina environment. Here is a list of different anodes recommended for various water types to prolong the life and shine of your stainless steel tab. Never use a wire brush to clean your tab!

Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-18001K)

Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water

Proven to last longer than zinc due to increased capacity

Alloy is manufactured to meet or exceed US Military Specification (MIL-A-24779(SH))

Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water



Trim Tabs




Masters 2470e

Electrical & Plumbing Systems

Bilge Pump


A small bilge pump is located on the hull bottom at the stern of your boat. Water is pumped out of a thru-hull fitting located on the starboard side of the boat near the transom. The pump may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pump on manually by flipping on your bilge switch located on switch panel at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pump is designed to remove excess water only, and it is **not** intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.

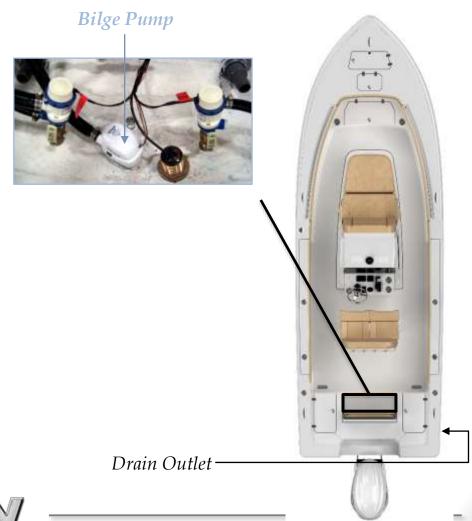



Livewells

The Sportsman 247oe comes with twin Aquarium 25 gallon livewells at the stern of the boat and one 15 gallon bow livewell. For easy access to the pumps and plumbing systems, open the total access hatch forward of the transom. The livewell pumps are located on either side of the bilge pump in the hull of the boat, and the livewell fill hoses are connected to the top of the pumps. To operate the livewells, turn on the livewell switch at the helm and turn the fill valve in the livewell to "open." To operate the starboard aft livewell and the console livewell, use the switch labeled "Livewell 1." To operate the port aft livewell, use the switch labeled "Livewell 2." All livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, each livewell has LED lighting installed. To illuminate the livewells, turn on the switch at the helm.

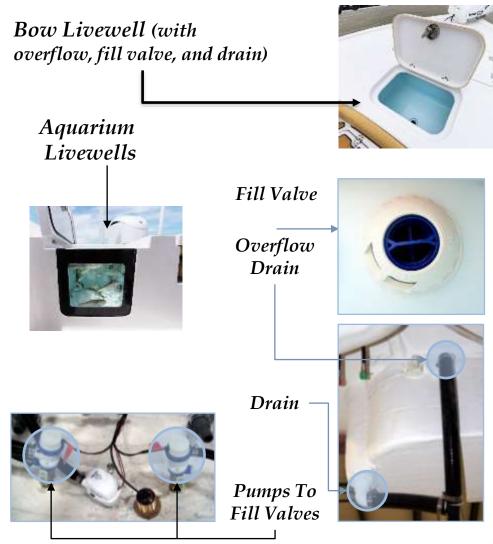

Electrical & Plumbing Systems Recirculating Aerated Livewell

Your Sportsman Masters 247oe has a recirculating livewell as a standard feature. The starboard aft livewell is equipped with an aeration and recirculation system. The two black strips on the inside walls of the livewell are part of the aeration system. The air pump (mounted on the side of the livewell) pushes air through the air stone at the base of each strip, which produces air bubbles to oxygenate the water. This feature is best for keeping bait alive overnight or for use when the boat is not in use, because it draws very little power. The recirculation system features an intake (with a strainer cover, shown in the figure) and an outlet water jet. The jet is mounted in the corner of the livewell in order to allow for optimal water recirculation when in use. The recirculation pump is a white tsunami water pump mounted on the side of the livewell. This system is operated with a 3-way switch at the helm of the boat. The system is off

Note: The set-up in this figure is not exactly like the set-up in your boat. This is just a simple representation of the major features for this system. The exact mounting locations will be different in your boat than the locations shown here.

Air Pump

Air Stone

Recirculation Intake

with the switch in the middle position. With the switch up, the aeration system alone will run, which draws very little power. With the switch down, the recirculation system will run. The figure here displays most of the important features of the recirculating livewell system.




Masters 2470e

Electrical & Plumbing Systems

Raw Water Wash-down

Your Masters 247oe may have the raw water wash-down installed as an option. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch panel at the helm. The wash-down outlet is found inside the small step storage compartment at the bow. See the figures here for important feature locations for the raw water wash-down system.

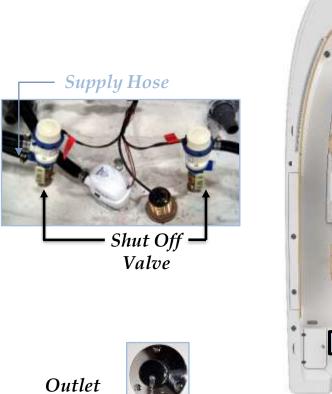





Fresh Water Wash-down

Your Masters 2470e may have the freshwater wash-down installed as an option. The freshwater fill fitting and Outlet is located inside the step storage compartment at the bow. This enclosed area is also a good place to store the hose. Do not leave the tank full if your boat will be left unattended for an extended period of time; pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the pump.

The pump is mounted on the inside of the console on the starboard side. To operate this system, turn on the switch labeled "ACCESSORY 2" at the helm. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.






Masters 2470e

Fuel System Fuel Tank

The Sportsman Masters 247oe comes with a fuel tank installed (71 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and fill cap. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out gassing emissions through a vent in the new designed fuel fill cap.

Note: This photo was taken during the assembly process. At this stage, some of the hoses had not yet been connected. In your boat all lines and hoses will be connected as necessary.



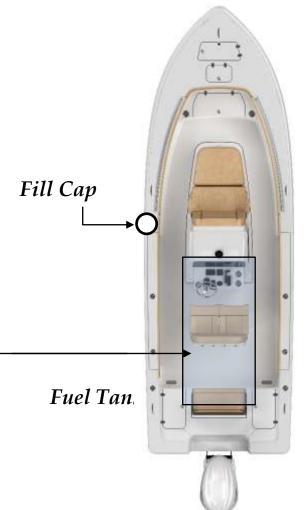

FUEL LEVEL SENSOR

Fully integrated into the SportLink system, this sensor reads the fuel tank level digitally and is able to relay this information to your Garmin screen. Using this information it is able to make accurate calculations on fuel range.



Fuel System

Diurnal Fuel System



EPA DIURNAL FUEL SYSTEMS

NOTE: Pressure may be present when opening your deck fill, regardless of system type.



Only open the fuel cap for refueling

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

- 1. Produce a clean refueling shut off event
- 2. Create a 5% vapor space
- Reduce the propensity of a refueling spit-back event.
- Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation



Fuel System


Diurnal Fuel System (cont'd)

Vapor Space (Ullage) And Refueling Management

Another fuel system necessity to remain EPA complaint it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation. BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.

Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.

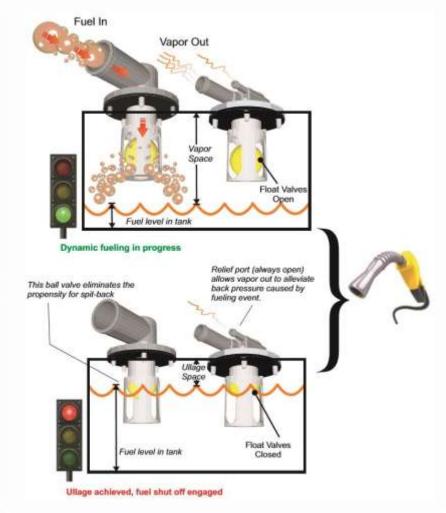



Fuel System

SPORTSMAN

Tank Vapor Space & Fluid Management Ullage (Vapor Space) Level Attainment Spit-back/Well-back Control This fill valve ball is set lower than This vent valve shuts off the vent valve ball but does not the refueling vapors and close until the refueling vapors creates back pressure to are shut off by the vent valve. lift the fill valve ball into place.

Fuel System Diurnal Fuel System: Refueling

Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)

Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.

Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.



CONTENTS CAN BE UNDER PRESSURE AVOID SERIOUS INJURY OR DEATH FROM WARNING FIRE OR EXPLOSION OPEN SLOWLY IN WELL VENTILATED AREA NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.



GASOLINE CONTENTS UNDER PRESSURE. FUEL SPRAY MAY OCCUR.


OPEN CAP SLOWLY 2. INSERT FUEL NOZZLE 3. BEGIN & CONTINUE FUELING UNTIL FUEL NOZZLE KICKS OFF 4. WAIT 10 SECONDS & CONTINUE FUELING UNTIL NOZZLE KICKS OFF A SECOND TIME 5. RETURN NOZZLE TO PUMP DO NOT TOP OFF



Boating Navigation Rules


There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- -Meeting: you are approaching another vessel head-on
- -Crossing: you are travelling across the path of another vessel
- -Overtaking: you are passing or being passed by another vessel

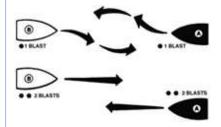


When Meeting Port-to-port: Continue on course. The same holds true for meeting starboard-to-starboard.

When Meeting Head On: As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

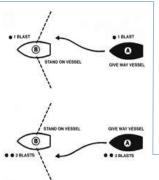

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

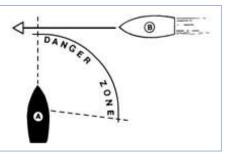

When Overtaking Another Boat: The boat being overtaken is the privileged vessel.
Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use one blast to pass on the right, and two blasts to pass on the left.

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.



Warranty and Services

Product Changes

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. The boat owner is responsible for delivering the boat to the dealer for warranty service. If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. Sportsman will not reimburse owners for unauthorized warranty work.



Warranty and Services

SPORTSMAN BOATS LIMITED WARRANTY

Ten-Year Hull Limited Warranty: This limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term "Hull" shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term "Structural Hull Defect" shall mean a substantial defect in the Sports Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One Year Nonstructural Limited Warranty: This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purpose of this Limited Warranty, the term "Nonstructural Defect" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the exclusions below.

Registration and Transfer of Limited Warranty: Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacture notification. Except where a Sportsman Boats has been salvaged and resold after a declaration of a total loss or a total loss or a constructive total loss, this Limited Warranty is transferrable to a subsequent owner of the Sportsman Boat. PROVIDED SUCH SUBSEQUENT OWNER FILL OUT AND SEND TO SPORTSMAN A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST). A COPY OF THE BILL OF SALE, WHITHIN THIRTY (30) DAYS OF SUCH TRANSFER OR PURCHASE.



Warranty and Services

SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

EXCLUSIONS:

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "Exclusions:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage changes, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "Commercial Purposes" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any par, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.



Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc. 113 Sportsman Way Way · Summerville, South Carolina 29483 Telephone (843) 376-2628 · Fax (843) 376-2636

Email sales@sportsmanboatsmfg.com

Website www.sportsmanboatsmfg.com

