

Open *352*



SPORTSMAN

*Owner's Manual and
Quick-reference Guide
2022*

Introduction



WELCOME TO THE SPORTSMAN TEAM!

Here at Sportsman Boats, we take great pride in producing the finest, most well-designed saltwater fishing and pleasure boats on the market today. Our designs incorporate the most modern technology while applying good old "Common Sense" technology as well. From our advanced composite construction, ergonomic console designs, patented "Total Access" hatch, and superior ride and handling characteristics, we think you will agree that Sportsman is setting a new standard. Sportsman Boats builds the fastest growing line of family-friendly center console boats in-class, built with the latest designs, procedures and materials to give you and your family unparalleled performance with a dry, safe and comfortable ride

We do not take lightly the confidence you have placed in us with your decision to purchase your Sportsman boat. We will always strive to provide for you and your family the superior customer service you deserve. We hope that you enjoy your time out on the water as much as we enjoy building your Sportsman boat!

Safe Boating and Tight Lines,
Tommy Hancock

SPORTSMAN

Important Information



| BOAT INFORMATION / SPECIFICATIONS | |
|---|-----------------|
| MODEL: | HULL SERIAL #: |
| PURCHASE DATE: | DELIVERED: |
| IGNITION KEY #: | REGISTRATION #: |
| DRAFT: | WEIGHT: |
| VERTICAL CLEARANCE: | |
| | |
| ENGINE / PROPELLER INFORMATION | |
| ENGINE MAKE: | MODEL: |
| ENGINE SERIAL #: | |
| PROPELLER MAKE: | # OF BLADES: |
| DIAMETER / PITCH: | MODEL: |
| PART #: | |
| OPTIONAL EQUIPMENT / OPTION PACKAGES | |
| | |
| | |
| | |
| TRAILER INFORMATION | |
| MAKE: | MODEL: |
| SERIAL #: | GVRM: |
| ADDITIONAL INFORMATION: | |
| DEALER | SPORTSMAN |
| NAME: | PHONE: |
| PHONE: | REPRESENTATIVE: |
| SALES PERSON: | ADDRESS: |
| SERVICE MANGER: | |
| ADDRESS: | |
| | |

We recommend filling out the information in this table and keeping one copy of this page in your personal records and one copy with your owner's manual. This information will be important should you need to contact your dealer or Sportsman Boats Manufacturing for technical assistance and/or service.


Specifications



| | |
|----------------------------------|-------------------|
| Length Overall | 35'2" |
| Beam | 11'2" |
| Draft | 24" |
| Deadrise at Transom | 23° |
| Approximate Usable Fuel Capacity | 330 gal. |
| Approximate Dry Weight | 9850 lbs. |
| Maximum Engine Horse Power | 900 HP (4 Stroke) |

SPORTSMAN

Overall Dimensions & Terminology

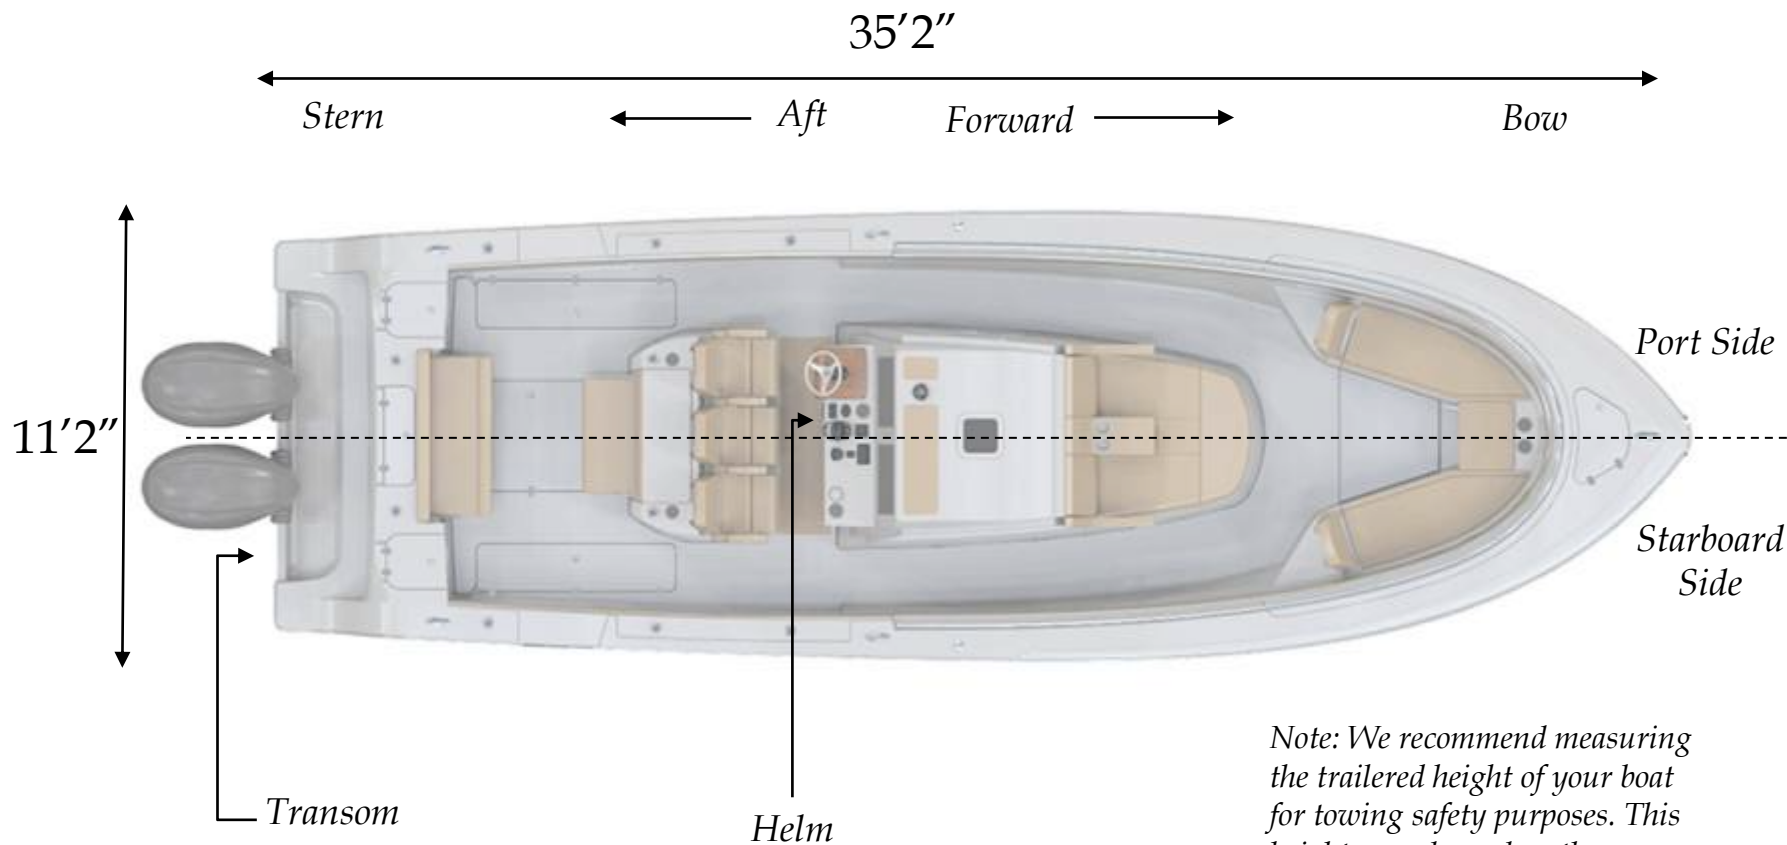

Note: We recommend measuring the trailered height of your boat for towing safety purposes. This height may depend on the specific trailer being used.

SPORTSMAN

Standard Features



SportLink® Electronics Integration System
Garmin GPSMAP® 8622 MFD 22"
Airmar B175M CHIRP Thru-Hull Transducer
Garmin VHF 215 Radio w/ Antenna
Yamaha Command Link Plus CL7 Touchscreen Display
SeaStar Maximus Digital Switching System
Garmin Fusion® Apollo™ RA670 Marine Stereo
(12) JL Audio M6 Gloss White Sport Grille Speakers
(2) JL Audio MVi Amps w/ Built-in DSP
JL Audio MMR-20 Stereo Remote Controller
Anchor Windlass System w/ Anchor & 400' Line
Battery Switches & 5 Batteries
Compass
Console Footrest w/ Pads
Console Interior Liner
Edson 13" SS Comfort Grip Steering Wheel w/ PowerKnob
Electric Actuated Bow Sun Deck/Table
Helm Pad
Integrated Tempered Glass Windshield w/ Actuated Vent
Horn

Integrated Hard-Top Navigation Lights (Lumitec)
Interior LED Lighting Package
On-Board Battery Charging System
Optimus EPS Fully-Electric Steering Actuator w/ Tilt
Porcelain Head w/ Overboard Discharge & Pump Out
Trim Tabs w/ LED Indicator
(2) 30 Gallon Pressurized Aquarium Livewells
(2) Macerated In-Deck Fish Boxes
(6) Flush Mount Gunwale Rod Holders
10-Year Hull Warranty
35 Gallon Freshwater Tank w/ Washdown
355 Gallon Fuel Tank w/ Fuel Level Sensor
65 qt. Built-In Cooler & Console Lounge
Seating
88 qt. Rear Insulated Center Cooler
Lockable Console w/ Berth, Rod Storage, Sink
& Shower
Raw Water Washdown

SPORTSMAN

Features & Performance

Standard Features

SportTech® Advanced Vacuum Infusion Process
Advanced Infused Fiberglass Stringer System (No Wood)
Dual Fuel Fills (Port & Starboard)
Dual Side Entry Doors w/ Removable Ladder
Grip Tex Yacht Style Non-Skid
High Speed Livewell Pick Up
Insulated Bow Storage
Light Hull Color
Matching Hard-Top Underside Color
Port and Starboard Toe Rail
Powder Coating
Pull-Up Cleats
Recessed Bow Hand Rails
Removable Bow Backrest
Sea Chest

Self Bailing Cockpit
Stainless Steel Cup Holders
Stainless Steel Drain Covers
Stainless Steel Propellers
Stainless Steel Rub Rail
Total Access Compartment
Under Gunwale Bow Storage
Under Gunwale Rod Racks
Underlid Gaskets

Bow Bolsters
Bow Cushion Set w/ Removable Filler Board
Cockpit Bolsters
Fiberglass Hard-Top w/ Integrated D-Tubing Frame
Fiberglass Leaning Post w/ Rear Facing Seating & Sink
Premium Sileather® Marine Silicone Fabrics
Rear Fold Down Seat
Stern Fiberglass Cockpit Table
SunDeck/Table Cushion
Triple Premium Seats on Fiberglass Leaning Post



SPORTSMAN

Features & Performance

Optional Features

Available Options

- Second Garmin GPSMAP® 8622 MFD
- Garmin GMR™ Fantom 18 Radome
- Garmin GMR™ 424 xHD2 Open Array

- Garmin Reactor™ 40 Autopilot (300s Only)
- Garmin GXM™ 54 SiriusXM® Weather Antenna
- 2nd Garmin VHF 215 Radio
- Air Conditioning (12V 3500 BTU)

- Console Drape (LP & Console, req. Top)
- Custom Color Engine (Triples)
- Dark Hull Color (Black/Steel/Shark) Upgrade
- Dive Tank Storage
- Electric Reel Outlets
- Fiberglass LP w/ Tackle Center and Sink
- Gemlux Bluewater Outriggers
- Gemlux Shade - Front

Color Selection

- Ice Blue
- Island Blue
- Jet Black
- Sea Mist Green
- Storm Cloud
- Shark Gray
- Steel Blue
- White

- Gemlux Shade - Rear
- Gull Wings
- Optimus 360 Joystick (Triples Only)
- Release Marine Package (Helm, Chairs & Bow Backs)
- Release Marine Package (Helm Pod)
- Seakeeper 3 Gyroscopic Stabilizer
- Sun Shade w/ Poles - Front
- Sun Shade w/ Poles - Rear
- Taco Outriggers - GS380
- Transhield Shipping Cover
- Yamaha Auto Pilot (Twins Only)
- Yamaha Helm Master (Twins Only)



Stereo Upgrade

- JL Speakers
- JL 10" Amplified Subwoofer
- JL Amplifier


Powder Coat Selection

- Black - White

Features & Performance



Major Features

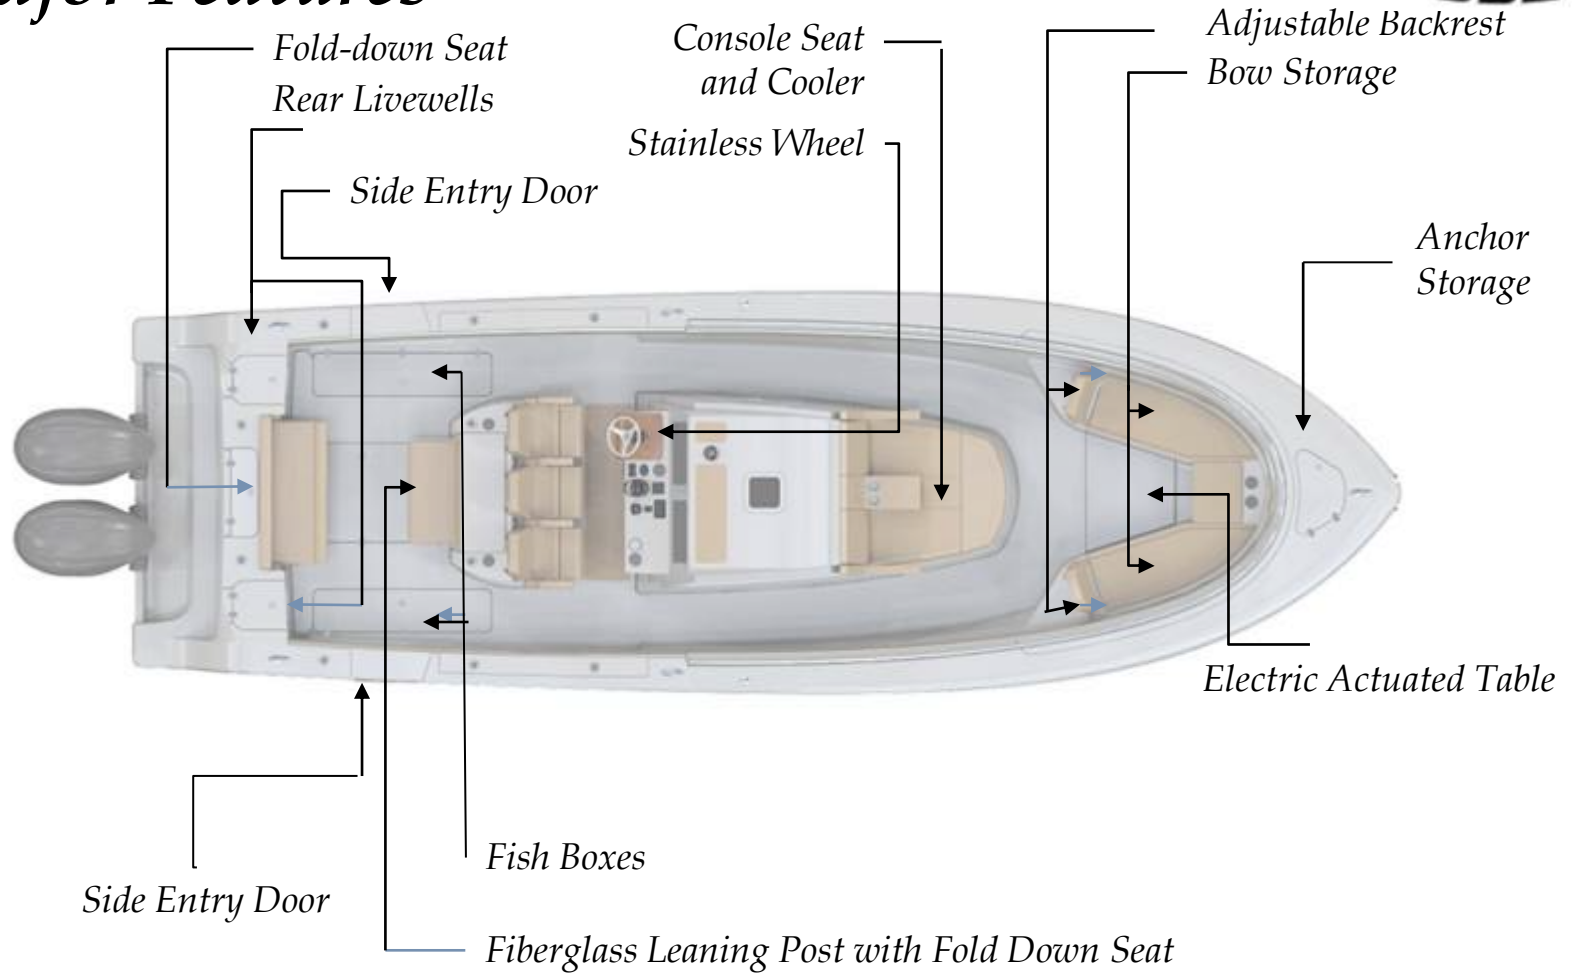

SPORTSMAN

Features & Performance

Twin 425 HP



V8
ENGINE TYPE

5.6L
DISPLACEMENT

425hp @ 5500 rpm
PROP SHAFT HORSEPOWER

952 lbs
WEIGHT

| | |
|----------------------|------------------------------------|
| Top Speed | 58.5MPH @ 6000RPM |
| Best MPG | 1.37MPG @ 3500RPM (31.7MPH) |
| Time To Plane | 5.86S |
| 0-30MPH | 7.20S |

Triple 300 HP



V6

V6
ENGINE TYPE

4.2L
DISPLACEMENT

300hp @ 5500 rpm
PROP SHAFT HORSEPOWER

575 lbs
WEIGHT

| | |
|----------------------|------------|
| Top Speed | TBA |
| Best MPG | TBA |
| Time To Plane | TBA |
| 0-30MPH | TBA |



Digital Controls

SPORTSMAN

Note: These are posted on our website at
<https://www.sportsmanboatsmfg.com/open/352-Center-Console/power>

Features & Performance



PERFORMANCE BULLETIN



PERFORMANCE BULLETIN

Boat Manufactured By:



SPORTSMAN OPEN 352

| | |
|----------------------------|------------|
| Length | 35' 2" |
| Beam | 11' 2" |
| Dry Weight (Boat Mfr. Pub) | 9,850 lbs |
| Maximum HP | 900 hp |
| Fuel Capacity | 330 gal |
| Weight as Tested | 13,694 lbs |

XF425USA2 / LXF425USA2

| | |
|--------------------|--------------|
| Horsepower | 425 hp |
| Induction | DI/VECT/DOHC |
| Displacement | 5.6L |
| Weight (Estimated) | 977 lbs |
| Gear Ratio | 1.79:1 |

ENGINE MOUNTING HEIGHT

| | |
|--------------------------|----------------------|
| Mounting Hole Position | #4 |
| Ventilation Plate Height | 2" Above Boat Bottom |

PROPELLER(S)

| | |
|--------------------|-----------------------------------|
| Series | XTD Offshore |
| Diameter x Pitch | 16-3/8 x 21 |
| Yamaha Part # | 6GR-45976-10-00 / 6GS-45976-10-00 |
| Propeller Material | Polished Stainless Steel |

TEST CONDITIONS

| | |
|--------------------------------------|---------------|
| Number of People | 4 |
| Air / Water Temperature (Fahrenheit) | 57° F / 52° F |
| Elevation (in feet above sea level) | 0' |
| Wind Velocity | 15-20 MPH |

COMMENTS

Test weight includes 165 gallons of fuel, 4 batteries, safety and test equipment

YPB#: PB_SPT_Open352_TW_XF425USA2_2-26-2020_OCC



Engine: Yamaha XF425USA2 /

LXF425USA2

Boat: Sportsman Open 352

Configuration: Twin

Test Date: 26-Feb-2020

PERFORMANCE DATA

| RPM | MPH | GPH | MPG |
|------|------|------|------|
| 1000 | 6.3 | 4.0 | 1.59 |
| 1500 | 8.3 | 5.6 | 1.49 |
| 2000 | 9.7 | 8.3 | 1.10 |
| 2500 | 12.5 | 13.9 | 0.90 |
| 3000 | 21.6 | 17.7 | 1.22 |
| 3500 | 31.7 | 23.2 | 1.37 |
| 4000 | 37.8 | 29.2 | 1.29 |
| 4500 | 43.0 | 36.4 | 1.18 |
| 5000 | 47.3 | 46.9 | 1.01 |
| 5500 | 52.9 | 58.6 | 0.90 |
| 6000 | 58.5 | 75.5 | 0.77 |

Time to Plane: 5.86 seconds

0-30 MPH: 7.20 seconds

NOTICE TO CONSUMER:
The information and data contained in this Performance Bulletin is approximate and subject to many different factors and variables. It is provided as a guideline only and should not be relied upon as representative of actual performance. Your boat's performance may be different than the information contained in this Performance Bulletin due to various factors, including your boat's actual weight, wind and water conditions, temperature, humidity, elevation, bottom silt, boat options affecting windward or dry and/or boat weight, and operator ability. These confirm the specifications and performance data on your specific boat/engine combination with your dealer prior to purchase. Please also bear in mind that the data contained in this Performance Bulletin may or may not have been performed using Yamaha PowerTech components. Yamaha reserves the right to change the specifications and performance data of this Performance Bulletin or engine without notice. This document contains many of Yamaha's valuable trademarks. It may also contain trademarks belonging to other companies. Any references to other companies or their products are for identification purposes only, and are not intended to be an endorsement.



Boat Manufactured By:



SPORTSMAN OPEN 352

| | |
|----------------------------|------------|
| Length | 30' 2" |
| Beam | 11' 2" |
| Dry Weight (Boat Mfr. Pub) | 9,885 lbs |
| Maximum HP | 900 hp |
| Fuel Capacity | 300 gal |
| Weight as Tested | 12,991 lbs |

F300XCA / F300UCA / LF300XCA

| | |
|--------------------|---------------|
| Horsepower | 300 hp |
| Induction | DI/VECT/DOHC |
| Displacement | 4.3L |
| Weight (Estimated) | 563 - 573 lbs |
| Gear Ratio | 1.76:1 |

ENGINE MOUNTING HEIGHT

| | |
|--------------------------|----------------------|
| Mounting Hole Position | #3 |
| Ventilation Plate Height | 2" Above Boat Bottom |

PROPELLER(S)

| | |
|--------------------|---|
| Series | Schwabe Series 2™ |
| Diameter x Pitch | 18 x 21 |
| Yamaha Part # | 6CS-46012-05-00 / 6CS-46012-03-00 / 6CS-46012-00-00 |
| Propeller Material | Polished Stainless Steel |

TEST CONDITIONS

| | |
|--------------------------------------|---------------|
| Number of People | 2 |
| Air / Water Temperature (Fahrenheit) | 62° F / 54° F |
| Elevation (in feet above sea level) | 0' |
| Wind Velocity | 0-5 MPH |

COMMENTS

Test weight includes 170 gallons of fuel, 7 batteries, optional gear stabilization device, optional AC system, safety and test equipment.

YPB#: PB_SPT_Open352_TW_F300XCA_06-2020_OCC



Engine: Yamaha F300XCA / F300UCA /

LF300XCA

Boat: Sportsman Open 352

Configuration: Twin

Test Date: 5-Aug-2020



PERFORMANCE DATA

| RPM | MPH | GPH | MPG |
|-------------|-------------|-------------|-------------|
| 1000 | 7.5 | 4.1 | 1.82 |
| 1500 | 10.1 | 7.2 | 1.81 |
| 2000 | 12.8 | 12.8 | 1.08 |
| 2500 | 17.8 | 17.4 | 0.98 |
| 3000 | 26.4 | 21.4 | 1.23 |
| 3500 | 35.1 | 27.8 | 1.26 |
| 4000 | 42.2 | 37.2 | 1.12 |
| 4500 | 47.8 | 45.1 | 0.90 |
| 5000 | 52.1 | 58.8 | 0.89 |
| 5500 | 57.8 | 73.8 | 0.78 |
| 5900 | 61.7 | 83.4 | 0.74 |

Time to Plane: 3.76 seconds

0-30 MPH: 4.20 seconds

NOTICE TO CONSUMER

The information and data contained in this Performance Bulletin is approximate and subject to many different factors and variables. It is provided as a guideline only and should not be relied upon as representative of actual performance. Your boat's performance may be different than the information contained in this Performance Bulletin due to various factors, including your boat's actual weight, wind and water conditions, temperature, humidity, elevation, bottom silt, boat options affecting windward or dry and/or boat weight, and operator ability. These confirm the specifications and performance data on your specific boat/engine combination with your dealer prior to purchase. Please also bear in mind that the data contained in this Performance Bulletin may or may not have been performed using Yamaha PowerTech components. Yamaha reserves the right to change the specifications and performance data of this Performance Bulletin or engine without notice. This document contains many of Yamaha's valuable trademarks. It may also contain trademarks belonging to other companies. Any references to other companies or their products are for identification purposes only, and are not intended to be an endorsement.

SPORTSMAN

Certifications & Registrations



NMMA Certification

Sportsman Boats is certified by the National Marine Manufacturers Association (NMMA). NMMA certification not only meets the standards of the United States Coast Guard (USCG), but goes further to meet the standards set by the ABYC (American Boat and Yacht Counsel). All Sportsman models have been designed, constructed, and thoroughly tested to meet or exceed these standards. For more information about these standards, you may visit <http://www.nmma.org/certification/boats>.

Hull Identification Number & Registration

Sportsman has a permanent record of your boat. This record is documented during the manufacturing process. It is identified by its "Hull Identification Number" (HIN). **The HIN is a 12-digit code located on the starboard side of the transom, just under the Rub Rail.** When contacting your dealer concerning maintenance or warranties, please have your HIN and model number available. This information can be found on your copy of the warranty card. Federal and State laws require a power boat to be registered in the state where it is primarily used. Registration numbers and validation stickers must be displayed according to regulations. The registration certificate must be on board when boating. The boat serial number, or Hull Identification Number (HIN), is required on the registration form. The HIN should be included on all documents or any correspondence.

Boating Safety



LIGHTING

Your Sportsman boat is equipped with navigation lights which comply with both Inland and International rules.

FIRE EXTINGUISHER

At least one Type-1 hand held portable fire extinguisher must be carried on board. For boats over 20' two are required. Check extinguisher regularly for charge status.

REQUIRED SAFETY EQUIPMENT

The US Coast Guard (USCG) requires that every boat have specific equipment on board. Check with local regulations on mandatory equipment apart from the list of Coast Guard requirements.

SOUND SIGNALING DEVICES

Your Sportsman boat is equipped with an electric horn which meets the USCG requirements for a sound signal device.

PERSONAL FLOTATION DEVICE (PFD)

You must have a USCG approved personal flotation device of Type I, II, or III aboard for each passenger, in addition to one Type IV throw able PFD. **Always wear a PFD when boating.** In some states, children are required to wear a PFD at all times. Check your local regulations.



VISUAL DISTRESS SIGNALS

USCG approved visual distress signals are required for day and night use when operating on US waters. Approved signals include flares, orange smoke, an orange distress flag, or an electric distress light.

Boating Safety



Being on the water is a great experience, but it can become a bad experience very quickly if safety and maintenance instructions of your boat are not followed. Therefore, warnings and notices have been included in order to help you operate and maintain your boat safely. They are defined as follows:

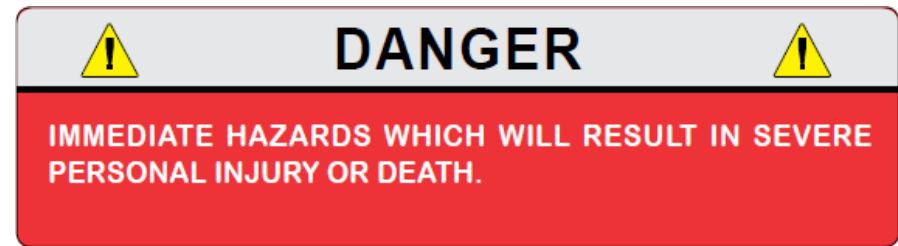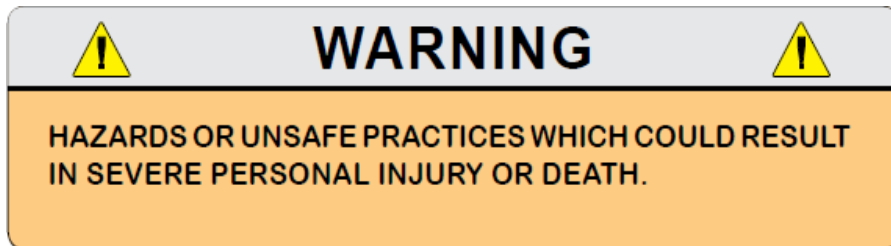


Please become familiar with the location and content of the Caution, Warning, and Danger Labels found on your boat.

Boating Safety



Your Owner's Manual was written to include safety instructions to ensure safe operations. Safety alert symbols are used to show potential personal injury hazards.

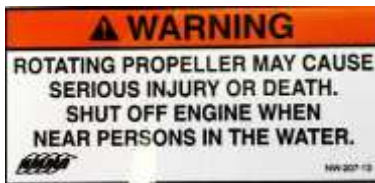

Every precaution has been taken to reduce the risks associated with death, possible injury and damage from fire or explosion. You must also take your own necessary precautions and practice proper maintenance procedures in order to enjoy the optimal safe operation of your boat.

If your label is damaged. Please call Sportsman's parts department for replacement stickers.

Boating Safety



Your boat produces carbon monoxide and uses flammable fuel. Carbon monoxide can cause brain damage or death. Carbon monoxide is colorless, odorless and extremely dangerous.


⚠ DANGER



Carbon monoxide (CO) can cause brain damage or death.
Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
Carbon monoxide will be around the back of the boat when engines or generators are running.
Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

NW-206-13

⚠ WARNING



Carbon monoxide (CO) can cause brain damage or death.
Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness and lack of consciousness.
Get fresh air if anyone shows signs of carbon monoxide poisoning.
See Owner's Manual for information regarding carbon monoxide poisoning.

Boating Safety Label Locations



**MEETS U.S. EPA EVAP
STANDARDS USING
CERTIFIED COMPONENTS**

Sportsman Boats Mfg. Summerville, SC

⚠ WARNING
ROTATING PROPELLER MAY CAUSE
SERIOUS INJURY OR DEATH.
DO NOT APPROACH OR USE
LADDER WHEN ENGINE IS RUNNING.

⚠ DANGER

Carbon monoxide (CO) can cause brain damage or death.
Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
Carbon monoxide will be around the back of the boat when engines or generators are running.
Move to fresh air, if you feel nausea, headache, dizziness, or drowsiness.

⚠ WARNING

Carbon monoxide (CO) can cause brain damage or death.
Engine and generator exhaust contains odorless and colorless carbon monoxide gas.
Signs of carbon monoxide poisoning include nausea, headache, dizziness, drowsiness and lack of consciousness.
Get fresh air if anyone shows signs of carbon monoxide poisoning.
See Owner's Manual for information regarding carbon monoxide poisoning.

⚠ WARNING
CONTENTS CAN BE UNDER PRESSURE
AVOID SERIOUS INJURY OR DEATH FROM
FIRE OR EXPLOSION
OPEN SLOWLY IN WELL VENTILATED AREA
NO SMOKING OR OPEN FLAMES

⚠ WARNING
AVOID SERIOUS INJURY OR DEATH
FROM FIRE OR EXPLOSION
RESULTING FROM LEAKING FUEL.
INSPECT SYSTEM FOR LEAKS AT
LEAST ONCE A YEAR.

⚠ WARNING
ROTATING PROPELLER MAY CAUSE
SERIOUS INJURY OR DEATH.
SHUT OFF ENGINE WHEN
NEAR PERSONS IN THE WATER.



SPORTSMAN

Electrical & Plumbing Systems



GARMIN GPSMAP® 8622 MFD 22"


Navigate, take control, and enjoy an unprecedented level of built-in functionality with the Garmin GPSMAP 8622. The large-format multifunction display features a 22-inch full HD screen with touch control. Sunlight-readable, anti-glare display is exceptionally easy to view and also includes auto-dimming feature for use in low light or at night. BlueChart g3 charts for the coastal U.S., Canada and Bahamas are included. In addition to the basic charts, tidal stations, currents, depth contours, IALA symbols and included fishing charts, BlueChart g3 offers smooth transitioning between zoom levels and more seamless continuity across chart boundaries.



SPORTSMAN

Electrical & Plumbing Systems

Garmin 22Package

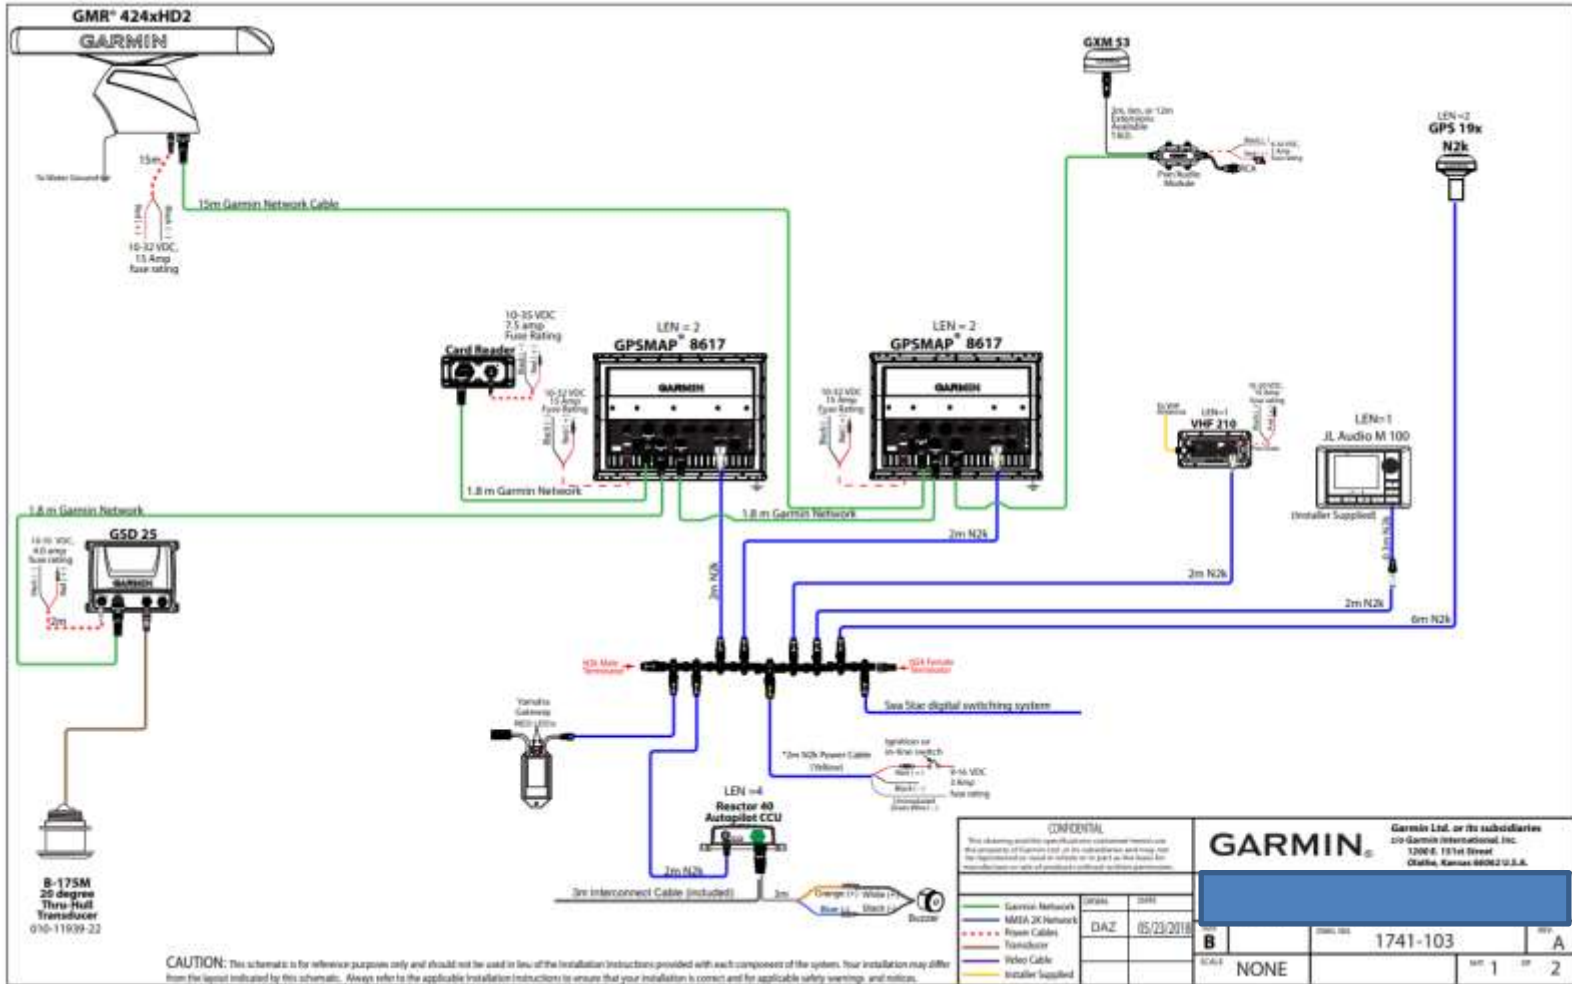

SPORTSMAN

Electrical & Plumbing Systems



Digital Switching

SeaStar Maximus DCM Digital Switching System

Redefining Convenience & Innovation

The SeaStar Maximus DCM Digital Switching System eliminates the need to have physical switches on the dash. This not only cleans up the dash of switches, but it adds longevity to the electrical system of your boat. This is the way of the future and here at Sportsman Boats, we are leading the pack in innovation.

The system communicates through NMEA2000 to your Garmin MFD to add a screen that shows all of your 12v switches, doing away with the need to have physical toggle switches on the dash. You are able to customize the look and feel of the switches as well as create presets and modes with your favorite combination of lights. This type of flexibility is just not possible without digital switching.

To wrap it all up, it also includes a fob that allows you to operate the 8 most used functions on your boat from up to 100 feet away from your Sportsman Boat. This remote can even turn all power on or off on the vessel, redefining convenience and innovation.





Sportsman Custom Key Fob 8-Button Multi-Function Sportsman Remote



Hard-Top Lights

Operates the blue lights overhead on the Hard-Top.

Spreader Lights

Operates the bright white LED lights located at the front and back of the top.

Courtesy Lights

Operates the blue ambient lighting located throughout the cockpit.

Underwater Lights

Operates the blue underwater lights.

Freshwater Pump

Operates the freshwater pump.

Raw Water Pump

Operates the raw water pump.

Power Button

Operates all of the power to the boat. This button is very similar to the main battery switch, it will interrupt all power to the boat.

Navigation Lights

Operates the red and green navigation lights built into the rubrail at the bow.


Electrical & Plumbing Systems



Maximus DCM

The Brain Powering The Digital Switching

At the heart of the system is the Maximus DCM. The module is mounted inside the console behind your electronics and provides a single source of power and fuses for all 12v accessories on the boat. One of the key features of the unit is the ease of being able to bypass the system and physically turn on any of the ports. The unit ships with all of the fuses in the normal position. Any of the fuses can be moved to the bypass position (as shown in the diagram) to override the system.

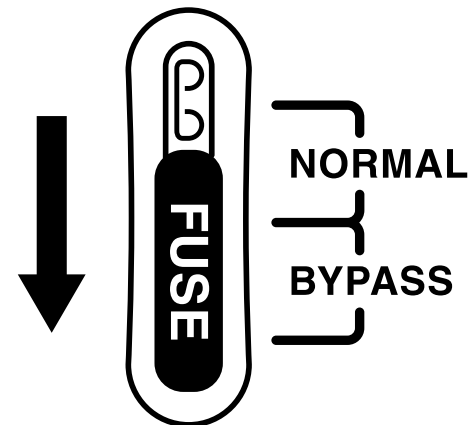

SPORTSMAN

Electrical & Plumbing Systems

Yamaha Digital Electric Steering



INCLUDED AS A STANDARD FEATURE ON THIS MODEL

Yamaha's DES (Digital Electric Steering) is the electronically controlled steering system with two different forms; Bolt-on and Built-in. Unlike aftermarket steering system, it is digitally connected from the helm to the engine, requiring no external pumps or steering fluid. It offers stable and assured steering and also steering setting can be changed depending on various boating situation. This system is commonly known as "Level 2" under Yamaha's Helm Master EX System.



SPORTSMAN

Electrical & Plumbing Systems

Electric Actuated Bow Table



The Open 352 comes standard with an electric actuated table/sun deck at the bow. This table can be lowered into a notch in the deck to be used as a standing platform, but it can also be used as a sun deck or table by raising it with the push of a button. Raised halfway, the table aligns with the seats on each side so that you may put a cushion over it to extend the bow seating area. Raised all the way, as seen in the image here, it can be used as a table. The control for the table is located on the starboard side of the bow aft of the adjustable backrest below the cup holder, as shown in the figure.



Control Switch



SPORTSMAN

Electrical & Plumbing Systems

Lights

The *NAV/ANC Switch* is a 3-position switch on the console that controls the running lights.

- **NAV** position will turn on the red and green navigation lights and the white all-round light for night driving.
- **ANC** turns on the all-round light only for night anchoring. Do not operate the boat in anchor position.
- Off is in the center position.

Sidelights: The Open 352 has navigational lights installed on the T-Top (see figure to the right). A green light is located on the starboard (right) side and a red light on the port (left) side of the vessel. Each shows an unbroken light over an arc of the horizon of 112.5 degrees and is fixed to show from ahead to just behind the beams of the vessel on its respective side.

All-round/Anchor Light: This is a white light placed over the highest unobstructed point of the vessel, showing an unbroken light over an arc of the horizon of 360°. See the figure to the right for location.

Recreational boats are required to display navigation lights between sunset and sunrise and other periods of reduced visibility (fog, rain, haze, etc.) Navigation lights are intended to keep other vessels informed of your presence and course. Your boat is equipped with the navigation lights required by the U.S. Coast Guard at the time of manufacture. It is up to you to make sure they are visible, operational and turned on.

The sidelights on the Open 352 are located on the front end of the T-Top. The location of the lights are shown here without a visible T-Top.

T-Top Sidelights

The anchor light on the Open 352 is located on the aft end of the T-Top. The location of the light is shown here without a visible T-Top.

Anchor Light



Electrical & Plumbing Systems

Stereo

Your boat is equipped with a Fusion RA670 source unit and 12 standard JL Audio M6 white grille speakers. 6 are in the T-Top, 6 more speakers located around the cockpit. A remote controller in the bow area. Also comes with JL AUDIO MVI AMPS.



Speakers



SPORTSMAN

Electrical & Plumbing Systems


Stereo Diagram



JL AUDIO
MARINE



SPORTSMAN
2022 Open 352 Center Console
AUDIO SYSTEM WIRING DIAGRAM
Page 1 of 3

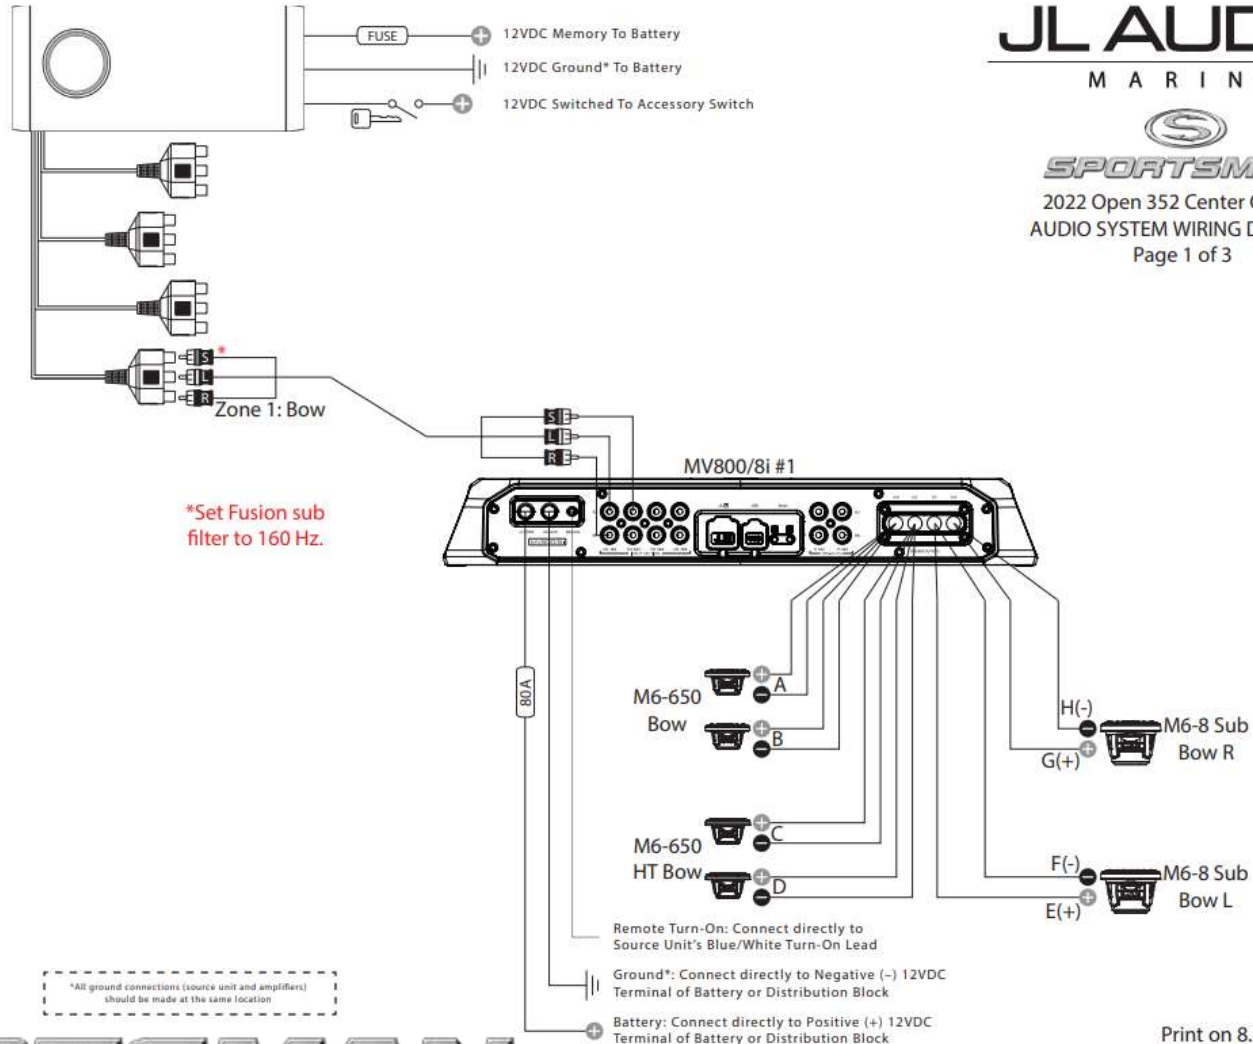


SPORTSMAN

Print on 8.5" x 11" paper.

Electrical & Plumbing Systems

Stereo Diagram

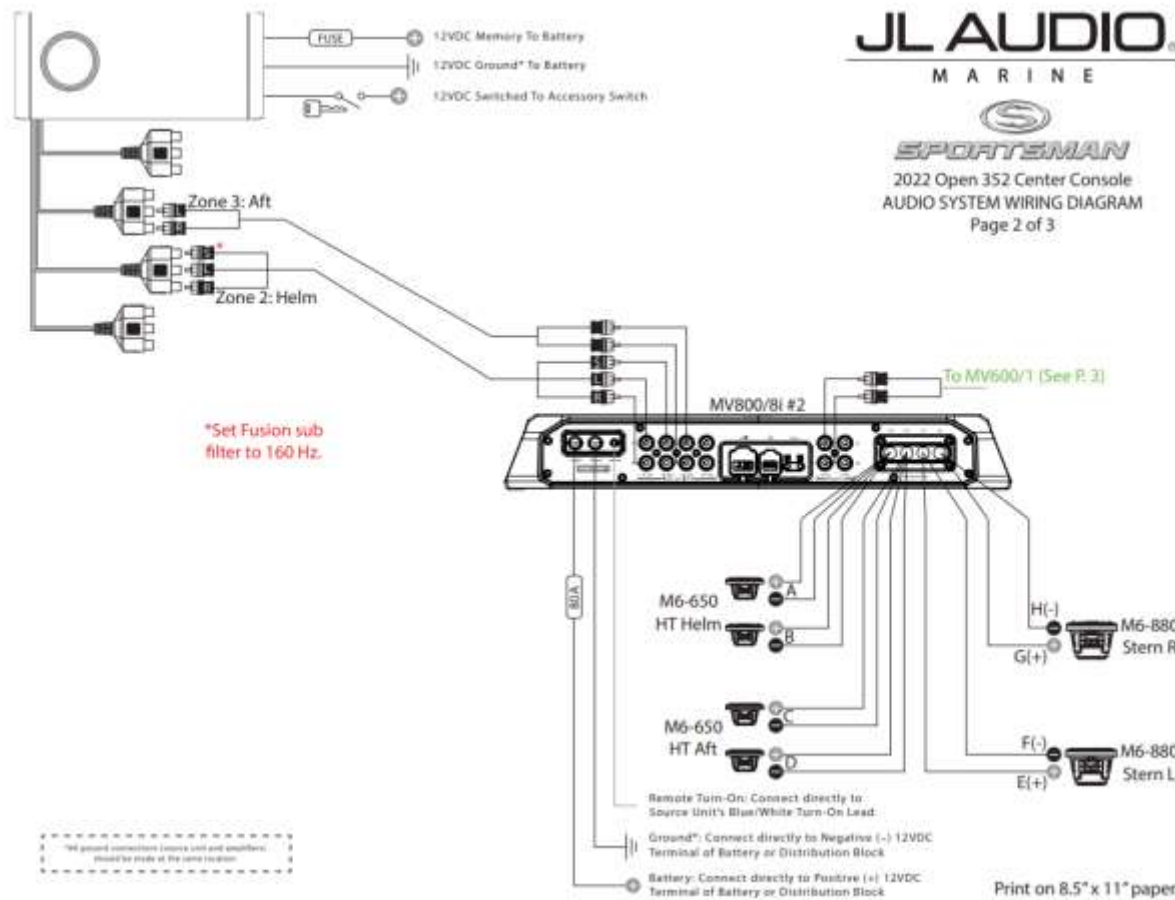

SPORTSMAN

Electrical & Plumbing Systems

Stereo Diagram




JL AUDIO.
MARINE



SPORTSMAN

2022 Open 352 Center Console
AUDIO SYSTEM WIRING DIAGRAM
Page 3 of 3

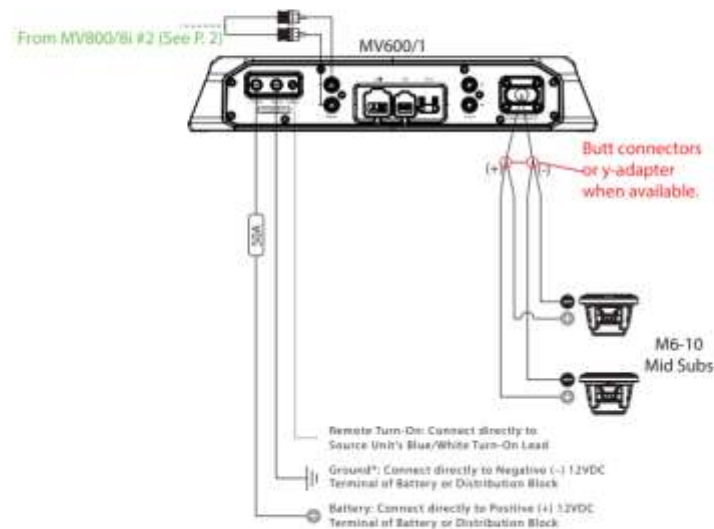

*All ground connections should be well equipped and made as close to the unit as possible.

Print on 8.5" x 11" paper.

SPORTSMAN

Electrical & Plumbing Systems

Stereo 8 Channel DSP Amps



The NexD2™ full-range technology in this amplifier is DSP-controlled and features a reduced loop area design utilizing DirectFET™ outputs for outstanding fidelity, very low noise and exceptional efficiency. The amplifier chassis is ultra-compact, with all connections on one side, to greatly simplify installation into tight spaces.

Instead of traditional control knobs and switches, all amplifier adjustments and DSP functionality are configured via a compatible external device (PC, Tablet or Smartphone), with the appropriate JL Audio TüN™ Software application installed.

SPORTSMAN

Electrical & Plumbing Systems



Trim Tabs

Your Open 352 has trim tabs installed as a standard feature. They are attached to the bottom edge of the transom, as shown in the image below. When the trim tabs control at the helm (pictured to the right) is pressed, the trim tabs automatically move into position. The force of passing water on these tabs results in upward pressure at the transom, which will lower the bow. This helps to improve the performance of the boat in a wide range of weight, weather, and water conditions. The LEDs on the control panel indicate the position of the tabs. If all are lit up, that tab is all the way down. The port and starboard tabs may be operated independently if necessary. To lower the starboard bow, lower the port tab. To lower the port bow, lower the starboard tab.

Control Panel



Trim Tab



Electrical & Plumbing Systems

Trim Tabs



***If you keep your boat in a wet slip/marina environment.
Here is a list of different anodes recommended for various water
types to prolong the life and shine of your stainless-steel tab. Never
use a wire brush to clean your tab***

Zinc Alloy Anodes = Salt water only

Not recommended for use in fresh water
Alloy is manufactured to meet or exceed US Military Specification
(MIL-A-18001K)

Aluminum Alloy Anodes = Salt or Brackish water

Not recommended for use in fresh water
Proven to last longer than zinc due to increased capacity
Alloy is manufactured to meet or exceed US Military Specification
(MIL-A-24779(SH))

Magnesium Alloy Anodes = Fresh water only

Not recommended for use in salt or brackish water



Trim Tab

SPORTSMAN


Electrical & Plumbing Systems

Bilge Pumps

Two small bilge pumps are located on the hull bottom at the stern of your boat. Water is pumped out of thru-hull fittings located on the port and starboard sides of the boat near the transom. The pumps may be accessed by removing the aft seat and door, in the area shown to the right. You may turn your bilge pumps on manually by flipping on a bilge switch located on the dash at the helm. Additionally, the bilge pump utilizes a float as an automated switch to turn it on automatically if necessary when the boat is unattended. The bilge pumps are designed to remove excess water **only**, and they are **not** intended to stop or prevent rapid accumulation of on-board water due to rough weather, hull damage, or any other unsafe navigational conditions.



The rear seat easily detaches to allow easy access to the bilge area at the stern.

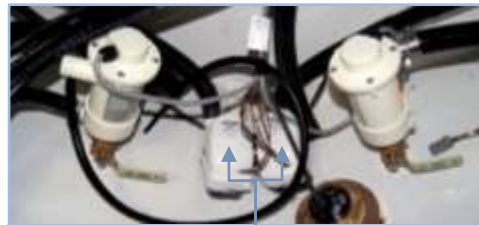

Bilge Pumps

Drain Outlets




SPORTSMAN



Electrical & Plumbing Systems

Fish Boxes

The Sportsman 352 Open features 2 fish boxes with macerators. The two fish boxes are located on each side of the leaning post; their macerators are inside the bilge area mounted to the side of the stringer. To operate the macerators, flip on the switch on the screen labeled "FISH/MACER." This will empty the fish box with a dual-cut blade design, which allows for thoroughly ground waste. The macerator will not process hard objects, such as bones and rags. The maximum flow rate is approximately 13 gallons per minute. The macerators discharge via a thru hull fitting on the port side mid-ship of the hull.

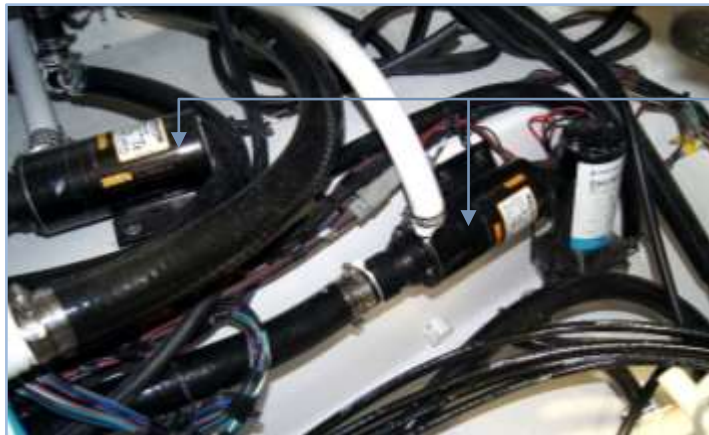

Macerators

Fish Box



SPORTSMAN

Electrical & Plumbing Systems



Livewells

The Sportsman Open 352 comes with two 30-gallon aquarium live wells: to both sides of the fold-out seat at the stern of the boat. For easy access to the pumps and plumbing systems, open the total access hatch forward of the transom. The livewell pumps are located on either side the bilge pumps in the hull of the boat, and the livewell fill hoses are connected to the top of the pumps. To operate the livewells, open the pump valve in the bilge, turn on the livewell switch at the helm, and turn the fill valve in the livewell to "open." The switches labeled "Livewell 1" and "Livewell 2" each fill their respective livewells. Both livewells are equipped with overflow drains so water cannot exceed a certain level and overflow. These overflow drains are connected to the main drain lines at 'T' joints, which empty out an outlet drain at the stern of the boat. Additionally, the livewells have LED lighting installed. To illuminate the livewell, turn on the switch at the helm.



*Pumps To
Fill Valves*




SPORTSMAN

Electrical & Plumbing Systems

Raw Water Wash-down



Your Open 352 has the raw water wash-down installed as a standard feature. Rinsing your boat immediately after use with a powerful water jet helps to maintain the boat's condition and value. This system supplies water via a hose connected to bottom of the same pump that supplies water to your livewells with a shut off valve in the bilge area at the total access hatch. To operate the wash-down system, start by opening the valve mentioned above. Then turn on the switch labeled "WASHDOWN" on the switch on the dash. The wash-down outlet is found on the starboard side of the boat under the gunwale. See the figures here for important feature locations for the raw water wash-down system.

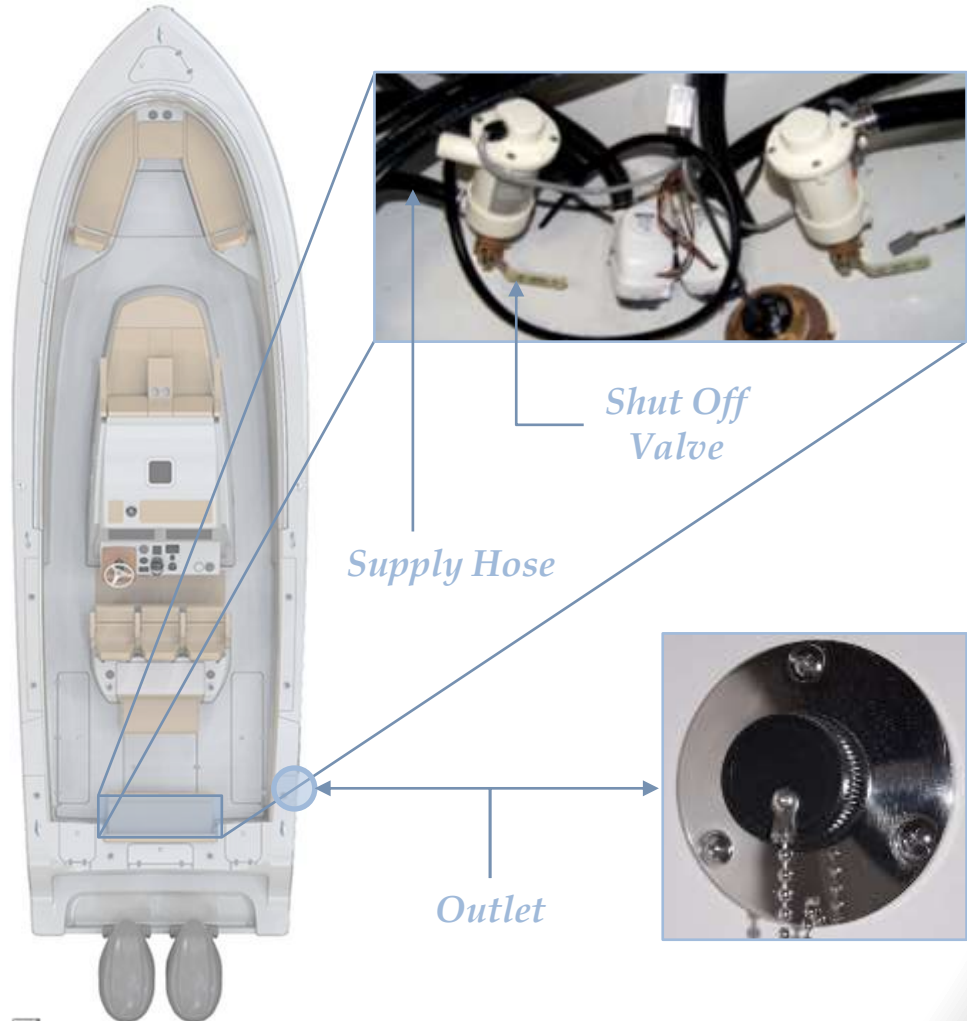

SPORTSMAN

Electrical & Plumbing Systems

Fresh Water Wash-down



Your Open 352 has the freshwater wash-down installed as a standard feature. The freshwater fill fitting is located on the forward under the actuated bow table on the starboard side. **Do not leave the tank full if you plan it to be left unattended for an extended period;** pump the tank dry to avoid stagnant water in the tank if necessary. It is also important to periodically inspect and clean the filter, which is located on the pump. To operate this system, turn on the switch labeled "Fresh Water" on the screen. This will pressurize the system for use. When the tank is empty or the boat is not in use, ensure that this switch is in the off position.



Fill



Outlet



SPORTSMAN

Electrical & Plumbing Systems



Porcelain Head with Overboard Discharge or Pump Out:

The Quiet-Flush Toilet provides a quiet operation, with user control of the flush. A single large push button switch provides a simple flush mode by activating both the rinse water supply and the macerator discharge pump simultaneously. An additional rocker switch offers independent control of the rinse water supply and discharge pump separately so the bowl water level can be raised and lowered by the user. The rinse water is supplied from the 35 gallon water tank in the starboard stern of the boat. Your waste tank can be emptied two ways.

Removal from the waste deck fill located under the actuated bow table at a shoreside pump-out facility.



Or flip the handle under the sink to the open position. Turn on the OVBD Discharge switch at your helm to activates your macerator. Your waste will exit the boat at a through hull fitting on the starboard side mid-ship of the hull.



SPORTSMAN




Overboard Discharge

*At all times, the shut off valve must be positively secured in a way that presents a physical barrier to valve use and prevents all discharges. Adequate means include the use of padlock, non-releasable wire-tie, or removal of the valve handle. Federal law **prohibits the discharge of untreated sewage from vessels within navigable waters of the United States**, which include territorial seas within three miles of shore and most bays and estuaries. **Check with your local authorities or Coast Guard for any rules which apply to the area where you do your boating.***



Windlass System

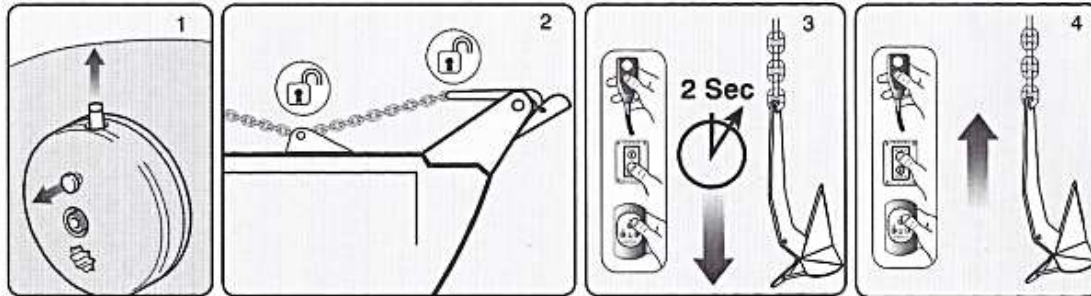

To release anchor:

1. Check unit is not in manual mode and plunger is disengaged/up position.
2. Release any anchor locks.
3. Engage the circuit breaker/isolator.

When releasing the anchor, press DOWN button for 2 seconds until the anchor is under freefall. If the clutch was left in a locked position the anchor will move almost immediately, if unlocked it could take several seconds to fully re-engage the internal clutch.

NOTE: Pressing the DOWN button for over 5 seconds will result in a longer clutch re-engagement time during the next UP command).

If using a rope/chain rode, motor astern to create the desired scope. Once scope has been created press the UP button continuously until freefall stops. It normally takes several seconds to fully re-engage the internal clutch mechanism, locking the windlass.

NOTE: Failure to lock the windlass clutch could result in rope/chain creeping out.

To retrieve anchor:

4. Press the UP button continuously to retrieve the anchor.




SPORTSMAN

Fuel System

Fuel Tank

The Sportsman Open 352 comes with an aluminum fuel tank installed (330 approximate usable gallon capacity). The gasoline fuel system consists of a fuel tank (located underneath the helm seat as shown in the figure), anti-siphon valve, engine fuel supply line, and 2 fill caps. Your boat contains a new EPA certified fuel system. The system prevents spit-back when filling the tanks and lowers the out-gassing emissions through a vent in the new designed fuel fill cap.

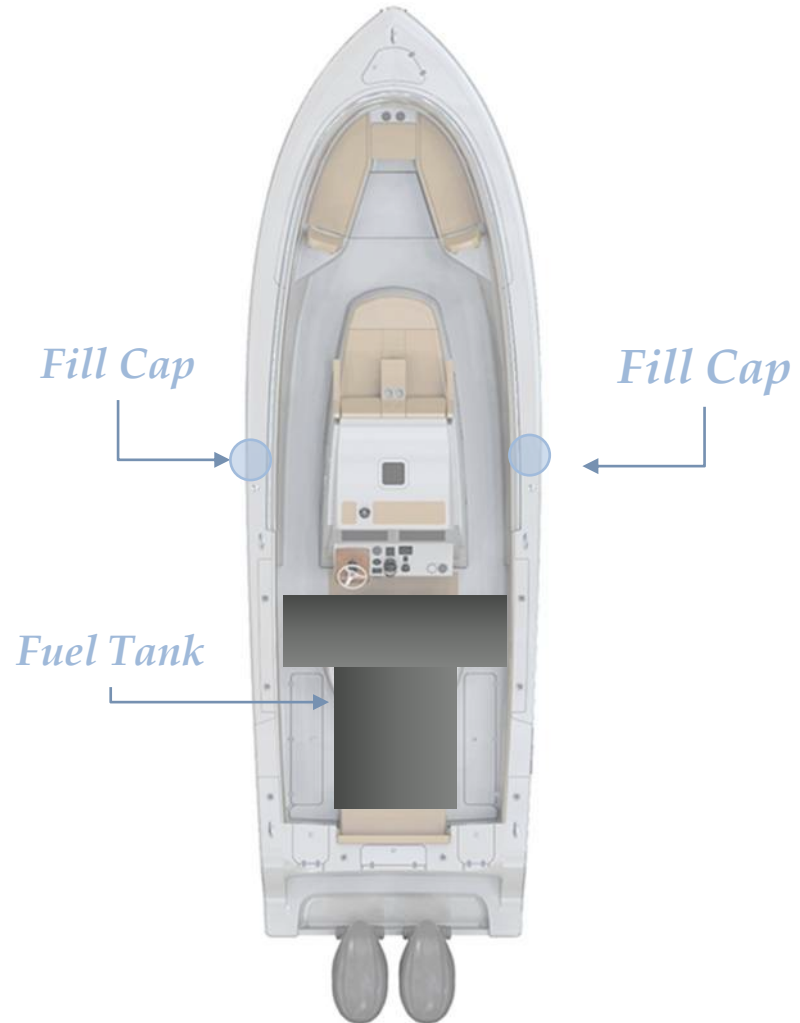

SPORTSMAN

Fuel System

Diurnal Fuel System



BluSkies

EPA DIURNAL FUEL SYSTEMS

NOTE: Pressure may be present when opening your deck fill, regardless of system type.



Only open the fuel cap for refueling

Note: The first time fuel is introduced to a fuel tank, be aware of the interaction of cold raw fuel vapors replacing air, on occasion a vapor pressure can occur producing spit-back anomalies!

What is a diurnal fuel system?

Your new vessel is equipped with an Environmental Protection Agency (EPA) compliant diurnal fuel system, designed to reduce fuel emissions to atmosphere using criteria mandated by the EPA. Your vessels fuel tank is required and designed to have a positive pressure (>1PSI) as the sun heats the boat and the fuel in the tank expands or it may be equipped with a carbon canister to catch and contain fuel vapors

Your boats fuel tank also has valves installed inside that are designed to:

1. Produce a clean refueling shut off event
2. Create a 5% vapor space
3. Reduce the propensity of a refueling spit-back event.
4. Allow for appropriate venting when the vessel is stored or trailered. Your fuel cap also contains valves designed to retain fuel vapor (up to 1PSIG) and to allow make up air during engine operation

SPORTSMAN

Fuel System

Diurnal Fuel System (cont'd)




Vapor Space (Ullage) And Refueling Management

Another fuel system necessity to remain EPA compliant it is to keep elevated temperature gasoline from expanding into fuel system areas that are not low permeation rated or otherwise sensitive to raw fuel. A vapor (or ullage) space must be produced at the completion of the filling or refueling operation to ensure systems remain EPA compliant during the diurnal temperature cycle. To effectively manage this system function, BluSkies has created a series of valves that can mount to any marine fuel tank to achieve the appropriate fill level while maintaining ullage space of ~5%. Additionally these valves eliminate the propensity for refueling "spit-back" or tank "well-back", which is another requirement of the EPA regulation. BluSkies primary ullage valves replace the existing fill and vent locations, while additional grade or tip level valves can be added to any tank to meet American Boat And Yacht Council standards (H-24) which allows vapor venting for boats slanting or sloping when stored, moored, parked or trailered.

The final decision on which system type and ullage valve type and placement that is best for your application should be based on application specific factors such as type and configuration of fuel tank, how much room there on board is for added components, how are the boats likely to be used and stored etc. and of course cost.

Choose individual components to create a compliant system from the following pages or you can turn to our specialists for sound guidance and direction as you go through the process to choosing the appropriate system for your particular vessel application.

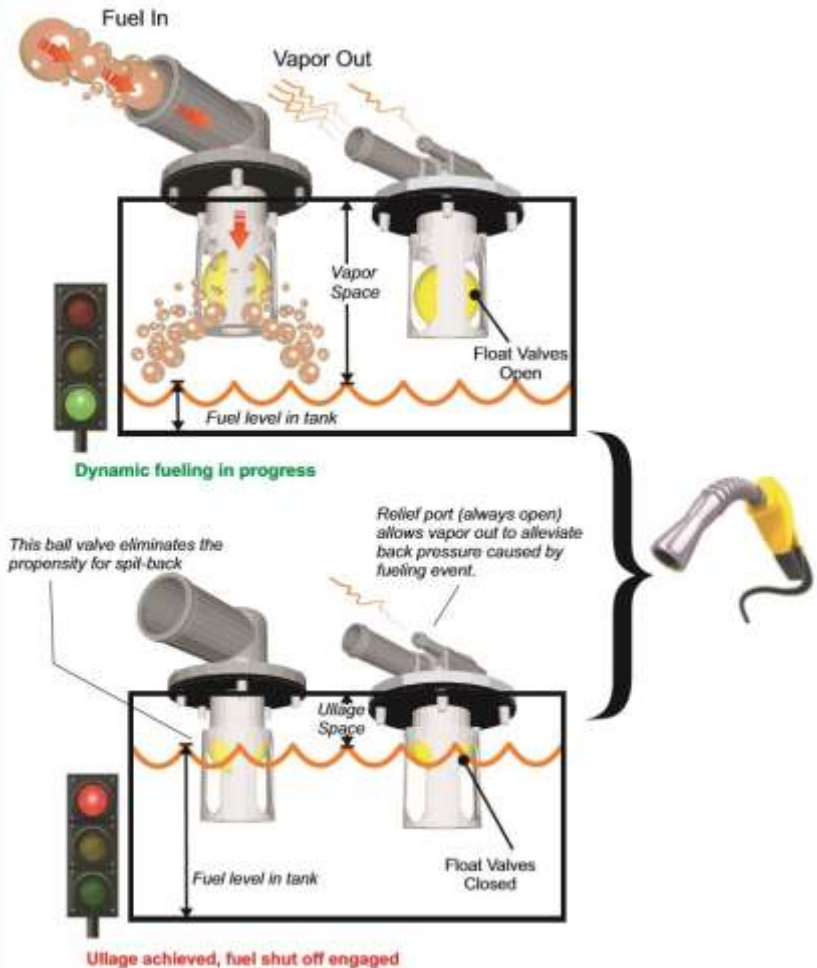

SPORTSMAN

Fuel System


Tank Vapor Space & Fluid Management



Ullage (Vapor Space) Level Attainment Spit-back/Well-back Control

This vent valve shuts off the refueling vapors and creates back pressure to lift the fill valve ball into place.

This fill valve ball is set lower than the vent valve ball but does not close until the refueling vapors are shut off by the vent valve.

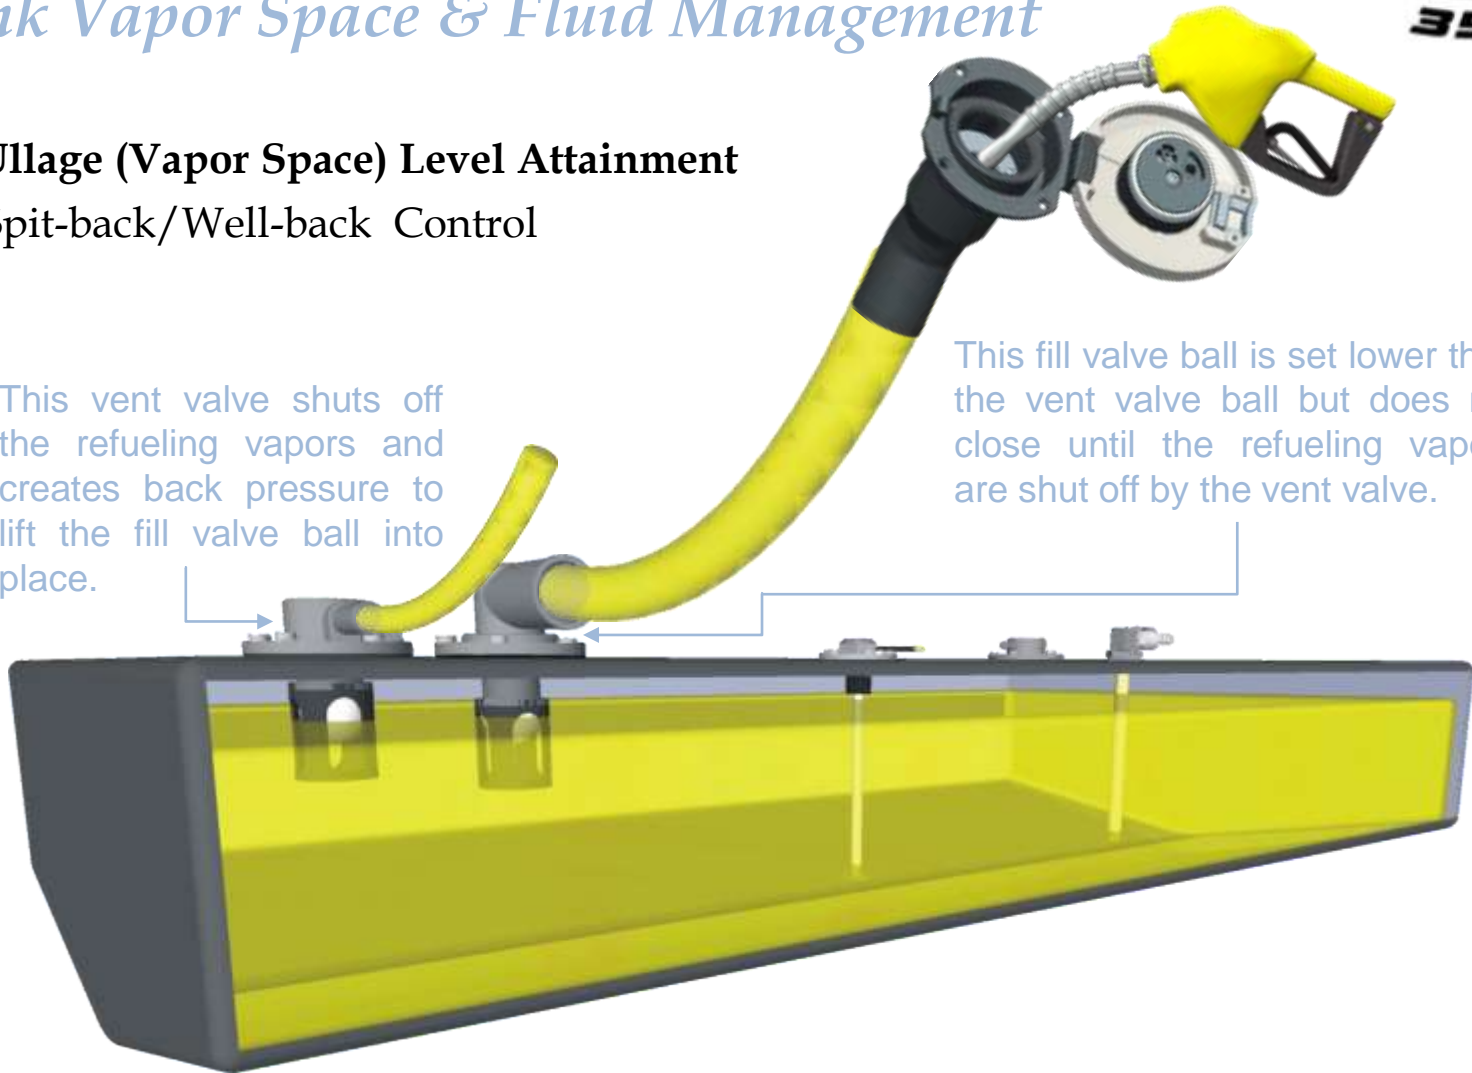


SPORTSMAN

Sea Keeper 3 Option



This Optinal system eliminates up to 95% of boat roll and the danger, fatigue, anxiety, and seasickness that go with it. Our boat is designed to accept the Seakeeper and has a special pod where it is installed for a true OEM installation.

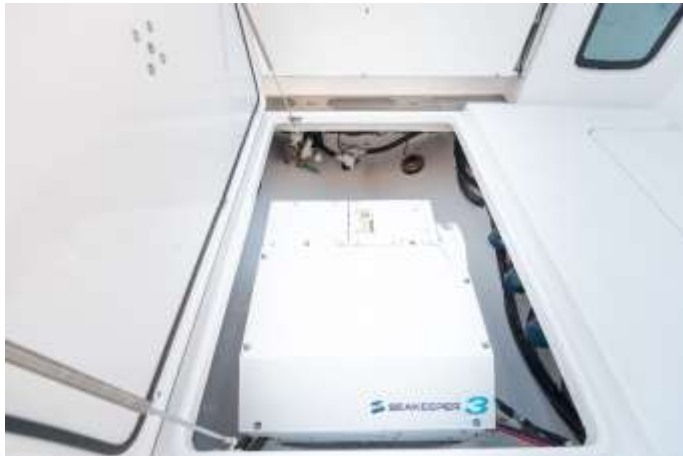

MAINTENANCE MAKES THE MAGIC HAPPEN

All equipment needs a little regular care to keep it working in tip-top shape - even the magical kind like Seakeeper! Here's what we recommend keeping up with:

| Brake System | Task | Running Hours | Period |
|---|-----------------|----------------|----------|
| Hydraulic Oil Flush | Change | 1000 | Annually |
| Brake Bushings | Inspect | 1000 | Annually |
| Brake Bushings | Replace | 2000/As Needed | --- |
| Seakeeper 1 Mechanical/Safety Latch Assembly | Inspect | 1000 | Annually |
| Seakeeper 1 Mechanical/Safety Latch Assembly | Replace | 2000 | Annually |
| Hydraulic Cylinders & Hoses | Inspect | 1000 | Annually |
| Hydraulic Accumulators | Inspect/Replace | 1000/2000 | Annually |
| Cooling System | | | |
| Zinc Anode *N/A for Seakeeper 1, 2, 3 | Inspect/Replace | 150 | 3 Months |
| Heat Exchanger | Inspect/Replace | 1000/2000 | Annually |
| Coolant Level - Glycol | Inspect/Fill | 1000 | Annually |
| Clean/Descale Heat Exchanger | Inspect/Clean | 1000 | Annually |
| Cooling Hose | Inspect | 1000 | Annually |
| Cooling System Flush - Glycol | Inspect/Replace | 1000 | Annually |
| Electronics System | | | |
| Inspection of all electrical connections, cables, and components | Inspect | --- | Annually |
| Mechanical & Foundational System | | | |
| Inspect all mounting hardware/bolts | Inspect | 1000 | Annually |
| Inspect isolation bushings, pins, and clips | Inspect | 1000 | Annually |
| Clevis assemblies (4), hardware, isolation bushings, pins & clips | Inspect/Replace | 1000 | --- |

Perform the Recommended Maintenance after the indicated number of Running (RUN) hours or MONTHS / YEARS since last maintenance, whichever occurs first. Seakeepers are designed for use in a marine environment and to withstand occasional water spray or splash. Prolonged exposure to seawater however can cause premature wear and damage to the unit, therefore it is important to apply a gentle fresh water rinse following exposure to seawater.

Recommended Maintenance should be performed by a certified Seakeeper Dealer or Seakeeper factory technician. Find a local Dealer at www.seakeeper.com/find-us

SPORTSMAN

Fuel System

Diurnal Fuel System: Refueling




Your fuel tank capacity will vary from the label or published capacity no less than 5% by law and up to 10% dependent upon the variation from static float due to equipment, occupants and gear etc. (Static Float = attitude in which your boat floats in calm water)


Fill your vessel fuel tank as normal, stop refueling after two (shut off) clicks of the fuel nozzle.

Topping off will over ride your fuel system design intent and could cause damage to your vessel due to overflow and will void any and all warranty claims related to fuel spillage.

BluSkies is expressly not responsible for any damage to your vessel subsequent to topping off.

 **WARNING** CONTENTS CAN BE UNDER PRESSURE
AVOID SERIOUS INJURY OR DEATH FROM
FIRE OR EXPLOSION
OPEN SLOWLY IN WELL VENTILATED AREA
NO SMOKING OR OPEN FLAMES

It has been a common practice for many years to top off boats prior to storage or in preparation for a day on the water, however diurnal fuel systems are designed specifically to leave a space in your fuel tank to allow the fuel to expand during the heat of the day. GASOLINE EXPANDS 5%.

 **REFUELING**

GASOLINE CONTENTS UNDER PRESSURE. FUEL SPRAY MAY OCCUR.


1. OPEN CAP SLOWLY
2. INSERT FUEL NOZZLE
3. BEGIN & CONTINUE FUELING UNTIL FUEL NOZZLE KICKS OFF
4. WAIT 10 SECONDS & CONTINUE FUELING UNTIL NOZZLE KICKS OFF A SECOND TIME
5. RETURN NOZZLE TO PUMP
6. DO NOT TOP OFF

Boating Navigation Rules




There are three main situations that you may encounter with other vessels which could lead to a collision unless the Steering Rules are followed:

- Meeting**: you are approaching another vessel head-on
- Crossing**: you are travelling across the path of another vessel
- Overtaking**: you are passing or being passed by another vessel

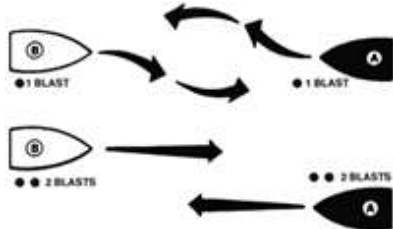


When Meeting Port-to-port: Continue on course. The same holds true for meeting starboard-to-starboard.

When Meeting Head On: As in a car, both stay to your right and as far apart as practical. Each boat should turn to starboard and pass port-to-port.

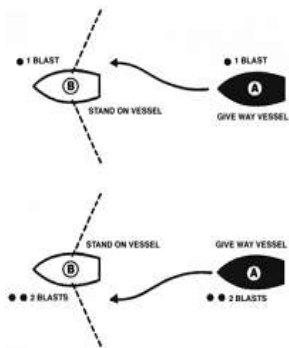

When Crossing: Every boat has a "Danger Zone" from straight in front (the bow) to past the middle of its right side. Like when meeting another car at a street intersection, the one on the right has the right of way. You must yield to boats in your Danger Zone. If you are the skipper of the Vessel A in the center of the diagram, you must keep out of the way of any boat that approaches you from any direction within the indicated Danger Zone, as you are the burdened craft. Likewise, boats approaching you from all other directions, except the meeting vessel, must keep clear of you.

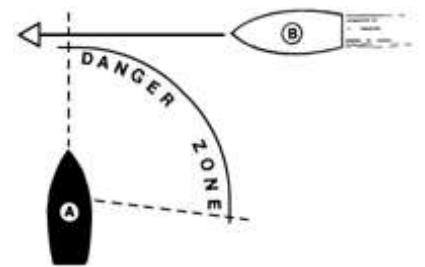

When Overtaking Another Boat: The boat being overtaken is the privileged vessel. Only after signaling and receiving an acknowledgment can the overtaking boat pass. (Use one blast to pass on the right, and two blasts to pass on the left.)

When Being Overtaken: Be ready for trouble when a power boat passes you in a narrow waterway. As the lead boat, which always has the right of way, stay on your side of the channel and maintain a steady speed so that the overtaking vessel can pass you safely. Use your radio to discuss this with the passing boat.

Warranty and Services



Product Changes

Sportsman is committed the development of our product line. As a result, equipment described in this manual may have changed or no longer may be available. All information, illustrations and specifications contained in this manual reflect the latest product information available at the time of publication. Sportsman reserves the right to make changes to its boats at any time, without notice. These changes include, but are not limited to: color options, materials, standard and optional equipment, specifications and model availability. If you have any questions about the equipment on your boat, please feel free to contact Sportsman.

Insurance

In most states, the boat owner is legally responsible for damages or injuries they or anyone else operating the boat causes. Some states have laws that require having at least minimum coverage. Before using your boat for the first time, you should contact your dealer, current insurance company, or state boating authority for information regarding insurance requirements in your area. Although it may not be required in your area, responsible boat owners carry liability and property damage for their boat. You should also protect the boat against physical damage and theft.

Service

All warranty work must be performed by an authorized Sportsman Dealer. If a problem is discovered upon taking delivery of, or develops during routine use of the boat that is related to faulty workmanship and/or materials, as stated in the warranty, you need to contact your Sportsman dealer to arrange for your boat to be repaired. **The boat owner is responsible for delivering the boat to the dealer for warranty service.** If you are not near your dealer or any other authorized Sportsman dealer, please contact Sportsman. Likewise, if the dealer fails to repair the problem, please notify Sportsman within 14 days of the work being completed. **Sportsman will not reimburse owners for unauthorized warranty work.**

Warranty and Services



Warranty Information

THERE IS NO IMPLIED WARRANTY FOR THIS PRODUCT. EXCEPT AS PROVIDED SPECIFICALLY HEREIN, THIS LIMITED WARRANTY IS IN LIEU OF, AND SPORTSMAN BOATS MANUFACTURING, INC. EXPRESSLY DISCLAIMS, ANY AND ALL OTHER WARRANTIES, EXPRESS, IMPLIED, OR STATUTORY, WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES UNDER THE UNIFORM COMMERCIAL CODE, ANY IMPLIED WARRANTY OF MERCHANTABILITY, AND ANY IMPLIED WARRANTY FOR FITNESS FOR A PARTICULAR PURPOSE. SPORTSMAN BOATS MANUFACTURING, INC. MAKES NO OTHER EXPRESS WARRANTIES EXCEPT AS SET FORTH IN THIS LIMITED WARRANTY.

THIS LIMITED WARRANTY ALSO LIMITS AND ALTERS YOUR REMEDIES. THIS LIMITED WARRANTY SHALL BE THE SOLE AND EXCLUSIVE REMEDY OF ANY PERSON OR ENTITY FOR ANY CLAIM, WHETHER THAT CLAIM SOUNDS IN CONTRACT, TORT, OR IN ANY OTHER BASIS FOR RECOVERY. SPORTSMAN BOATS MANUFACTURING, INC. SHALL NOT BE LIABLE TO ANY PERSON OR ENTITY FOR ANY CONSEQUENTIAL, SPECIAL, OR INCIDENTAL DAMAGES, LOST PROFITS, INCONVENIENCE, OR ANY OTHER LOSS OR DAMAGE, EXCEPT AS PROVIDED IN THIS LIMITED WARRANTY.

SPORTSMAN BOATS LIMITED WARRANTY

Sportsman Boats Manufacturing, Inc. ("Sportsman") is pleased to provide to all owners of a Sportsman Boat (each a "Sportsman Boat") this Limited Warranty if the Sportsman Boat was purchased directly from any of the Sportsman authorized dealers and was operated under normal conditions, subject to all of the conditions and limitations provided herein.

Ten-Year Hull Limited Warranty. This Limited Warranty applies to any Structural Hull Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within ten (10) years from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the Hull. For purposes of this Limited Warranty, the term "Hull" shall mean the single fiberglass molded shell and integral structural components of a Sportsman Boat, and the term "Structural Hull Defect" shall mean a substantial defect in the Sportsman Boat's Hull that causes the boat to be unfit or unsafe for general use as a pleasure craft under normal operating conditions.

One-Year Nonstructural Limited Warranty. This Limited Warranty applies to any Nonstructural Defect (as that term is defined below) if such is due to a failure in material or workmanship and the same was reported to Sportsman according to the terms of this Limited Warranty within one (1) year from the date of the sale to the original purchaser of the Sportsman Boat by a Sportsman authorized dealer. Sportsman, in its sole discretion, will either repair or replace the defective component. For purposes of this Limited Warranty, the term "Nonstructural Defect" shall mean a substantial defect in a Sportsman Boat's components manufactured or installed by Sportsman (other than the Hull) that is not excluded in the Exclusions below.

Registration and Transfer of Limited Warranty. Each original purchaser of a Sportsman Boat shall complete and return the boat registration card provided by Sportsman within thirty (30) days of such owner's purchase of the boat in order to facilitate the processing of warranty claims and for manufacturer notification. Except where a Sportsman Boat has been salvaged and resold, or resold after a declaration of a total loss or a constructive total loss, the Ten-Year Hull Limited Warranty is transferable to a single subsequent owner (i.e., the second owner) of the Sportsman Boat, PROVIDED SUCH SUBSEQUENT OWNER COMPLETES AND SUBMITS TO SPORTSMAN WITHIN THIRTY (30) DAYS OF ACQUIRING THE SPORTSMAN BOAT A SPORTSMAN WARRANTY TRANSFER FORM (AVAILABLE FROM SPORTSMAN ON REQUEST) WITH (A) A LEGIBLE COPY OF THE BILL OF SALE, TITLE, OR REGISTRATION TO DEMONSTRATE OWNERSHIP OF THE BOAT AND (B) A CHECK OR MONEY ORDER PAYABLE TO SPORTSMAN FOR THE TRANSFER FEE IN EFFECT AT THE TIME OF THE TRANSFER.

SPORTSMAN

Warranty and Services



SPORTSMAN BOATS LIMITED WARRANTY (cont'd)

EXCLUSIONS:

This limited Warranty does not apply to any boat that has been salvaged or declared a total loss or constructive total loss for any reason not specifically covered in this Limited Warranty. In addition, this Limited Warranty does not apply to the following "Exclusions:"

- 1) A Hull, component, or other product that has been repaired without authorization of Sportsman or that has been altered in any way that affects its use and operation;
- 2) Expenses related to inspection or warranty service for hauling out, transportation to and from any dealer or Sportsman factory, towing or storage charges, inconvenience or loss of time or income;
- 3) Engines, outdrives, controls, propellers, engine brackets, stereos, depth finder, GPS units, trolling motors, batteries, outriggers bases' and other equipment or accessories that are not manufactured by Sportsman, whether the same is or is not warranted by such other manufacturer;
- 4) Blistering, discoloring, cracking, or crazing of the Gelcoat finish or other surface finishes
- 5) Any Sportsman Boat initially sold at retail by a party other than an authorized Sportsman dealer;
- 6) Damage to, breakage of, or leakage around any windshields, hatches, or apertures;
- 7) Any canvas, zippers, vinyl, upholstery, plastic, or fabric components;
- 8) Discoloration, oxidation, bleeding, or corrosion of any stainless steel or other metal products
- 9) Any Hull, component, or product that has been subject to unreasonable use, tampering, abuse, mishandling, improper maintenance, negligence, improper trailing, alterations, or accidents;
- 10) Any boat, or component or part thereof, that has been used for Commercial Purpose, racing purposes, or has otherwise been operated contrary to any printed instruction provided by Sportsman or contrary to any applicable law (for purposes of this Limited Warranty, the term "*Commercial Purposes*" shall mean the usage of any boat more than fifty percent (50%) for revenue-producing or other business purposes);
- 11) A boat, or component or part thereof, that has been overpowered according to the maximum recommended engine horsepower specified on the capacity plate attached to the boat;
- 12) Machinery, equipment and accessories not installed by Sportsman;
- 13) Condensation of gauges;
- 14) The failure of any part, area, or component of the boat to be dry, whether or not the same was represented as "dry";
- 15) Any representation relating to the speed or weight of any part or component of the boat;
- 16) Normal wear and tear maintenance items, including, but not limited to, filters bulbs, batteries, bungees, anchor rope, trailer finishes, tires, brakes, bearing, and lights;
- 17) Any defect or repair requiring redesign of the boat, except pursuant to the recall provisions of the United States Federal Boat Safety Act of 1971 or the recall laws of the recall laws of any other foreign jurisdiction;
- 18) Dealer preparation, cleaning, and final adjustments and alignments in preparing the boat for delivery or commissioning; or
- 19) Any act of God or force majeure.

SPORTSMAN

Thank you for your purchase of your Sportsman Boat.

Sportsman Boats Manufacturing, Inc.
113 Sportsman Way · Summerville, South Carolina 29483
Telephone (843) 376-2628 · Fax (843) 376-2636

Email

sales@sportsmanboatsmfg.com

Website

www.sportsmanboatsmfg.com



SPORTSMAN